


Operation Guide

ECOSYS M3860idnf ECOSYS M3860idn

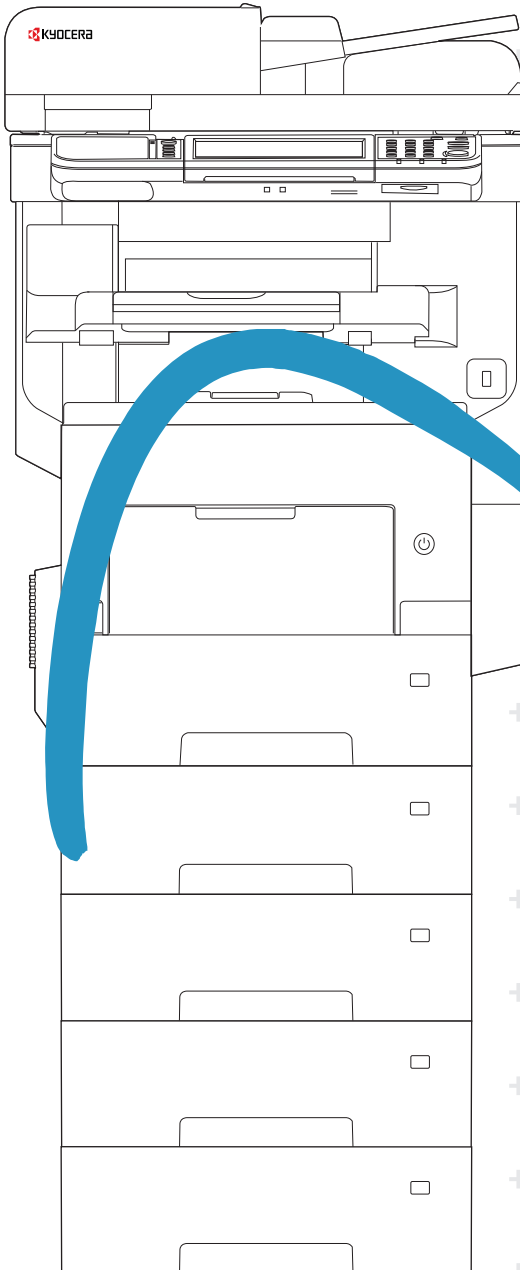

Preface

Thank you for purchasing this machine.

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance, and take simple troubleshooting measures as needed so that the machine can always be used in the optimum condition.


Please read this Operation Guide before using the machine.

To maintain quality, we recommend using genuine Kyocera toner containers, which must pass numerous quality inspections.

The use of non-genuine toner containers may cause failure.


We will not be liable for any damages caused by the use of third party supplies in this machine.

A label is affixed to our replacement genuine toner containers, as shown below.

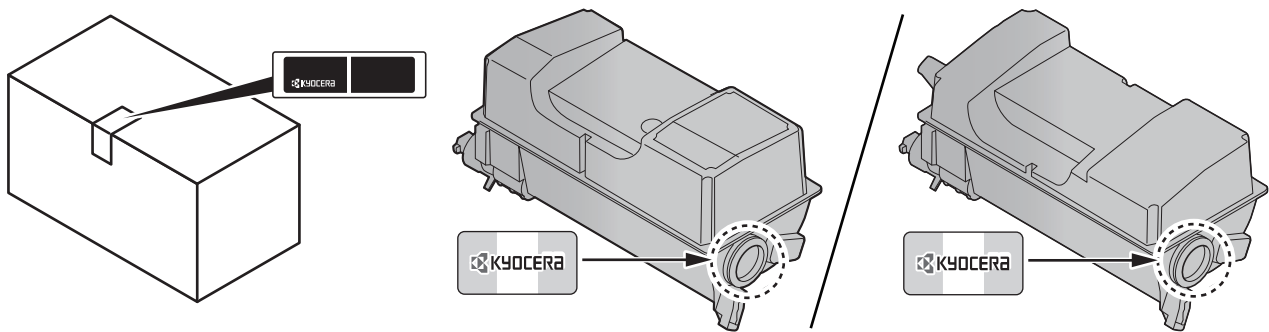

Checking the Equipment's Serial Number

The equipment's serial number is printed in the location shown in the figure.

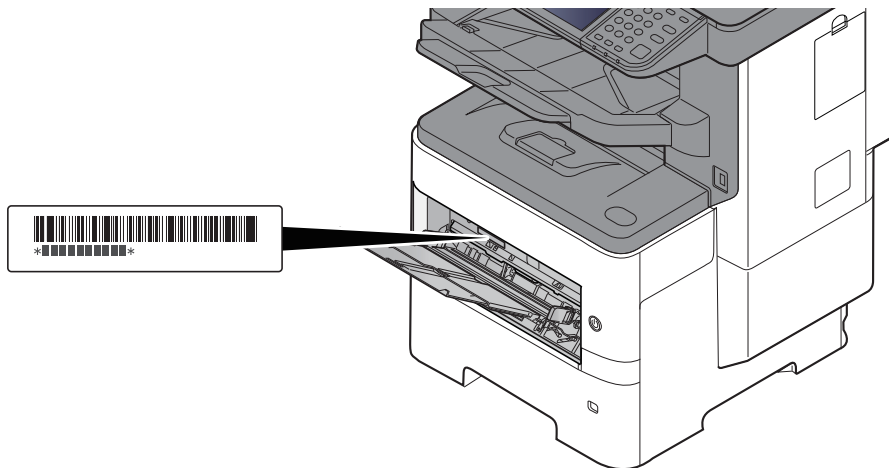

You'll need the equipment's serial number when contacting your Service Representative. Please check the number before contacting your Service Representative.

Contents

Preface	i
Contents	ii
Overview	ix
Machine Features	x
Color and Image Quality Functions	xiv
Basic Color Modes	xiv
Adjusting Image Quality and Color	xv
Guides Provided with the Machine	xvi
About the Operation Guide (this Guide)	xviii
Structure of the guide	xviii
Conventions Used in This Guide	xix
Menu Map	xxi

1 Legal and Safety Information 1-1

Notice	1-2
Safety Conventions in This Guide	1-2
Environment	1-3
Precautions for Use	1-4
Laser Safety (Europe)	1-5
SAFETY OF LASER BEAM (USA)	1-6
Safety Instructions Regarding the Disconnection of Power	1-7
Compliance and Conformity	1-7
Other precautions (for users in California, the United States)	1-7
Warranty (the United States and Canada)	1-8
Legal Restriction on Copying/Scanning	1-9
EN ISO 7779	1-9
EK1-ITB 2000	1-9
Wireless Connection (Mexico only)	1-9
Security Precautions when Using Wireless LAN (If equipped)	1-9
Limited Use of This Product (If equipped)	1-10
Legal Information	1-11
Energy Saving Control Function	1-17
Automatic 2-Sided Print Function	1-17
Resource Saving - Paper	1-17
Environmental benefits of "Power Management"	1-17
Energy Star (ENERGY STAR®) Program	1-18

2 Installing and Setting up the Machine 2-1

Part Names	2-2
Machine Exterior	2-2
Connectors/Interior	2-6
With Optional Equipments Attached	2-10
Connecting the Machine and Other Devices	2-12
Connecting Cables	2-13
Connecting LAN Cable	2-13
Connecting USB Cable	2-14
Connecting the Power Cable	2-14
Power On/Off	2-15
Power On	2-15
Power Off	2-15
Using the Operation Panel	2-16
Operation Panel Keys	2-16
Adjusting the Operation Panel Angle	2-17
Touch Panel	2-18
Home Screen	2-18
Display for Device Information	2-22

Functions key	2-23
Display of Keys That Cannot Be Set	2-24
Enter key and Quick No. Search key	2-25
Help Screen	2-26
Login/Logout	2-27
Login	2-27
Logout	2-28
Default Settings of the Machine	2-29
Setting Date and Time	2-29
Network Setup	2-30
Configuring the Wired Network	2-30
Configuring the Wireless Network	2-32
Setting Wi-Fi Direct	2-36
Energy Saver function	2-38
Low Power Mode	2-38
Sleep and Auto Sleep	2-38
Power Off Rule (models for Europe)	2-39
Quick Setup Wizard	2-40
Installing Software	2-42
Software on DVD (Windows)	2-42
Installing Software in Windows	2-43
Uninstalling the Software	2-49
Installing Software in Mac Computer	2-50
Setting TWAIN Driver	2-52
Setting WIA Driver	2-54
Checking the Counter	2-55
Additional Preparations for the Administrator	2-56
Sending Documents to a PC	2-56
Strengthening the Security	2-56
Command Center RX	2-58
Accessing Command Center RX	2-59
Changing Security Settings	2-60
Changing Device Information	2-62
E-mail Settings	2-64
Registering Destinations	2-68
Creating a New Custom Box	2-69
Printing a document stored in a Custom Box	2-70
Transferring Data from Our Other Products	2-72
Migrating the Address Book	2-72

3 Preparation before Use 3-1

Loading Paper	3-2
Precaution for Loading Paper	3-3
Loading in the Cassettes	3-4
Loading Statement in the Cassettes (For inch models)	3-8
Loading Paper in the Multi Purpose Tray	3-11
Specifying Paper Size and Media Type	3-15
Paper Stopper	3-17
Preparation for Sending a Document to a Shared Folder in a PC	3-18
Making a Note of the Computer Name and Full Computer Name	3-18
Making a Note of the User Name and Domain Name	3-19
Creating a Shared Folder, Making a Note of a Shared Folder	3-20
Configuring Windows Firewall	3-24
Turn off password-protected sharing (Windows 10 only)	3-28
Scan to Folder Setup Tool for SMB	3-30
Registering Destinations in the Address Book	3-34
Adding a Destination (Address Book)	3-34
Adding a Destination on One Touch Key (One Touch Key)	3-39

4	Printing from PC	4-1
	Printing from PC	4-2
	Printing on Non-standard Sized Paper	4-4
	Banner printing	4-5
	Printer Driver Print Settings Screen	4-9
	Printer Driver Help	4-10
	Changing the Default Printer Driver Settings (Windows 8.1)	4-10
	Canceling Printing from a Computer	4-10
	Printing by AirPrint	4-11
	Printing by Google Cloud Print	4-11
	Printing by Mopria	4-11
	Printing with Wi-Fi Direct	4-11
	Printing Data Saved on the Printer	4-12
	Specifying the Job Box from a Computer and Storing the Job	4-12
	Printing Documents from Private Print Box	4-13
	Printing Document from Stored Job Box	4-15
	Printing Document from Quick Copy Box	4-17
	Printing Document from Proof and Hold Box	4-19
	Status Monitor	4-21
	Accessing the Status Monitor	4-21
	Exiting the Status Monitor	4-21
	Status Monitor Display	4-21
5	Operation on the Machine	5-1
	Loading Originals	5-2
	Placing Originals on the Platen	5-2
	Loading Originals in the Document Processor	5-3
	Favorites	5-6
	Registering Favorite	5-7
	Recalling Favorite	5-9
	Editing and Deleting Favorite	5-10
	Application	5-11
	Installing Applications	5-11
	Using Applications	5-12
	Uninstalling Applications	5-13
	Registering Shortcuts	5-14
	Adding Shortcuts	5-14
	Editing and Deleting Shortcuts	5-15
	Copying	5-16
	Basic Operation	5-16
	Canceling Jobs	5-17
	Sending	5-18
	Basic Operation	5-19
	Specifying Destination	5-20
	Checking and Editing Destinations	5-25
	Confirmation Screen of Destinations	5-26
	Recall	5-27
	Send to Me (E-mail)	5-27
	Sending to Different Types of Destinations (Multi Sending)	5-28
	Canceling Sending Jobs	5-29
	WSD Scan	5-30
	Installing the Driver	5-30
	Scanning using TWAIN or WIA	5-32
	Scanning with File Management Utility	5-33
	Using fax server to send a fax (fax server transmission)	5-34
	Configuring Settings before Sending	5-34
	Using fax server to send a fax	5-34

How to use the FAX Function	5-36
What is Document Box?	5-37
Basic Operation for Document Box	5-38
Box List Operations	5-38
Document List Operations	5-38
Using a Custom Box	5-39
Creating a New Custom Box	5-39
Editing and Deleting Custom Box	5-41
Saving Scanned Documents to a Custom Box	5-42
Moving Documents in Custom Box	5-43
Copying Documents in Custom Box into Other Boxes	5-43
Copying Documents in Custom Box to USB Drive	5-44
Joining Documents in Custom Box	5-45
Deleting Documents in Custom Box	5-46
Printing Documents in Custom Box	5-46
Sending Documents in a Custom Box	5-47
Sending Documents in Custom Box to E-mail Address of Logged in user.	5-48
Scanning Document Stored in a Custom Box	5-49
Printing Documents Stored in USB Drive	5-50
Saving Documents to USB Drive (Scan to USB)	5-52
Check the USB Drive Information	5-53
Removing USB Drive	5-54
Using the Manual Stapler (ECOSYS M3860idn only)	5-55

6 Using Various Functions 6-1

Functions Available on the Machine	6-2
Copy	6-2
Send	6-4
Custom Box (Store File, Printing Documents, Sending Documents)	6-6
USB Drive (Store File, Printing Documents)	6-8
Functions	6-10
ID Card Copy	6-10
Original Size	6-10
Paper Selection	6-11
Original Orientation	6-12
Mixed Size Originals	6-13
Collate/Offset	6-13
Paper Output	6-14
Staple	6-14
Density	6-15
Original Image	6-16
EcoPrint	6-17
Color Selection	6-17
Sharpness	6-18
Contrast	6-18
Background Density Adj. (Background Density Adjustment)	6-19
Prevent Bleed-through	6-19
Zoom	6-20
Combine	6-22
Duplex	6-24
Continuous Scan	6-26
Job Finish Notice	6-26
File Name Entry	6-27
Priority Override	6-27
Quiet Mode	6-27
Skip Blank Page	6-28
Duplex (2-sided Original)	6-29
Sending Size	6-30


	File Format	6-31
	File Separation	6-35
	Scan Resolution, Resolution	6-35
	E-mail Subject/Body	6-35
	Long Original	6-36
	FTP Encrypted TX	6-36
	Delete after Printed	6-36
	Delete after Transmitted	6-36
	Storing Size	6-37
	Encrypted PDF Password	6-37
	JPEG/TIFF Print	6-38
	XPS Fit to Page	6-38
7	Status/Job Cancel	7-1
	Checking Job Status	7-2
	Details of the Status Screens	7-3
	Checking Detailed Information of Jobs	7-7
	Checking Job History	7-8
	Checking the Detailed Information of Histories	7-9
	Sending the Log History	7-9
	Job Operation	7-10
	Pause and Resumption of Jobs	7-10
	Canceling of Jobs	7-10
	Device/Communication	7-11
	Checking the Remaining Amount of Toner and Paper (Paper/Supplies)	7-13
8	Setup and Registration (System Menu)	8-1
	System Menu	8-2
	Operation Method	8-2
	System Menu Settings	8-3
	Language	8-5
	Report	8-5
	User Property	8-7
	Cassette/MP Tray Settings	8-8
	Common Settings	8-10
	Home	8-21
	Copy	8-21
	Send	8-22
	Document Box	8-23
	FAX	8-23
	Application	8-23
	Internet	8-24
	Address Book/One Touch	8-24
	User Login/Job Accounting	8-25
	Printer	8-25
	System/Network	8-28
	Date/Timer/Energy Saver	8-49
	Adjustment/Maintenance	8-52
9	User Authentication and Accounting (User Login, Job Accounting)	9-1
	Overview of User Login Administration	9-2
	Enabling User Login Administration	9-3
	Setting User Login Administration	9-4
	Authentication Security	9-4
	Adding a User (Local User List)	9-6
	Changing User Properties	9-9
	User Login Administration for Printing	9-13

	To Manage the Users to Scan Using TWAIN	9-15
	To Manage the Users to Scan Using WIA	9-16
	To Manage the Users that Send Faxes from a PC	9-17
	Local Authorization	9-18
	Group Authorization Settings	9-19
	Guest Authorization Set.	9-22
	Obtain NW User Property	9-25
	Simple Login Settings	9-27
	ID Card Settings	9-30
	PIN Code Authorization	9-31
	Using User Login Administration	9-32
	Login/Logout	9-32
	Overview of Job Accounting	9-33
	Enabling Job Accounting	9-34
	Job Accounting Access	9-35
	Setting an Account	9-36
	Adding an Account	9-36
	Restricting the Use of the Machine	9-37
	Editing an Account	9-38
	Deleting an Account	9-39
	Job Accounting for Printing	9-40
	Job Accounting for Scan Using TWAIN	9-41
	Job Accounting for Scan Using WIA	9-42
	Job Accounting for the FAX Transmitted from a Computer	9-43
	Configuring Job Accounting	9-44
	Default Setting	9-44
	Counting the Number of Pages Printed	9-45
	Print Accounting Report	9-46
	Using Job Accounting	9-47
	Login/Logout	9-47
	Unknown User Settings	9-48
	Unknown ID Job	9-48
	Registering Information for a User whose ID is Unknown	9-49
10	Troubleshooting	10-1
	Regular Maintenance	10-2
	Cleaning	10-2
	Toner Container Replacement	10-6
	Waste Toner Box Replacement	10-10
	Replacing Staples	10-12
	Troubleshooting	10-14
	Solving Malfunctions	10-14
	Responding to Messages	10-19
	Adjustment/Maintenance	10-30
	Clearing Paper Jams	10-31
	Clearing a Staple Jam	10-39
11	Appendix	11-1
	Optional Equipment	11-2
	Overview of Optional Equipment	11-2
	Optional Applications	11-8
	Character Entry Method	11-10
	Entry Screens	11-10
	Entering Characters	11-12
	Paper	11-13
	Basic Paper Specifications	11-13
	Choosing the Appropriate Paper	11-14
	Special Paper	11-17

Specifications	11-21
Machine	11-21
Copy Functions	11-23
Printer Functions	11-24
Scanner Functions	11-25
Document Processor	11-25
Paper Feeder (500-sheet) (Option)	11-26
Manual Stapler (ECOSYS M3860idn only)	11-26
Glossary	11-27
Index	Index-1

Overview

This machine is equipped standard with copy and print functions, and a scanned image can be sent to an E-mail recipient as an attachment or to a computer on the same network.

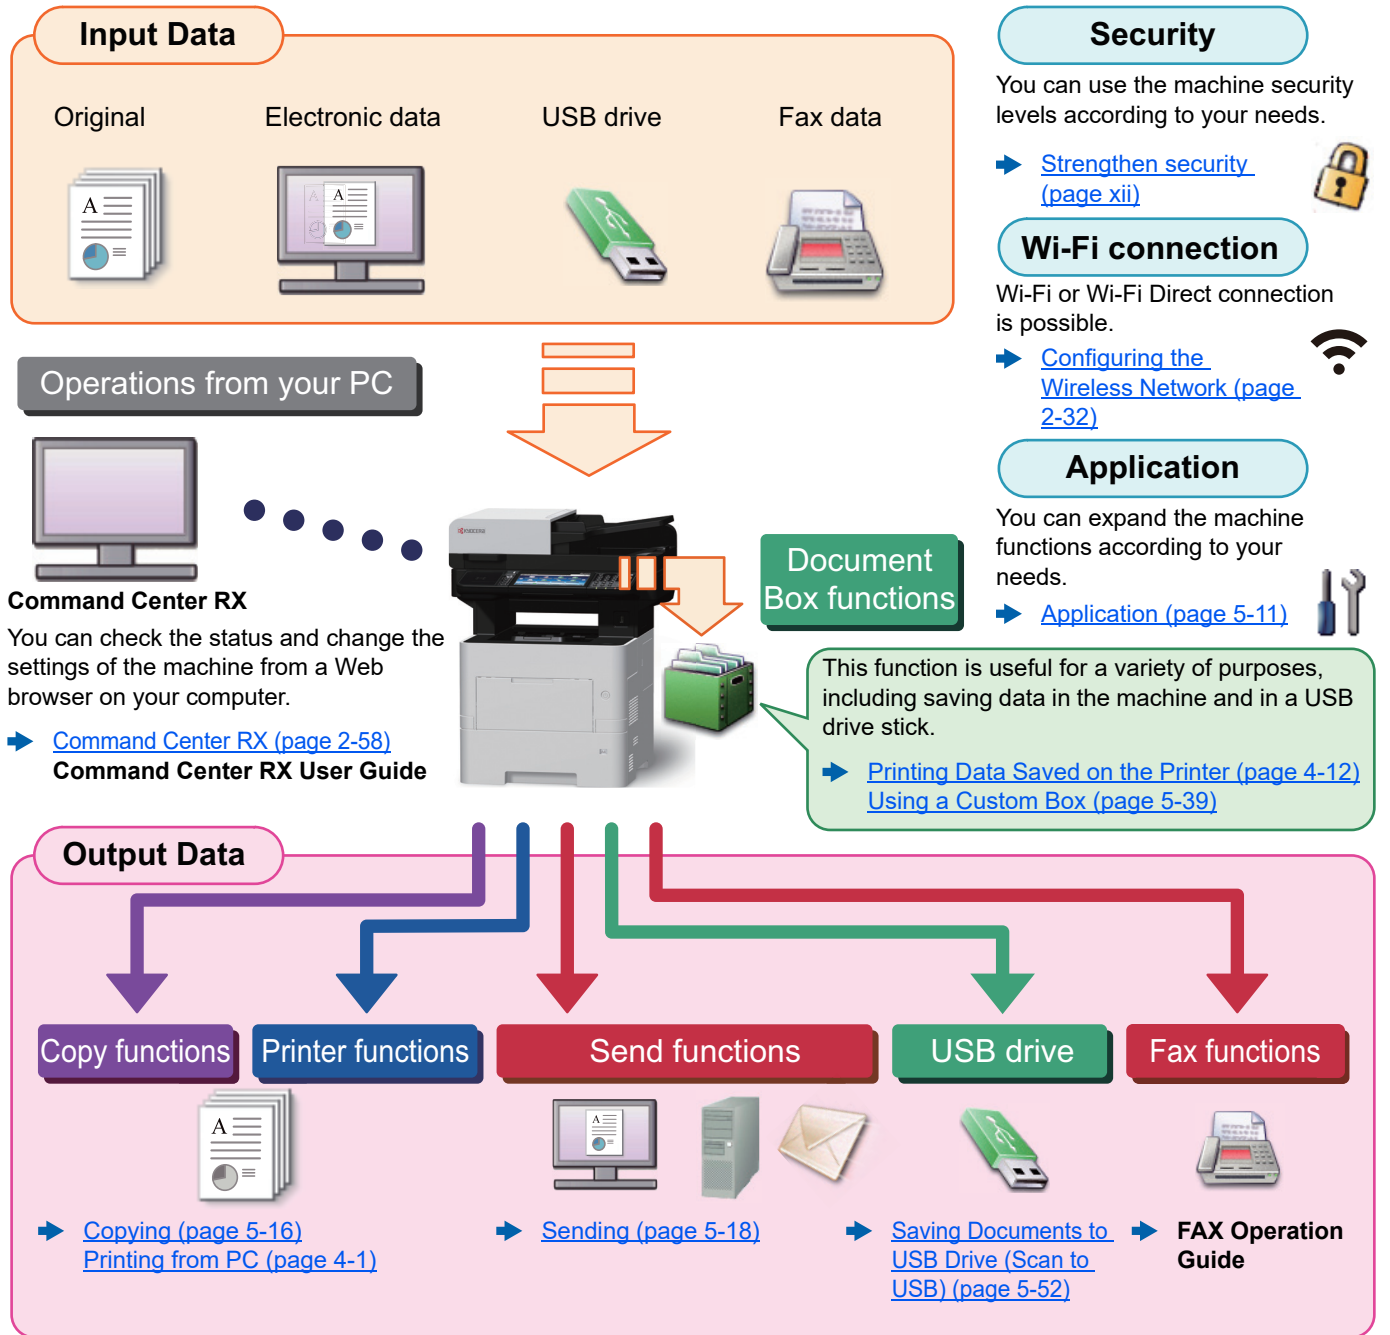

NOTE




- Before using the machine, be sure to read the following:
 - ➔ [Legal and Safety Information \(page 1-1\)](#)
- For preparations for use of the machine such as cable connections and software installation, refer to the following:
 - ➔ [Installing and Setting up the Machine \(page 2-1\)](#)
- To learn how to load paper, set up shared folders, and add addresses to the address book, refer to the following:
 - ➔ [Preparation before Use \(page 3-1\)](#)




Machine Features




The machine is equipped with many useful functions.




➔ [Using Various Functions \(page 6-1\)](#)




Here are some examples.

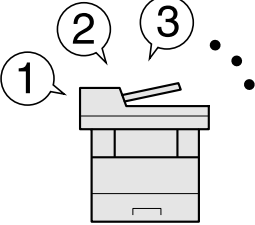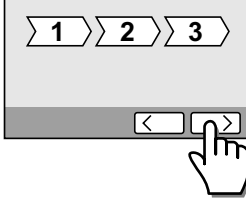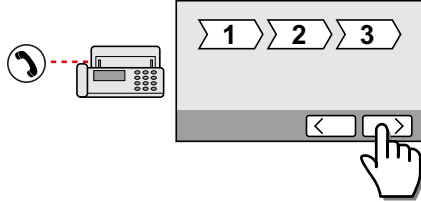
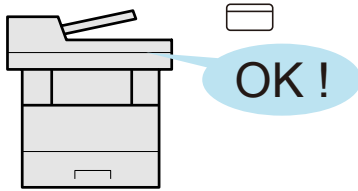
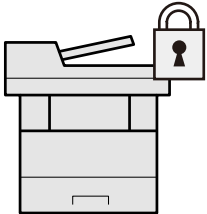
Optimize your office workflow		
<p>Access to frequently used functions with just one touch (Favorites)</p>  <p>You can preset frequently used functions. Once you register frequently used settings as favorite, you can call up the settings easily. Using this favorite brings the same results even if operated by another person.</p> <p>➔ Favorites (page 5-6)</p>	<p>Set up the machine easily (Quick Setup Wizard)</p>  <p>You can configure the necessary settings before using the machine in the wizard mode.</p> <p>➔ Quick Setup Wizard (page 2-40)</p>	<p>Set up fax easily (FAX Setup)</p>  <p>You can configure the necessary settings before using fax in the wizard mode.</p> <p>➔ FAX Setup (page 2-40)</p>

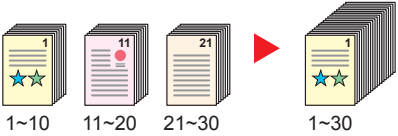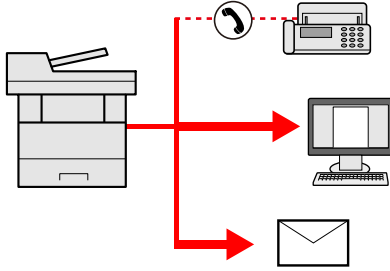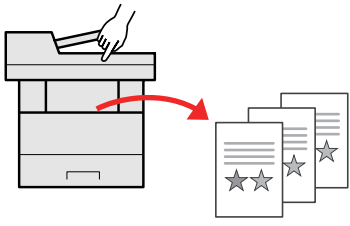Optimize your office workflow		
<p>Scan a large number of originals in separate batches and produce as one job (Continuous Scan)</p>  <p>It is useful when preparing many-page handouts. When a large number of originals cannot be placed in the document processor at one time, the originals can be scanned in separate batches and then copied or sent as one job.</p> <p>➔ Continuous Scan (page 6-26)</p>	<p>Send one time with multiple sending options (Multi Sending)</p>  <p>You can send a same document to the multiple destinations using a different method. You can specify multiple destinations of different send methods such as E-mail, SMB, and Fax. You can reduce your workflow by sending a job at once.</p> <p>➔ Sending to Different Types of Destinations (Multi Sending) (page 5-28)</p>	<p>Save frequently used documents in the machine (Custom Box)</p>  <p>You can save the frequently used document in the machine and print it when needed.</p> <p>➔ Using a Custom Box (page 5-39)</p>

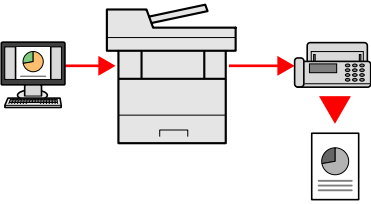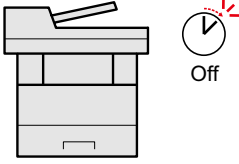Optimize your office workflow	Save energy and cost	
<p>Send a FAX from a PC (Sending FAX from PC)</p>  <p>You can save the paper used for sending a FAX with this function.</p> <p>You can send a file to be faxed from the PC without printing the file, so that you can reduce the number of pieces of paper and perform sending jobs efficiently.</p> <p>➔ FAX Operation Guide</p>	<p>Save energy as needed (Energy Saver function)</p>  <p>The machine is equipped with Energy Saver function that automatically switched into Sleep Mode.</p> <p>➔ Energy Saver function (page 2-38)</p>	<p>Use less toner for printing (EcoPrint)</p>  <p>You can save toner consumption with this function.</p> <p>When you only need to check the printed content, such as a trial print run or documents for internal confirmation, use this function to save toner.</p> <p>Use this function when a high-quality print is not required.</p> <p>➔ EcoPrint (page 6-17)</p>

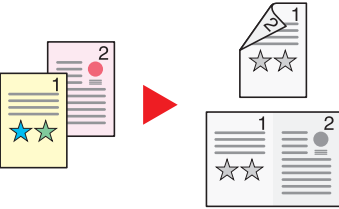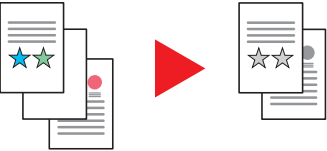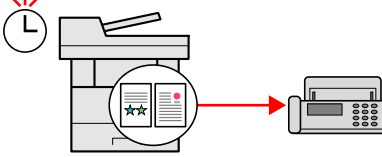
Save energy and cost		
<p>Reduce paper use (Paper Saving Printing)</p>  <p>You can print originals on both sides of the paper. You can also print multiple originals onto one sheet.</p> <p>➔ Favorites (page 5-6)</p>	<p>Skip blank pages when printing (Skip Blank Page)</p>  <p>When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.</p> <p>➔ Skip Blank Page (page 6-28)</p>	<p>Send a FAX to reduce the communication cost (FAX Delayed Transmission)</p>  <p>You can reduce the communication cost with this function.</p> <p>The communication cost can be reduced by setting the timer to the time period during which the communication cost is low.</p> <p>➔ FAX Operation Guide</p>

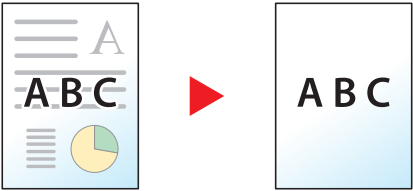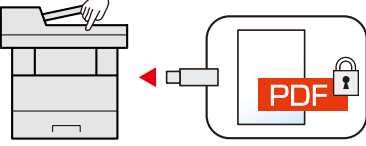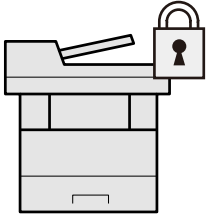Create attractive documents	Strengthen security	
<p>Prevent image bleed-through (Prevent Bleed-through)</p>  <p>You can prevent image bleed-through from the reverse side when scanning thin originals.</p> <p>➔ Prevent Bleed-through (page 6-19)</p>	<p>Password-protect a PDF file (PDF Encryption Functions)</p>  <p>Use the PDF format's password security options to restrict document viewing, printing and editing.</p> <p>➔ Encrypted PDF Password (page 6-37)</p>	<p>Protect data on the hard disk/SSD (Encryption / Overwrite)</p>  <p>You can overwrite the unnecessary data that remains on the hard disk/SSD automatically.</p> <p>To prevent an external leakage, the machine is able to encrypt data before writing it to the hard disk/SSD.</p> <p>➔ Data Security (page 8-45)</p>

Strengthen security		
<p>Prevent loss of finished documents (Private Print)</p>  <p>You can temporarily save a printer document in the machine. By printing the document from the machine prevents someone takes your document.</p> <p>➔ Printing Data Saved on the Printer (page 4-12)</p>	<p>Log in by ID card (Card Authentication)</p>  <p>You can log in simply by touching an ID card. You don't need to enter your user name and password.</p> <p>➔ Card Authentication Kit(B) "Card Authentication Kit" (page 11-4)</p>	<p>Strengthen security (Settings for Administrator)</p>  <p>Various functions are available for administrators to strengthen security.</p> <p>➔ Strengthening the Security (page 2-56)</p>

Use functions more efficiently


Make the machine quiet (Quiet Mode)

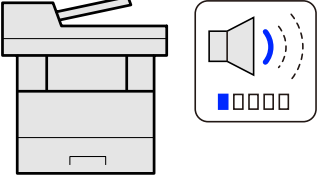

You can make the machine quiet by reducing its running noise. You can configure this mode by job.

➔ [Quiet Mode \(page 6-27\)](#)


Expand functions as necessary (Application)

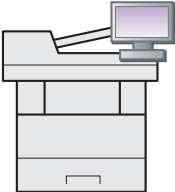

The functionality of the machine can be expanded by installing applications. Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

➔ [Application \(page 5-11\)](#)

Install the machine without concerning the network cables (Wireless Network)

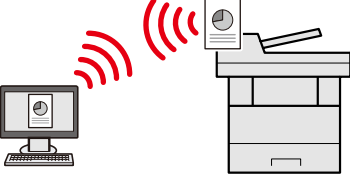


In an environment where the wireless LAN is used, you can install the machine without concerning the network cables. In addition, Wi-Fi Direct, etc. are supported.

➔ [Configuring the Wireless Network \(page 2-32\)](#)

➔ [Setting Wi-Fi Direct \(page 2-36\)](#)

Use functions more efficiently

Use USB drive (USB Drive)

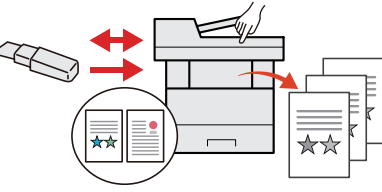


It is useful when you need to print document outside your office or you cannot print document from your PC. You can print the document from the USB drive by plugging it directly into the machine.

Original scanned at the machine can be saved in the USB drive also.

➔ [Printing Documents Stored in USB Drive \(page 5-50\)](#)

➔ [Saving Documents to USB Drive \(Scan to USB\) \(page 5-52\)](#)


Specify image file format (File Format)

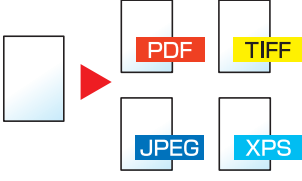

You can select the various file formats when sending/storing images.

➔ [File Format \(page 6-31\)](#)

Perform remote operation (Command Center RX)

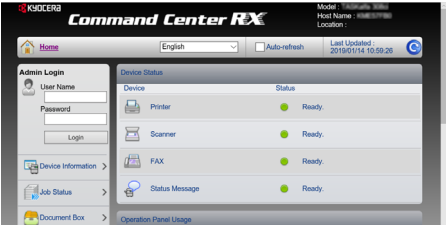

You can access to the machine remotely to print, send or download data. Administrators can configure the machine behavior or management settings.






➔ [Command Center RX \(page 2-58\)](#)

Color and Image Quality Functions

The machine is equipped with various color and image quality functions. You can adjust the scanned image as desired.

Basic Color Modes

The basic color modes are as follows.













Color mode	Description	Reference image		Reference page
		Before	After	
Auto Color	Automatically recognizes whether a document being scanned is color or black & white.			page 6-17
Full Color	Scans a document in full color.			page 6-17
Grayscale	Scans a document in grayscale.			page 6-17
Black & White	Scans a document in black & white.			page 6-17

For details, refer to the following:

➔ [Color Selection \(page 6-17\)](#)

Adjusting Image Quality and Color

To adjust the image quality or color of an image, use the following functions.

I want to...	Sample image		Function	Page
	Before	After		
Adjust the color precisely.				
Adjust the density.			Density	page 6-15
Adjust the image quality precisely				
Emphasize or blur the image outline. Example: Emphasize the image outlines			Sharpness	page 6-18
Adjust the difference between dark and light parts of the image.			Contrast	page 6-18
Darken or lighten the background (the area with no texts or images) of a document. Example: Lightening the background			Background Density	page 6-19
Prevent bleed-through in 2-sided originals.			Prevent Bleed-through	page 6-19
Adjust the scanned image				
Decrease the file size and produce the characters clearly.			File format [High Comp. PDF]	page 6-31

Guides Provided with the Machine

The following guides are provided with the machine. Refer to each guide as needed.

The contents of the guides are subject to change without notice for the purpose of improvement of machine performance.

Printed guides

Start using the machine quickly



Quick Guide

Explains how to use basic functions of the machine, how to use convenient features, how to perform routine maintenance, and what to do when problems occur.

For safe use of the machine














Safety Guide

Provides safety and cautionary information for installation environment and use of the machine. Be sure to read this guide before using the machine.

Safety Guide (ECOSYS M3860idn/ECOSYS M3860idnf)

Indicates the space required for machine installation, and describes the cautionary labels and other safety information. Be sure to read this guide before using the machine.

Guides (PDF) on the DVD (Product Library)

Use the machine thoughtfully	 Operation Guide (This Guide) Explains how to load paper and perform copy, print and scan operations, and indicates default settings and other information.
Use the fax functions	 FAX Operation Guide Explains how to use the fax function.
Use the ID card	 Card Authentication Kit (B) Operation Guide Explains how to perform authentication using the ID card.
Strengthen security	 Data Encryption/Overwrite Operation Guide Explains how to introduce and use the Data Encryption/Overwrite, and how to overwrite and encrypt data.
Easily register machine information and configure settings	 Command Center RX User Guide Explains how to access the machine from a Web browser on your computer to check and change settings.
Print data from a computer	 Printer Driver User Guide Explains how to install the printer driver and use the printer function.
Directly print a PDF file	 KYOCERA Net Direct Print Operation Guide Explains how to print PDF files without launching Adobe Acrobat or Reader.
Monitor the machine and printers on the network	 KYOCERA Net Viewer User Guide Explains how to monitor your network printing system (the machine) with KYOCERA Net Viewer.
Scan images and save with information	 File Management Utility User Guide Explains how to use File Management Utility to set various parameters and send and save scanned documents.
Print without using the printer driver	 PRESCRIBE Commands Command Reference Describes the native printer language (PRESCRIBE commands).
	PRESCRIBE Commands Technical Reference Describes the PRESCRIBE command functions and control for each type of emulation.
Adjust the print or scan position	 Maintenance Menu User Guide Maintenance Menu provides the explanation on how to configure the print, scan, and other settings.

Install the following versions of Adobe Reader to view the manuals on the DVD.
Version 8.0 or later

About the Operation Guide (this Guide)

Structure of the guide

The Operation Guide contains the following chapters.


Chapter		Contents
1	Legal and Safety Information	Provides precautions regarding use of the machine and trademark information.
2	Installing and Setting up the Machine	Explains part names, cable connections, installation of the software, login, logout, and other matters related to administration of the machine.
3	Preparation before Use	Explains preparations and settings that are required in order to use the machine, such as how to use the operation panel, load paper, and create an address book.
4	Printing from PC	Explains functions that are available when the machine is used as a printer.
5	Operation on the Machine	Explains the basic procedures for using the machine, such as placing originals, making copies, sending documents, and using document boxes.
6	Using Various Functions	Explains convenient functions that are available on the machine.
7	Status/Job Cancel	Explains how to check the status of a job and the job history, and how to cancel jobs being printed or waiting to print. Also explains how to check paper and toner levels, how to check the device status, and how to cancel fax transmission.
8	Setup and Registration (System Menu)	Explains System Menu and how it relates to the operation of the machine.
9	User Authentication and Accounting (User Login, Job Accounting)	Explains user login and job accounting.
10	Troubleshooting	Explains what to do when toner runs out, an error is displayed, or a paper jam or other problem occurs.
11	Appendix	Describes convenient options that are available for the machine. Provides information on media types and paper sizes, and gives a glossary of terms. Explains how to enter characters, and lists the specifications of the machine.


Conventions Used in This Guide


Adobe Reader XI is used as an example in the explanations below.

Click an item in the Table of Contents to jump to the corresponding page.


Click to move from the current page to the previously displayed page. This is convenient when you want to return to the page from which you jumped to the current page.

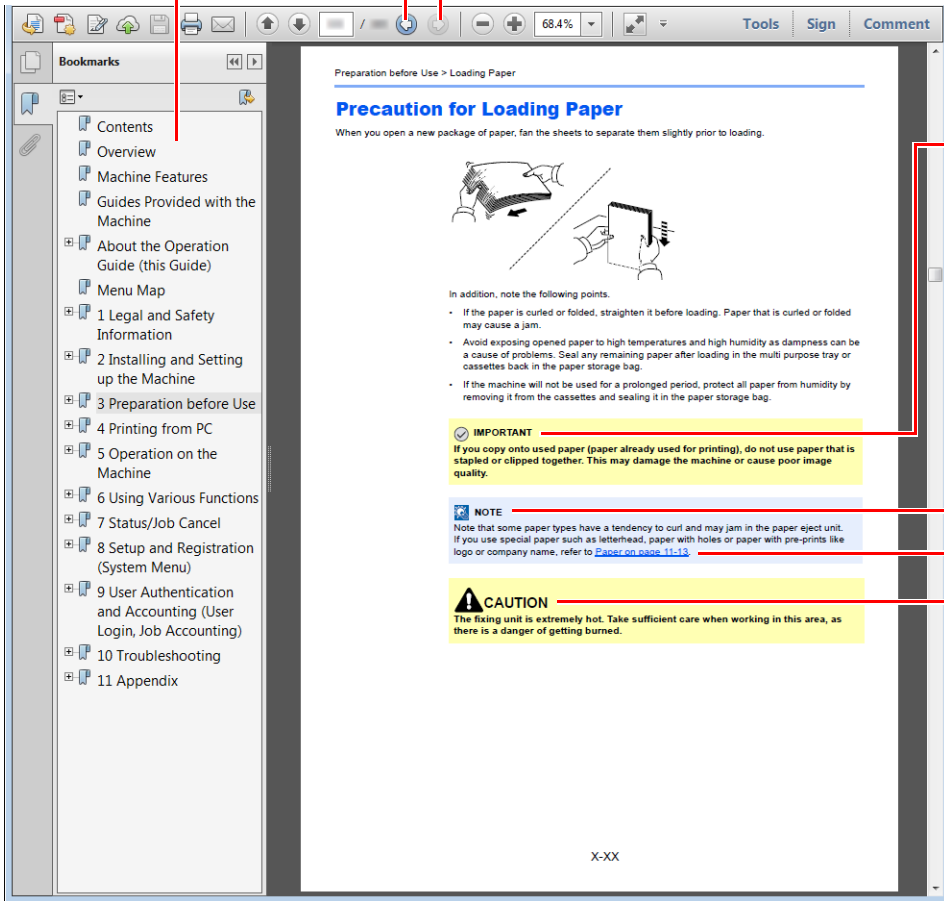


 **IMPORTANT**
Indicates operational requirements and restrictions to operate the machine correctly, and avoid damage to the machine or property.

 **NOTE**
Indicates supplemental explanations and reference information for operations.

Refer to
Click the underlined text to jump to the corresponding page.

 **CAUTION**
Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

 **NOTE**

The items that appear in Adobe Reader vary depending on how it is used. If the Table of Contents or tools do not appear, refer to Adobe Reader Help.

Certain items are indicated in this guide by the conventions described below.

Convention	Description
[Bold]	Indicates keys and buttons.
"Regular"	Indicates a message or setting.

Conventions used in procedures for operating the machine

In this Operation Guide, continuous operation of the keys on the touch panel is as follows:

Actual procedure	Procedure indicated in this guide
Select the [S ystem Menu/Counter] key. ▼ Select [∨]. ▼ Select [C ommon Settings]. ▼ Select [S ound].	[S ystem Menu/Counter] key > [C ommon Settings] > [S ound]


Menu Map

This is a list of menus displayed on the touch panel. Depending on the settings, some menus may not be displayed. Some menu names may differ from their reference titles.

 Copy



or

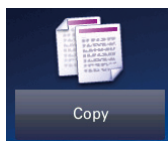


Paper Selection (page 6-11)	
Zoom (page 6-20)	
Density (page 6-15)	
Duplex (page 6-24)	
Combine (page 6-22)	
Quiet Mode (page 6-27)	
Functions	Collate/Offset (page 6-13)
	ID Card Copy (page 6-10)
	Original Size (page 6-10)
	Original Orientation (page 6-12)
	Mixed Size Originals (page 6-13)
	Paper Output (page 6-14)
	Staple (page 6-14)
	Original Image (page 6-16)
	EcoPrint (page 6-17)
	Sharpness (page 6-18)
	Contrast (page 6-18)
	Background Density Adj. (page 6-19)
	Prevent Bleed-through (page 6-19)
	Skip Blank Page (page 6-28)
	Continuous Scan (page 6-26)
	Job Finish Notice (page 6-26)
File Name Entry (page 6-27)	
Priority Override (page 6-27)	

 Send




or

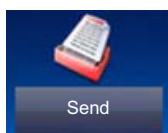


One Touch Key (page 5-22)	
Address Book (page 5-20)	
Ext Address Book (Refer to Command Center RX User Guide.)	
E-mail (page 5-22)	
Folder (page 5-23)	
FAX Server (page 5-34)	
FAX (Refer to FAX Operation Guide.)	
WSD Scan (page 5-31)	
Functions	Color Selection (page 6-17)
	Quiet Mode (page 6-27)
	File Format (page 6-31)
	Original Size (page 6-10)
	Original Orientation (page 6-12)
	Mixed Size Originals (page 6-13)
	Duplex (page 6-29)
	Sending Size (page 6-30)
	File Separation (page 6-35)
	Scan Resolution (page 6-35)
	Density (page 6-15)
	Original Image (page 6-16)
	Sharpness (page 6-18)
	Contrast (page 6-18)
	Background Density Adj. (page 6-19)
	Prevent Bleed-through (page 6-19)
	Skip Blank Page (page 6-28)
	FAX TX Resolution (Refer to FAX Operation Guide.)
	Zoom (page 6-20)
	Continuous Scan (page 6-26)
	File Name Entry (page 6-27)
	E-mail Subject/Body (page 6-35)
Long Original (page 6-36)	
Job Finish Notice (page 6-26)	
FTP Encrypted TX (page 6-36)	

Functions	FAX Delayed Transmission (Refer to FAX Operation Guide.)
	FAX Direct Transmission (Refer to FAX Operation Guide.)
	FAX Polling RX (Refer to FAX Operation Guide.)
	FAX TX Report (Refer to FAX Operation Guide.)

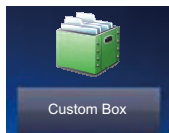

Custom Box	Menu	Store File	Duplex (page 6-29)	
			Scan Resolution (page 6-35)	
			Density (page 6-15)	
			File Name Entry (page 6-27)	
			Color Selection (page 6-17)	
			Quiet Mode (page 6-27)	
			Functions	Original Size (page 6-10)
			Original Orientation (page 6-12)	
			Mixed Size Originals (page 6-13)	
			Storing Size (page 6-37)	
			Original Image (page 6-16)	
			Sharpness (page 6-18)	
			Contrast (page 6-18)	
			Background Density Adj. (page 6-19)	
		Prevent Bleed-through (page 6-19)		
		Skip Blank Page (page 6-28)		
		Zoom (page 6-20)		
		Continuous Scan (page 6-26)		
		Job Finish Notice (page 6-26)		
		Print	Paper Selection (page 6-11)	
Collate/Offset (page 6-13)				
Duplex (page 6-24)				
Delete after Print (page 6-36)				
Quiet Mode (page 6-27)				

Custom Box	Menu	Print	Functions	Paper Output (page 6-14)
				Staple (page 6-14)
				Priority Override (page 6-27)
				File Name Entry (page 6-27)
				Job Finish Notice (page 6-26)
				EcoPrint (page 6-17)
		Send	Functions	One Touch Key (page 5-22)
				Address Book (page 5-20)
				Ext Address Book (Refer to Command Center RX User Guide.)
				E-mail (page 5-22)
				Folder (page 5-23)
				FAX Server (Refer to FAX Operation Guide.)
				FAX (Refer to FAX Operation Guide.)
				File Format (page 6-31)
				File Separation (page 6-35)
				Resolution (page 6-35)
				FAX TX Resolution (Refer to FAX Operation Guide.)
				File Name Entry (page 6-27)
				E-mail Subject/Body (page 6-35)
				Job Finish Notice (page 6-26)
FTP Encrypted TX (page 6-36)				
FAX Delayed Transmission (Refer to FAX Operation Guide.)				
FAX TX Report (Refer to FAX Operation Guide.)				
Delete after Transmitted (page 6-36)				

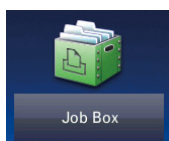


Job Box	Private Print/Stored Job (page 4-13)
	Quick Copy/Proof and Hold (page 4-17)



USB Drive	Print	Paper Selection (page 6-11)		
		Collate/Offset (page 6-13)		
		Duplex (page 6-24)		
		Quiet Mode (page 6-27)		
		Functions	Paper Output (page 6-14)	
			Staple (page 6-14)	
			EcoPrint (page 6-17)	
			Job Finish Notice (page 6-26)	
			File Name Entry (page 6-27)	
			Priority Override (page 6-27)	
	Encrypted PDF Password (page 6-37)			
	JPEG/TIFF Print (page 6-38)			
	XPS Fit to Page (page 6-38)			
	Menu	Store File	File Format (page 6-31)	
			Duplex (page 6-29)	
Scan Resolution (page 6-35)				
Density (page 6-15)				
File Name Entry (page 6-27)				
Color Selection (page 6-17)				

USB Drive	Menu	Store File	Functions	
				Quiet Mode (page 6-27)
				Original Size (page 6-10)
				Original Orientation (page 6-12)
				Mixed Size Originals (page 6-13)
				Storing Size (page 6-37)
				Original Image (page 6-16)
				Sharpness (page 6-18)
				Contrast (page 6-18)
				Background Density Adj. (page 6-19)
				Prevent Bleed-through (page 6-19)
				Skip Blank Page (page 6-28)
				Zoom (page 6-20)
				Continuous Scan (page 6-26)
				Long Original (page 6-36)
				Job Finish Notice (page 6-26)
				File Separation (page 6-35)

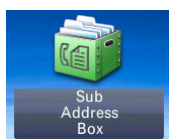

Sub Address Box (Refer to FAX Operation Guide.)



 
 
Polling Box (Refer to FAX Operation Guide.)



FAX Memory RX Box (Refer to FAX Operation Guide.)

Status/ Job Cancel

or




Print Job Status (page 7-8)
Send Job Status (page 7-4)
Store Job Status (page 7-5)
Scheduled Job (page 7-6)
Print Job Log (page 7-8)
Send Job Log (page 7-8)
Store Job Log (page 7-8)
FAX Job Log (Refer to FAX Operation Guide.)
Scanner (page 7-11)
Printer (page 7-11)
FAX Memory RX Box (refer to FAX Operation Guide.)
FAX (refer to FAX Operation Guide.)
Toner Status (page 7-13)
Paper Status (page 7-13)
USB Drive (page 7-11)
USB Keyboard (page 7-11)
Bluetooth Keyboard (page 7-11)
Staple (page 7-13)
Network Connection Status (page 7-11)
Option Network Connection Status (page 7-12)
Wi-Fi Direct (page 7-12)
Wireless Network (page 7-12)
Wi-Fi (page 7-12)
SSD (page 7-12)
Hard Disk (page 7-12)

System Menu / Counter



 or



Quick Setup Wizard	FAX Setup (page 2-40)	
	Paper Setup (page 2-40)	
	Energy Saver Setup (page 2-40)	
	Network Setup (page 2-41)	
Language (page 8-5)		
Report	Report Print	Status Page (page 8-5)
		Font List (page 8-6)
		Network Status (page 8-6)
		Service Status (page 8-6)
		Accounting Report (page 8-6)
		Sub Address Box List (Refer to FAX Operation Guide.)
		FAX List (Index) (Refer to FAX Operation Guide.)
		FAX List (No.) (Refer to FAX Operation Guide.)
		Outgoing FAX Report (Refer to FAX Operation Guide.)
		Incoming FAX Report (Refer to FAX Operation Guide.)
		Optional Network Status (page 8-6)
	Data Sanitization Report (page 8-6)	
	Admin Report Settings	Outgoing FAX Report (Refer to FAX Operation Guide.)
		Incoming FAX Report (Refer to FAX Operation Guide.)
	Result Report Setting	Send Result Report (page 8-7)
		RX Result Report (Refer to FAX Operation Guide.)
		Job Finish Notice Setting (page 8-7)
	Sending Log History	Send Log History (page 8-7)
		Auto Sending (page 8-7)
		Destination (page 8-7)
		Job Log Subject (page 8-7)
		SSFC Log Subject (page 8-7)
Personal Information (page 8-7)		
Counter	Printed Pages (page 2-55)	
	Scanned Pages (page 2-55)	
User Property (page 9-9)		

Cassette/MP Tray Settings	Cassette 1 (page 8-8)	
	Cassette 2 (page 8-8)	
	Cassette 3 (page 8-8)	
	Cassette 4 (page 8-8)	
	Cassette 5 (page 8-8)	
	Multi Purpose Tray (page 8-9)	
Common Settings	Default Screen (page 8-10)	
	Sound	Buzzer (page 8-10)
		FAX Speaker Volume (Refer to FAX Operation Guide.)
		FAX Monitor Volume (Refer to FAX Operation Guide.)
	Original Settings	Custom Original Size (page 8-11)
		Auto Detect Original Size (DP) (page 8-11)
		Default Original Size (page 8-11)
		Default Original Size (Platen) (page 8-11)
	Paper Settings	Custom Paper Size (page 8-12)
		Media Type Settings (page 8-14)
		Default Paper Source (page 8-13)
		Paper Selection (page 8-13)
		Media for Auto (B & W) (page 8-13)
		Special Paper Action (page 8-13)
		Show Paper Setup Message (page 8-13)
	Function Defaults	File Format (page 8-15)
		Original Orientation (Copy) (page 8-15)
		Original Orientation (Send/Store) (page 8-15)
		Collate/Offset (page 8-15)
		File Separation (page 8-15)
		Scan Resolution (page 8-15)
		Color Selection (page 8-15)
		Original Image (Copy) (page 8-15)
		Original Image (Send/Store) (page 8-15)
		Background Density Adj. (Copy) (page 8-15)
		Background Density Adj. (Send/Store) (page 8-15)
		EcoPrint (page 8-15)
		Prevent Bleed-through (Copy) (page 8-15)
		Prevent Bleed-through (Send/Store) (page 8-16)
		Skip Blank Page (Copy) (page 8-16)
	Skip Blank Page (Send/Store) (page 8-16)	

Common Settings	Function Defaults	FAX TX Resolution (Refer to FAX Operation Guide.)	
		Zoom (page 8-16)	
		Continuous Scan (Copy) (page 8-16)	
		Continuous Scan (FAX) (Refer to FAX Operation Guide.)	
		Continuous Scan (Send/Store) (page 8-16)	
		File Name Entry (page 8-16)	
		E-mail Subject/Body (page 8-16)	
		FTP Encrypted TX (page 8-16)	
		JPEG/TIFF Print (page 8-16)	
		XPS Fit to Page (page 8-16)	
		Detail Settings	Image Quality (page 8-17)
	PDF/A (page 8-17)		
	High Comp. PDF Image (page 8-17)		
	OCR Text Recognition (page 8-17)		
	Primary OCR Language (page 8-17)		
	OCR Output Format (page 8-17)		
	Detect Items to Skip (Copy) (page 8-17)		
	Detect Items to Skip (Send/Store) (page 8-17)		
	Preset Limit (page 8-17)		
	Error Handling	Duplexing Error (page 8-18)	
		Finishing Error (page 8-18)	
		No Staple Error (page 8-18)	
		Paper Jam before Staple (page 8-18)	
		Paper Mismatch Error (page 8-18)	
		Wrong Size Paper Loaded (page 8-18)	
		Multi Originals Fed (page 8-18)	
	Measurement (page 8-18)		
	Low Toner Alert (page 8-19)		
	Keyboard Layout (page 8-19)		
	Optional Keyboard Type (page 8-19)		
	Offset Documents by Job (page 8-19)		
	Offset One Page Documents (page 8-19)		
	Display Status/Log (page 8-20)		
Remote Printing (page 8-20)			
Direct Printing from Web (page 8-20)			
Function Key Assignment (page 8-20)			
Show Power Off Message (page 8-21)			
Message Banner Print (page 8-21)			

Home	Customize Desktop (page 2-19)	
	Customize Taskbar (page 2-19)	
	Wallpaper (page 2-19)	
Copy	Auto Paper Selection (page 8-21)	
	Auto % Priority (page 8-21)	
	Reserve Next Priority (page 8-21)	
Send	Dest. Check before Send (page 8-22)	
	Entry Check for New Dest. (page 8-22)	
	Send and Forward (page 8-22)	
	Color TIFF Compression (page 8-22)	
	Default Screen (page 8-22)	
	New Destination Entry (page 8-22)	
	Recall Destination (page 8-22)	
	Broadcast (page 8-22)	
	OCR Text Recognition Action (page 8-22)	
Document Box	Custom Box (page 5-39)	
	Sub Address Box (Refer to FAX Operation Guide.)	
	Job Box	Quick Copy Job Retention (page 8-23)
		Deletion of Job Retention (page 8-23)
		Storage Media (page 8-23)
	Polling Box (Refer to FAX Operation Guide.)	
	FAX Memory RX Box (Refer to FAX Operation Guide.)	
FAX (Refer to FAX Operation Guide.)		
Application (page 5-11)		
Internet	Proxy (page 8-24)	
Address Book/One Touch	Address Book (page 3-34)	
	One Touch Key (page 3-39)	
	Address Book Defaults	Sort (page 8-24)
		Address Book (page 8-24)
	Edit Restriction (page 8-25)	
Print List (Refer to FAX Operation Guide.)		

User Login/Job Accounting	User Login Settings	User Login (page 9-3)	
		Local User List (page 9-6)	
		ID Card Settings	Keyboard Login (page 9-30)
			Additional Authentication (page 9-30)
		PIN Login (page 9-31)	
		Simple Login Settings	Simple Login (page 9-27)
			Simple Login Setup (page 9-28)
		Local User Authorization (page 9-18)	
		Authentication Security	User Account Lockout Settings (page 9-4)
			Password Policy Settings (page 9-5)
		Group Authorization Set.	Group Authorization (page 9-19)
			Group List (page 9-20)
		Guest Authorization Set.	Guest Authorization (page 9-22)
			Guest Property (page 9-23)
	Obtain NW User Property (page 9-25)		
	Job Accounting Settings	Job Accounting (page 9-34)	
		Job Accounting Access (page 9-35)	
		Print Accounting Report (page 9-46)	
		Total Job Accounting (page 9-45)	
		Each Job Accounting (page 9-45)	
		Accounting List (page 9-36)	
		Default Setting	Apply Limit (page 9-44)
			Copy/Printer Count (page 9-44)
			Default Counter Limit (page 9-44)
	Unknown User Settings	Unknown ID Job (page 9-48)	
		User Property (page 9-49)	

Printer	Emulation (page 8-25)		
	EcoPrint (page 8-25)		
	Override A4/Letter (page 8-26)		
	Duplex (page 8-26)		
	Paper Output (page 8-26)		
	Copies (page 8-26)		
	Orientation (page 8-26)		
	Wide A4 (page 8-26)		
	Form Feed TimeOut (page 8-26)		
	LF Action (page 8-26)		
	CR Action (page 8-26)		
	Job Name (page 8-26)		
	User Name (page 8-26)		
	MP Tray Priority (page 8-26)		
	Paper Feed Mode (page 8-27)		
	Auto cassette Change (page 8-27)		
	System/Network	Network	Host Name (page 8-28)
Wi-Fi Direct Settings			Wi-Fi Direct (page 8-28)
			Device Name (page 8-28)
			IP Address (page 8-28)
			Auto Disconnect (page 8-28)
Wi-Fi Settings			Wi-Fi (page 8-28)
			Setup (page 8-29)
			TCP/IP Settings (page 8-30)
			Restart Network (page 8-31)
Wired Network Settings			TCP/IP Settings (page 8-31)
			LAN Interface (page 8-31)
Bonjour			Protocol Setting (page 8-32)
			Available Network (Wi-Fi Direct) (page 8-32)
			Available Network (Wi-Fi) (page 8-32)
			Available Network (Wired Network) (page 8-32)

System/Network	Network	IP Filter (IPv4) (page 8-32)	
		IP Filter (IPv6) (page 8-32)	
		IPSec (page 8-32)	
		Protocol Settings (page 8-32)	
		Security Settings	SSL (page 8-39)
			IPP Security (page 8-39)
			HTTP Security (page 8-39)
			SMTP Security (page 8-39)
			POP3 Security (User 1) (page 8-39)
			POP3 Security (User 2) (page 8-39)
			POP3 Security (User 3) (page 8-39)
		Ping (page 8-39)	
		Restart Network (page 8-40)	
		Proxy (page 8-40)	
	Optional Network	Setup (page 8-40)	
		Basic (page 8-41)	
	Primary Network (Client) (page 8-42)		
	Interface Block Setting	USB Host (page 8-43)	
		USB Device (page 8-43)	
		USB Storage (page 8-43)	
		Optional Interface (page 8-43)	
	Bluetooth Settings (page 8-43)		
	Security Level (page 8-43)		
	Restart (page 8-44)		
	RAM Disk Setting (page 8-44)		
	Optional Memory (page 8-44)		
	Data Security (page 8-45)		
OCR Dictionary Installation (page 8-46)			
Optional Function (page 8-47)			
Remote Services Settings (page 8-47)			
FAX Server Settings (page 8-47)			
Remote Operation (page 8-48)			

Date/Timer/Energy Saver	Date/Time (page 8-49)	
	Date Format (page 8-49)	
	Time Zone (page 8-49)	
	Auto Panel Reset (page 8-49)	
	Panel Reset Timer (page 8-49)	
	Low Power Timer (page 8-49)	
	Sleep Level (models except for Europe) (page 8-49)	
	Sleep Rules (models for Europe) (page 8-50)	
	Sleep Timer (page 8-50)	
	Energy Saver Recovery Level (page 8-50)	
	Weekly Timer Settings (page 8-50)	
	Power Off Rule (models for Europe) (page 8-51)	
	Power Off Timer (models for Europe) (page 8-51)	
	Auto Error Clear (page 8-51)	
	Error Clear Timer (page 8-51)	
Unusable Time (Refer to FAX Operation Guide .)		
Ping Timeout (page 8-51)		
Adjustment/Maintenance	Quiet Mode Settings	Quiet Mode (page 8-52)
		Specify for Each Job (page 8-52)
	Density Adjustment	Copy (page 8-52)
		Send/Box (page 8-52)
	Sharpness Adjustment	Copy (page 8-52)
		Send/Box (page 8-52)
	Contrast	Copy (page 8-52)
		Send/Box (page 8-52)
	Background Density Adj.	Copy (Auto) (page 8-52)
		Send/Box (Auto) (page 8-52)
	Toner Save Level (EcoPrint)	Copy (page 8-52)
		Printer (page 8-52)
	Print Density (page 8-52)	
	Auto Color Correction (page 8-53)	
	Correcting Black Line (page 8-53)	
	Display Brightness (page 8-53)	
	Drum Refresh 1 (page 8-53)	
	Drum Refresh 2 (page 8-53)	
	Auto Drum Refresh (page 8-53)	
	Service Setting (page 8-53)	

1 Legal and Safety Information


Please read this information before using your machine. This chapter provides information on the following topics.


Notice	1-2
Safety Conventions in This Guide	1-2
Environment	1-3
Precautions for Use	1-4
Laser Safety (Europe)	1-5
SAFETY OF LASER BEAM (USA)	1-6
Safety Instructions Regarding the Disconnection of Power	1-7
Compliance and Conformity	1-7
Other precautions (for users in California, the United States)	1-7
Warranty (the United States and Canada)	1-8
Legal Restriction on Copying/Scanning	1-9
EN ISO 7779	1-9
EK1-ITB 2000	1-9
Wireless Connection (Mexico only)	1-9
Security Precautions when Using Wireless LAN (If equipped)	1-9
Limited Use of This Product (If equipped)	1-10
Legal Information	1-11
Energy Saving Control Function	1-17
Automatic 2-Sided Print Function	1-17
Resource Saving - Paper	1-17
Environmental benefits of "Power Management"	1-17
Energy Star (ENERGY STAR®) Program	1-18

Notice


Safety Conventions in This Guide


The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.


 **WARNING:** Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.


 **CAUTION:** Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.


Symbols

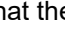
The  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.


 ... [General warning]

 
 ... [Warning of high temperature]

The  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.


 ... [Warning of prohibited action]

  ... [Disassembly prohibited]

The  symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.

 ... [Alert of required action]

 ... [Remove the power plug from the outlet]

 ... [Always connect the machine to an outlet with a ground connection]

Please contact your service representative to order a replacement if the safety warnings in this Operation Guide are illegible or if the guide itself is missing (fee required).

NOTE

An original which resembles a bank note closely may not be copied properly in some rare cases because this machine is equipped with a counterfeiting prevention function.

Environment

The service environmental conditions are as follows:

Temperature	50 to 90.5 °F (10 to 32.5 °C)
Humidity	15 to 80%

Avoid the following locations when selecting a site for the machine.

- Avoid locations near a window or with exposure to direct sunlight.
- Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- Avoid locations with direct exposure to hot or cold air.
- Avoid poorly ventilated locations.

If the floor is delicate against casters, when this machine is moved after installation, the floor material may be damaged.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

Precautions for Use

Cautions when handling consumables

CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Keep parts which contain toner out of the reach of children.

If toner happens to spill from parts which contain toner, avoid inhalation and ingestion, as well as contact with your eyes and skin.

- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy parts which contain toner.

Other precautions

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

Store the machine while avoiding exposure to direct sunlight.

Store the machine in a place where the temperature stays below 40 °C while avoiding sharp changes of temperature and humidity.


If the machine will not be used for an extended period of time, remove the paper from the cassette and the Multi Purpose (MP) Tray, return it to its original package and reseal it.

Laser Safety (Europe)

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this machine is hermetically sealed within the protective housing and external cover. In the normal operation of the product by user, no radiation can leak from the machine.

This machine is classified as Class 1 laser product under IEC/EN 60825-1:2014.

Regarding CLASS 1 laser products, information is provided on the rating label.

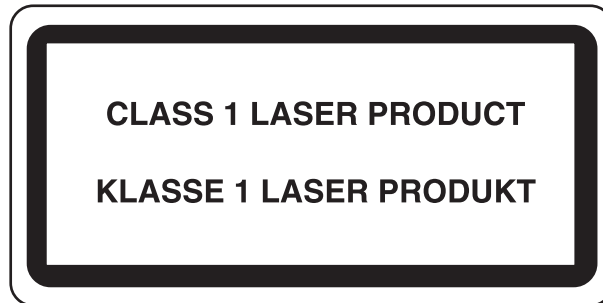


SAFETY OF LASER BEAM (USA)

1. Safety of laser beam

This machine has been certified by the manufacturer to Class 1 level under the radiation performance standards established by the U.S.DHHS (Department of Health and Human Services) in 1968. This indicates that the product is safe to use during normal operation and maintenance. The laser optical system, enclosed in a protective housing and sealed within the external covers, never permits the laser beam to escape.

2. The CDRH Act

A laser-product-related act was implemented on Aug. 2, 1976, by the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration (FDA). This act prohibits the sale of laser products in the U.S. without certification, and applies to laser products manufactured after Aug. 1, 1976. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States. On this machine, the label is on the rear.

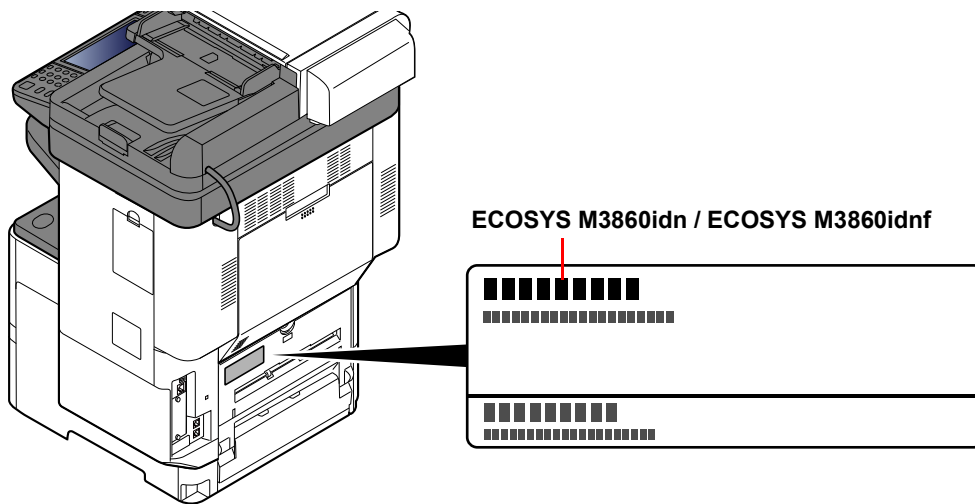

3. Maintenance

For safety of the service personnel, follow the maintenance instructions in the other section of this manual.

4. Safety switch

The power to the laser unit is cut off when the front cover is opened.

Safety Instructions Regarding the Disconnection of Power

Caution: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

Attention: Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

Compliance and Conformity

Hereby, KYOCERA Document Solutions Inc. declares that the radio equipment type ECOSYS M3860idn/ ECOSYS M3860idnf are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.kyoceradocumentsolutions.eu/index/service/dlc.html>

Module name	Software Ver.	Frequency band in which the radio equipment operates:	Maximum radio-frequency power transmitted in the frequency band in which the radio equipment operates:
IB-51 (Option)	2.2.6	2.4GHz	100mW
IB-36 (Option)	2014.12	2.4GHz	100mW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The use of a non-shielded interface cable with the referenced device is prohibited.

CAUTION — The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter.

* The above statements are valid only in the United States of America and Canada.

NOTE — Use shielded interface cables.

Other precautions (for users in California, the United States)

Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Warranty (the United States and Canada)

ECOSYS M3860idn / M3860idnf MULTIFUNCTIONAL PRODUCT LIMITED WARRANTY

KYOCERA Document Solutions America, Inc. and KYOCERA Document Solutions Canada, Ltd. (both referred to as "KYOCERA") warrant the Customer's new Multifunctional Product (referred to as "MFP"), and the new accessories installed with the initial installation of the MFP, against any defects in material and workmanship for a period of one year, or 500,000 copies/prints from date of installation, whichever first occurs. In the event the MFP or an accessory is found to be defective within the warranty period, KYOCERA's only obligation and the Customer's exclusive remedy shall be replacement of any defective parts. KYOCERA shall have no obligation to furnish labor.

This warranty is valid only for the original retail purchaser (referred to as the "Customer") of a new KYOCERA MFP in the United States of America or Canada, based upon the country of purchase.

In order to obtain performance of this warranty, the Customer must immediately notify the Authorized KYOCERA Dealer from whom the product was purchased. If the KYOCERA Dealer is not able to provide service, write to KYOCERA at the address below for the name and address of the Authorized KYOCERA Dealer in your area, or check KYOCERA's website at <http://www.kyoceradocumentsolutions.com/us> for KYOCERA Document Solutions America, Inc. or <http://www.kyoceradocumentsolutions.ca> for KYOCERA Document Solutions Canada, Ltd.

This warranty does not cover MFPs or accessories which: (a) have become damaged due to operator negligence, misuse, accidents, improper storage or unusual physical or electrical stress, (b) have used parts or supplies which are not genuine KYOCERA brand parts or supplies, (c) have been installed or serviced by a technician not employed by KYOCERA or an Authorized KYOCERA Dealer, or (d) have had the serial number modified, altered, or removed.

This warranty gives the Customer specific legal rights. The Customer may also have other rights, which vary from state to state, or province to province. Neither the seller, nor any other person, is authorized to extend the time period or expand this warranty on behalf of KYOCERA.

THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, AND KYOCERA SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY SHALL NOT EXTEND TO, AND KYOCERA SHALL NOT BE LIABLE FOR, ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY ARISE OUT OF THE USE OF, OR INABILITY TO USE, THE MFP.

KYOCERA Document Solutions America, Inc.

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008, USA

KYOCERA Document Solutions Canada, Ltd.

6120 Kestrel Rd., Mississauga, ON L5T 1S8,
Canada

Legal Restriction on Copying/Scanning

It may be prohibited to copy/scan copyrighted material without permission of the copyright owner.

Copying/Scanning the following items is prohibited and may be penalized by law. It may not be limited to these items. Do not knowingly copy/scan the items that are not to be copied/scanned.

- Paper money
- Bank note
- Securities
- Stamp
- Passport
- Certificate

Local laws and regulations may prohibit or restrict copying/scanning of other items not mentioned above.

EN ISO 7779

Maschinenlärminformations-Verordnung 3. GPSGV, 06.01.2004: Der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN ISO 7779.

EK1-ITB 2000

Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

Wireless Connection (Mexico only)

The operation of this equipment is subject to the following two conditions:

(1) it is possible that this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Security Precautions when Using Wireless LAN (If equipped)

Wireless LAN allows information to be exchanged between wireless access points instead of using a network cable, which offers the advantage that a LAN connection can be established freely within an area in which radio waves can be transmitted.

On the other hand, the following problems may occur if security settings are not configured, because radio waves can pass through obstacles (including walls) and reach everywhere within a certain area.

Secretly Viewing Communication Contents

A third person with malicious objectives may intentionally monitor radio waves and gain unauthorized access to the following communication contents.

- Personal information including ID, passwords, and credit card numbers
- Contents of email messages

Illegal Intrusion

A third party with malicious intent may gain unauthorized access to personal or company networks and conduct the following illegal actions.

- Extracting personal and confidential information (information leak)
- Entering into communication while impersonating a specific person and distributing unauthorized information (spoofing)
- Modifying and retransmitting intercepted communications (falsification)
- Transmitting computer viruses and destroying data and systems (destruction)

Wireless LAN cards and wireless access points contain built-in security mechanisms to address these problems and to reduce the possibility of these problems occurring by configuring the security settings of wireless LAN products when the product is used.

We recommend that customers take responsibility and use their judgment when configuring the security settings and that they ensure that they fully understand the problems that can occur when the product is used without configuring the security settings.

Limited Use of This Product (If equipped)

- Radio waves transmitted from this product may affect medical equipment. When using this product in a medical institution or in the vicinity of medical instruments, either use this product according to the instructions and precautions provided by the administrator of the institution or those provided on the medical instruments.
- Radio waves transmitted from this product may affect automatic control equipment including automatic doors and fire alarms. When using this product in the vicinity of the automatic control equipment, use this product according to the instructions and precautions provided on the automatic control equipment.
- If this product is used in devices that are directly related to service including airplanes, trains, ships, and automobiles or this product is used in applications requiring high reliability and safety to function and in devices requiring accuracy including those used in disaster prevention and crime prevention and those used for various safety purposes, please use this product after considering the safety design of the entire system including adoption of a failsafe design and redundancy design for reliability and safety maintenance of the entire system. This product is not intended for use in applications requiring high reliability and safety including aerospace instruments, trunk communication equipment, nuclear power control equipment, and medical equipment; hence, the decision as to whether to use this product in these applications needs to be fully considered and determined.

Sólo México (Mexico only)

Este equipo utiliza el módulo de interfaz de red inalámbrica modelo LBWA1ZZ1CA para conectarse a las redes Inalámbricas.

Legal Information

Copying or other reproduction of all or part of this guide without the prior written consent of KYOCERA Document Solutions Inc. is prohibited.

Regarding Trade Names

- PRESCRIBE and ECOSYS are registered trademark of Kyocera Corporation.
- KPDL is a trademark of Kyocera Corporation.
- Microsoft, Windows, Windows Server, Internet Explorer, Excel and PowerPoint are registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.
- PCL is a trademark of Hewlett-Packard Company.
- Adobe Acrobat, Adobe Reader and PostScript are trademarks of Adobe Systems, Incorporated.
- Ethernet is a registered trademark of Xerox Corporation.
- IBM and IBM PC/AT are trademarks of International Business Machines Corporation.
- AppleTalk, Bonjour, Macintosh, and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- All European language fonts installed in this machine are used under licensing agreement with Monotype Imaging Inc.
- Helvetica, Palatino and Times are registered trademarks of Linotype GmbH.
- ITC Avant Garde Gothic, ITC Bookman, ITC ZapfChancery and ITC ZapfDingbats are registered trademarks of International Typeface Corporation.
- ThinPrint is a trademark of Cortado AG in Germany and other countries.
- UFST™ MicroType® fonts by Monotype Imaging Inc. are installed in this machine.
- This machine contains the software having modules developed by Independent JPEG Group.
- iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- AirPrint and the AirPrint logo are trademarks of Apple Inc.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license by Apple Inc.
- Google and Google Cloud Print™ are trademarks and/or registered trademarks of Google Inc.
- Mopria™ is registered trademarks of Mopria™ Alliance.
- Wi-Fi and Wi-Fi Direct are trademarks and/or registered trademarks of Wi-Fi Alliance.
- Powered by ABBYY FineReader
ABBYY and FineReader are trademarks of ABBYY Software Ltd.

All other brands and product names are registered trademarks or trademarks of their respective companies. The designations ™ and ® will not be used in this Operation Guide.

GPL/LGPL

This product contains GPL (<http://www.gnu.org/licenses/gpl.html>) and/or LGPL (<http://www.gnu.org/licenses/lgpl.html>) software as part of its firmware. You can get the source code, and you are permitted to copy, redistribute and modify it under the terms of GPL/LGPL. For further information including availability of the source code, visit <http://www.kyoceradocumentsolutions.com/gpl/>.

OpenSSL License

Copyright (c) 1998-2006 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (ey@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (ey@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed.

If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.

This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
"This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)"
The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

Monotype Imaging License Agreement

- 1 *Software* shall mean the digitally encoded, machine readable, scalable outline data as encoded in a special format as well as the UFST Software.
- 2 You agree to accept a non-exclusive license to use the Software to reproduce and display weights, styles and versions of letters, numerals, characters and symbols (*Typefaces*) solely for your own customary business or personal purposes at the address stated on the registration card you return to Monotype Imaging. Under the terms of this License Agreement, you have the right to use the Fonts on up to three printers. If you need to have access to the fonts on more than three printers, you need to acquire a multiuser license agreement which can be obtained from Monotype Imaging. Monotype Imaging retains all rights, title and interest to the Software and Typefaces and no rights are granted to you other than a License to use the Software on the terms expressly set forth in this Agreement.
- 3 To protect proprietary rights of Monotype Imaging, you agree to maintain the Software and other proprietary information concerning the Typefaces in strict confidence and to establish reasonable procedures regulating access to and use of the Software and Typefaces.
- 4 You agree not to duplicate or copy the Software or Typefaces, except that you may make one backup copy. You agree that any such copy shall contain the same proprietary notices as those appearing on the original.
- 5 This License shall continue until the last use of the Software and Typefaces, unless sooner terminated. This License may be terminated by Monotype Imaging if you fail to comply with the terms of this License and such failure is not remedied within thirty (30) days after notice from Monotype Imaging. When this License expires or is terminated, you shall either return to Monotype Imaging or destroy all copies of the Software and Typefaces and documentation as requested.
- 6 You agree that you will not modify, alter, disassemble, decrypt, reverse engineer or decompile the Software.
- 7 Monotype Imaging warrants that for ninety (90) days after delivery, the Software will perform in accordance with Monotype Imaging-published specifications, and the diskette will be free from defects in material and workmanship. Monotype Imaging does not warrant that the Software is free from all bugs, errors and omissions.

The parties agree that all other warranties, expressed or implied, including warranties of fitness for a particular purpose and merchantability, are excluded.
- 8 Your exclusive remedy and the sole liability of Monotype Imaging in connection with the Software and Typefaces is repair or replacement of defective parts, upon their return to Monotype Imaging.

In no event will Monotype Imaging be liable for lost profits, lost data, or any other incidental or consequential damages, or any damages caused by abuse or misapplication of the Software and Typefaces.
- 9 Massachusetts U.S.A. law governs this Agreement.

- 10 You shall not sublicense, sell, lease, or otherwise transfer the Software and/or Typefaces without the prior written consent of Monotype Imaging.
- 11 Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252-227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c)(2).
- 12 You acknowledge that you have read this Agreement, understand it, and agree to be bound by its terms and conditions. Neither party shall be bound by any statement or representation not contained in this Agreement. No change in this Agreement is effective unless written and signed by properly authorized representatives of each party. By opening this diskette package, you agree to accept the terms and conditions of this Agreement.

Knopflerfish License

This product includes software developed by the Knopflerfish Project.

<http://www.knopflerfish.org>

Copyright 2003-2010 The Knopflerfish Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the KNOPFLERFISH project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Apache License (Version 2.0)

Apache License
Version 2.0, January 2004
<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 - (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
 - (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
 - (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
 - (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. **Submission of Contributions.** Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
6. **Trademarks.** This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
7. **Disclaimer of Warranty.** Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
8. **Limitation of Liability.** In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
9. **Accepting Warranty or Additional Liability.** While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

Energy Saving Control Function

The device comes equipped with a **Sleep** where printer and fax functions remain in a waiting state but power consumption is reduced to a minimum after a certain amount of time elapses since the device was last used.

Sleep

The device automatically enters Sleep when 1 minute has passed since the device was last used. The amount of time of no activity that must pass before Sleep is activated may be lengthened.

➔ [Sleep and Auto Sleep \(page 2-38\)](#)

Automatic 2-Sided Print Function

This device includes 2-sided printing as a standard function. For example, by printing two 1-sided originals onto a single sheet of paper as a 2-sided print, it is possible to lower the amount of paper used.

➔ [Duplex \(page 6-24\)](#)

Printing in duplex mode reduces paper consumption and contributes to the conservation of forest resources. Duplex mode also reduces the amount of paper that must be purchased, and thereby reduces cost. It is recommended that machines capable of duplex printing be set to use duplex mode by default.

Resource Saving - Paper

For the preservation and sustainable use of forest resources, it is recommended that recycled as well as virgin paper certified under environmental stewardship initiatives or carrying recognised ecolabels, which meet EN 12281:2002* or an equivalent quality standard, be used.

This machine also supports printing on 64 g/m² paper. Using such paper containing less raw materials can lead to further saving of forest resources.

* : EN12281:2002 "Printing and business paper - Requirements for copy paper for dry toner imaging processes"

Your sales or service representative can provide information about recommended paper types.

Environmental benefits of "Power Management"

To reduce power consumption when idle, this machine is equipped with a power management function that automatically activates energy-saving mode when the machine is idle for a certain period of time.

Although it takes the machine a slight amount of time to return to READY mode when in energy-saving mode, a significant reduction in energy consumption is possible. It is recommended that the machine be used with the activation time for energy-saving mode set to the default setting.

Energy Star (ENERGY STAR[®]) Program



We participate in the ENERGY STAR[®] Program.

We provide the products complied with ENERGY STAR[®] to the market.

ENERGY STAR[®] is an energy efficiency program with the goal of developing and promoting the use of products with high energy efficiency in order to help prevent global warming. By purchasing the products complied with ENERGY STAR[®], customers can help reduce emissions of greenhouse gases during product use and cut energy-related costs.

2 Installing and Setting up the Machine


This chapter provides information for the administrator of this machine, such as part names, cable connection, and software installation.

Part Names	2-2	Setting WIA Driver	2-54
Machine Exterior	2-2	Checking the Counter	2-55
Connectors/Interior	2-6	Additional Preparations for	
With Optional Equipments Attached .	2-10	the Administrator	2-56
Connecting the Machine and Other		Sending Documents to a PC	2-56
Devices	2-12	Strengthening the Security	2-56
Connecting Cables	2-13	Command Center RX	2-58
Connecting LAN Cable	2-13	Accessing Command Center RX	2-59
Connecting USB Cable	2-14	Changing Security Settings	2-60
Connecting the Power Cable	2-14	Changing Device Information	2-62
Power On/Off	2-15	E-mail Settings	2-64
Power On	2-15	Registering Destinations	2-68
Power Off	2-15	Creating a New Custom Box	2-69
Using the Operation Panel	2-16	Printing a document stored in a Custom	
Operation Panel Keys	2-16	Box	2-70
Adjusting the Operation		Transferring Data from Our Other	
Panel Angle	2-17	Products	2-72
Touch Panel	2-18	Migrating the Address Book	2-72
Home Screen	2-18		
Display for Device Information	2-22		
Functions key	2-23		
Display of Keys That Cannot			
Be Set	2-24		
Enter key and Quick No.			
Search key	2-25		
Help Screen	2-26		
Login/Logout	2-27		
Login	2-27		
Logout	2-28		
Default Settings of the Machine	2-29		
Setting Date and Time	2-29		
Network Setup	2-30		
Configuring the Wired Network	2-30		
Configuring the Wireless Network	2-32		
Setting Wi-Fi Direct	2-36		
Energy Saver function	2-38		
Low Power Mode	2-38		
Sleep and Auto Sleep	2-38		
Power Off Rule			
(models for Europe)	2-39		
Quick Setup Wizard	2-40		
Installing Software	2-42		
Software on DVD (Windows)	2-42		
Installing Software in Windows	2-43		
Uninstalling the Software	2-49		
Installing Software			
in Mac Computer	2-50		
Setting TWAIN Driver	2-52		

Part Names


Machine Exterior

Model without the finisher

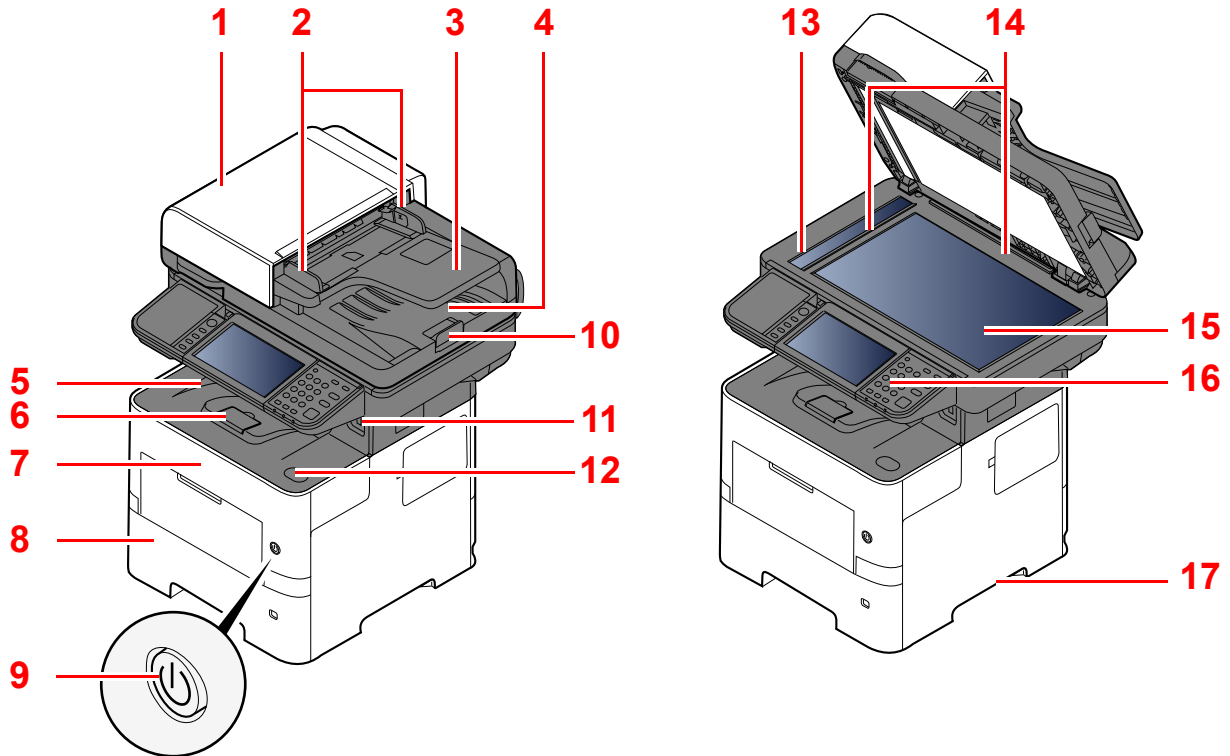

- 1 Document Processor
- 2 Original Width Guides
- 3 Original Table
- 4 Original Eject Table
- 5 Inner Tray
- 6 Paper Stopper
- 7 Front Cover
- 8 Cassette 1
- 9 Power Switch


- 10 Original Stopper
- 11 USB Memory Slot
- 12 Front Cover Open Button
- 13 Slit Glass
- 14 Original Size Indicator Plates
- 15 Platen
- 16 Operation Panel
- 17 Handles

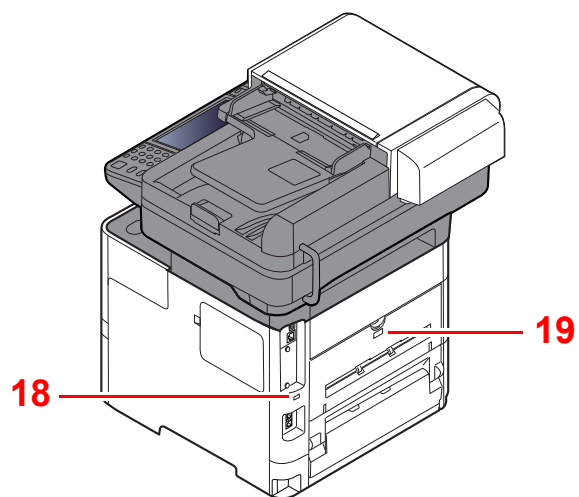

18 Anti-theft Lock Slot


19 Rear Cover

Model with the finisher

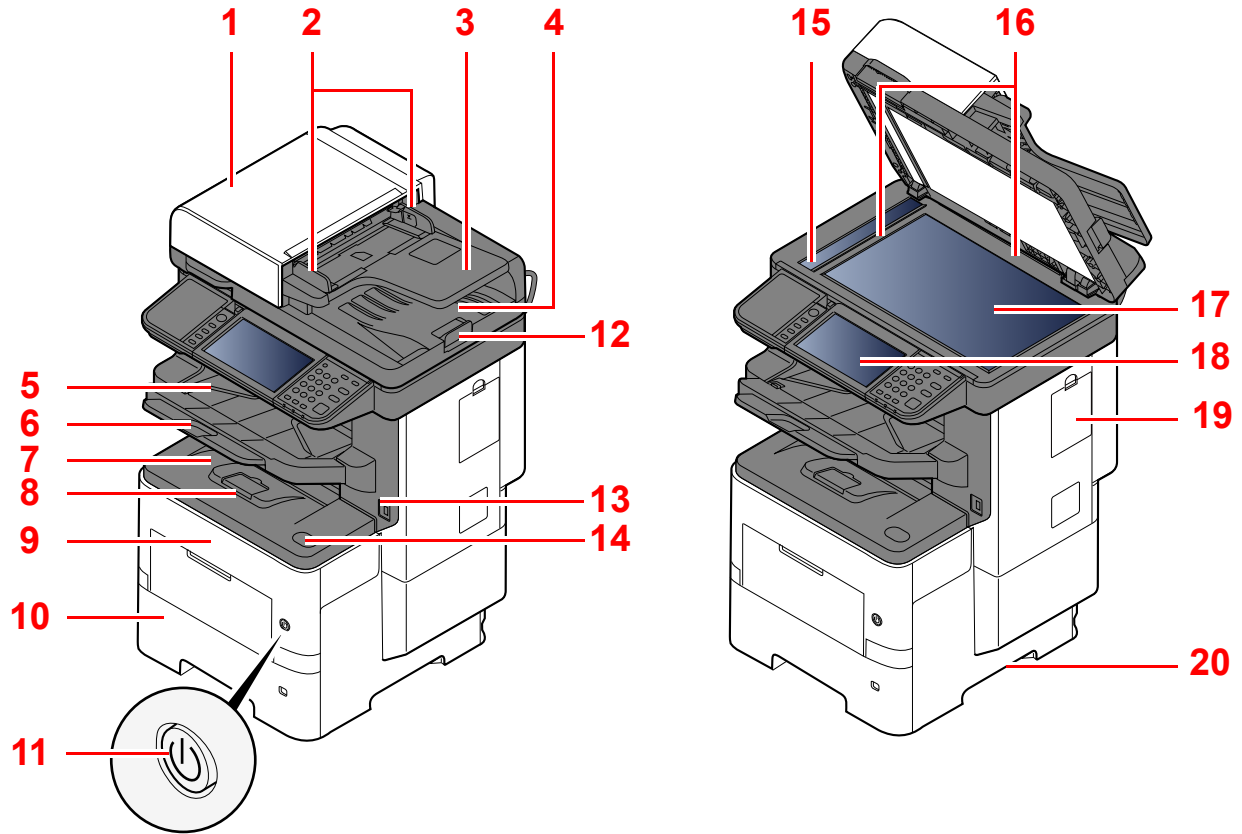

- 1 Document Processor
- 2 Original Width Guides
- 3 Original Table
- 4 Original Eject Table
- 5 Inner Finisher
- 6 Tray Extension
- 7 Inner Tray
- 8 Paper Stopper
- 9 Front Cover
- 10 Cassette 1
- 11 Power Switch


- 12 Original Stopper
- 13 USB Memory Slot
- 14 Front Cover Open Button
- 15 Slit Glass
- 16 Original Size Indicator Plates
- 17 Platen
- 18 Operation Panel
- 19 Staple Cover
- 20 Handles

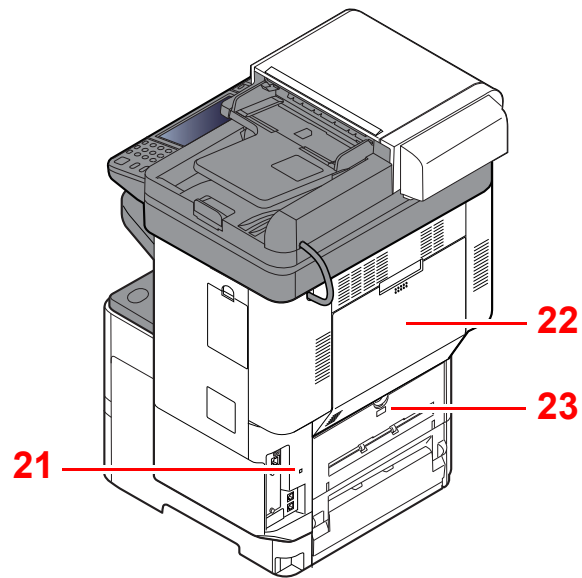


- 21 Anti-theft Lock Slot
- 22 Finisher Rear Cover
- 23 Rear Cover

Connectors/Interior


Model without the finisher

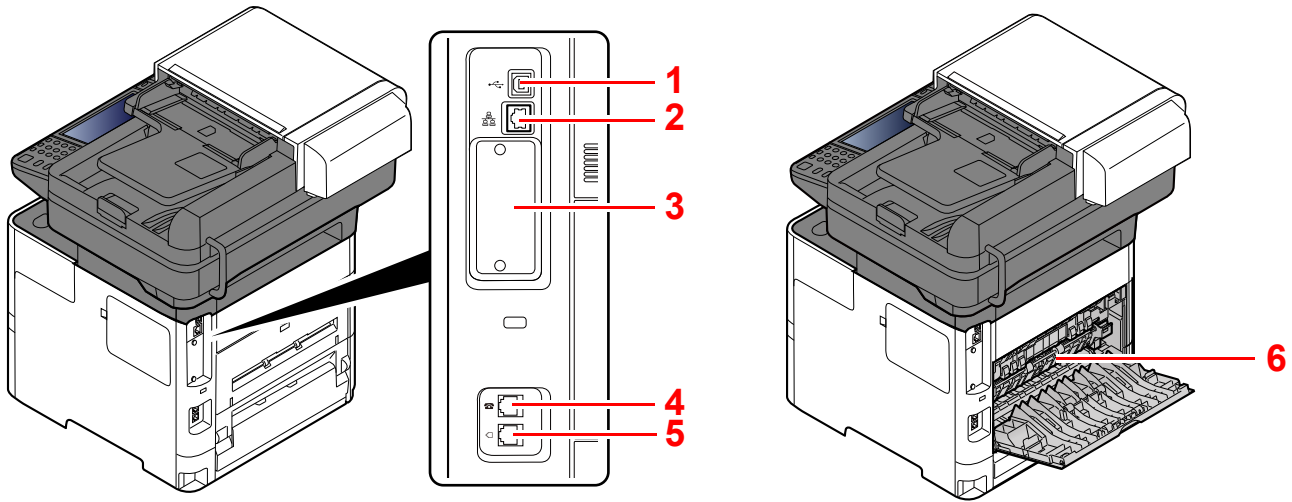

- 1 USB Interface Connector
- 2 Network Interface Connector
- 3 Option Interface Slot
- 4 TEL Connector
- 5 LINE Connector
- 6 Fuser Cover

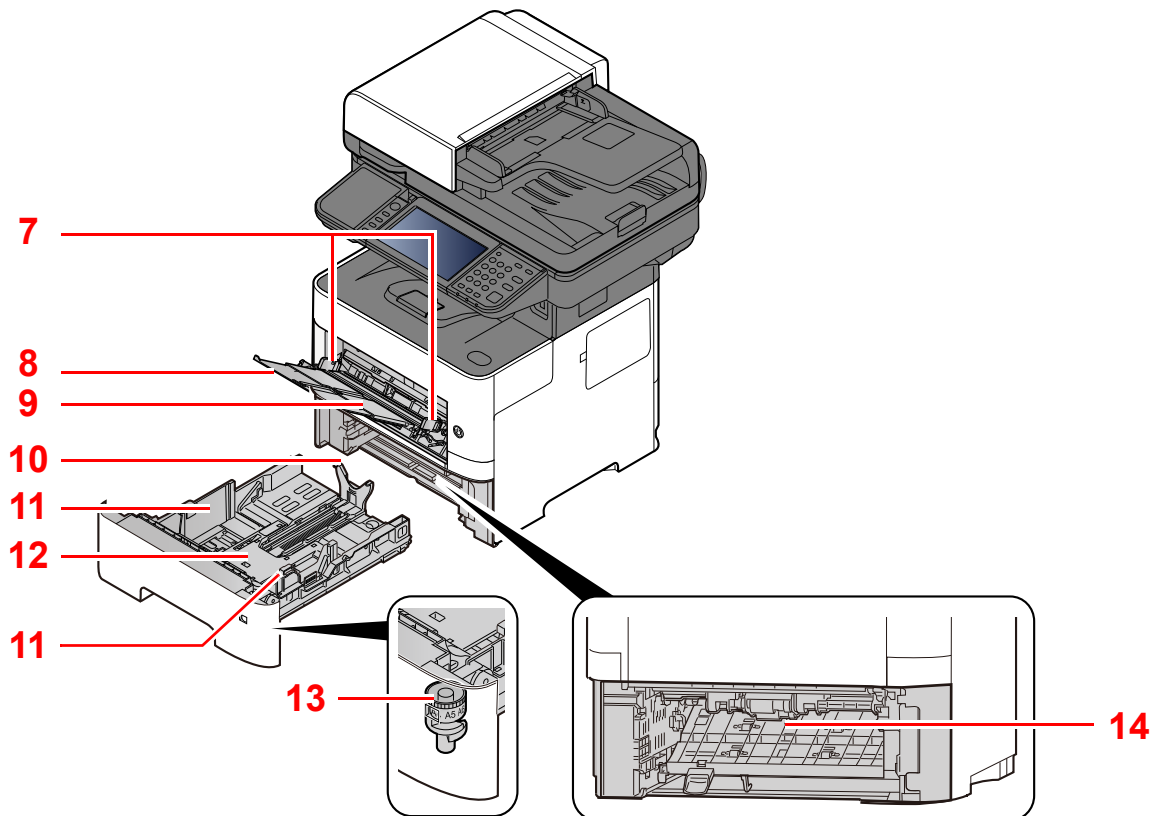

- 7 Paper Width Guides
- 8 Tray Extension
- 9 Multi Purpose Tray
- 10 Paper Length Guide
- 11 Paper Width Guides
- 12 Bottom Plate
- 13 Size Dial
- 14 Duplex Cover

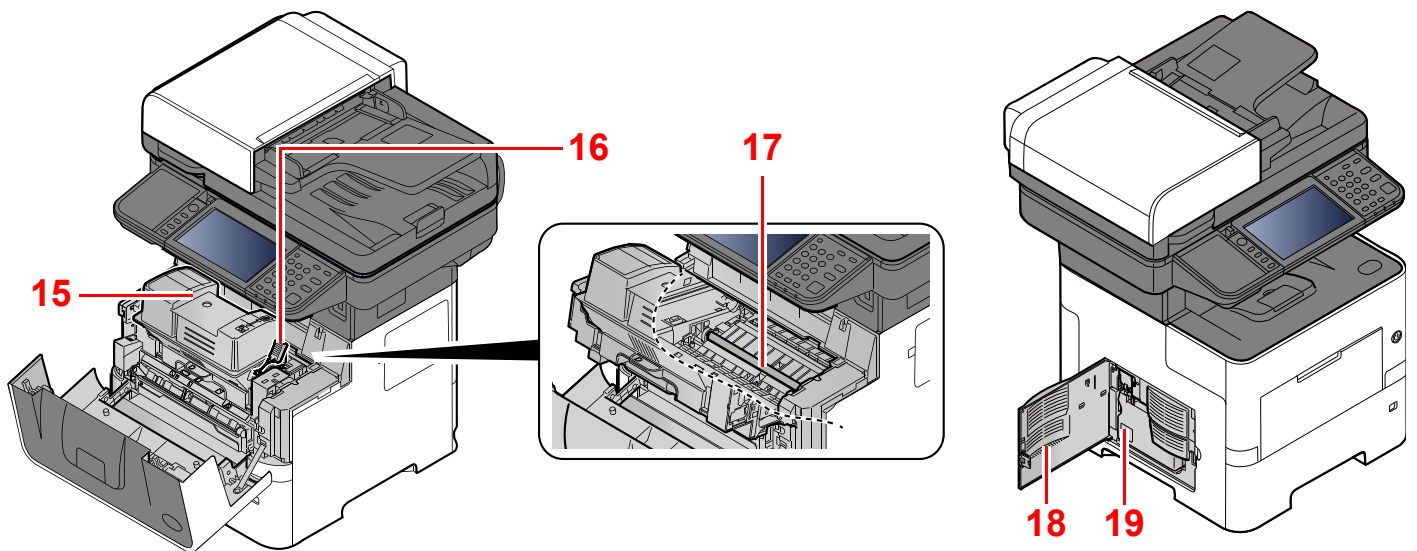

15 Toner Container


16 Toner Container Lock Lever

17 Registration Roller

18 Left Cover

19 Waste Toner Box

Model with the finisher

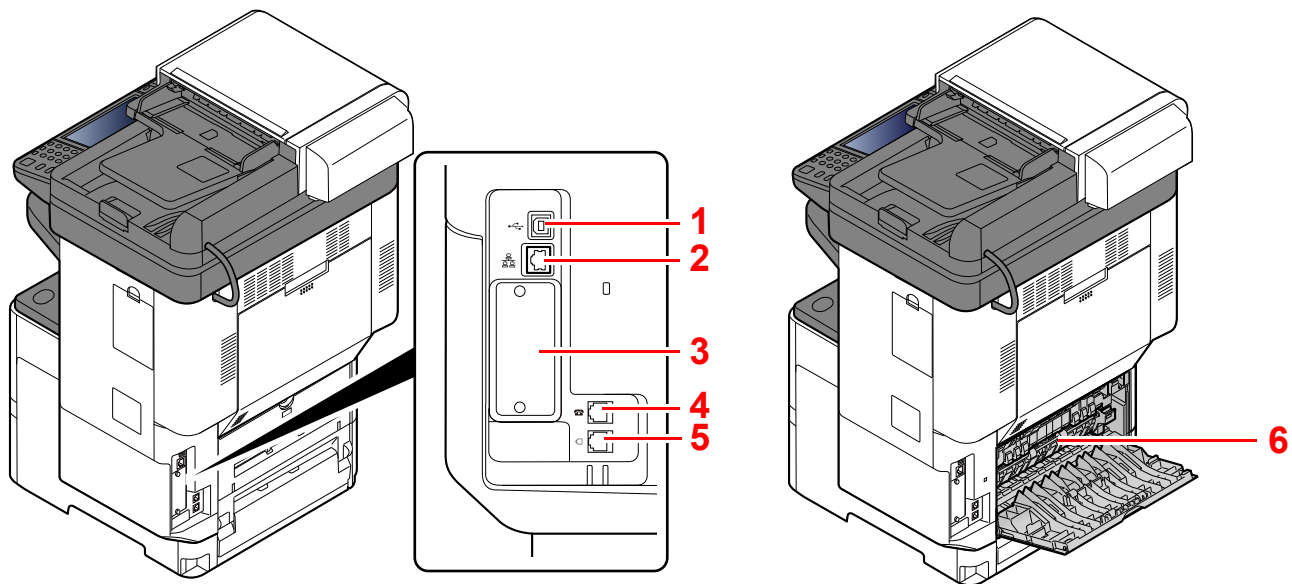

1 USB Interface Connector


2 Network Interface Connector

3 Option Interface Slot

4 TEL Connector


5 LINE Connector

6 Fuser Cover

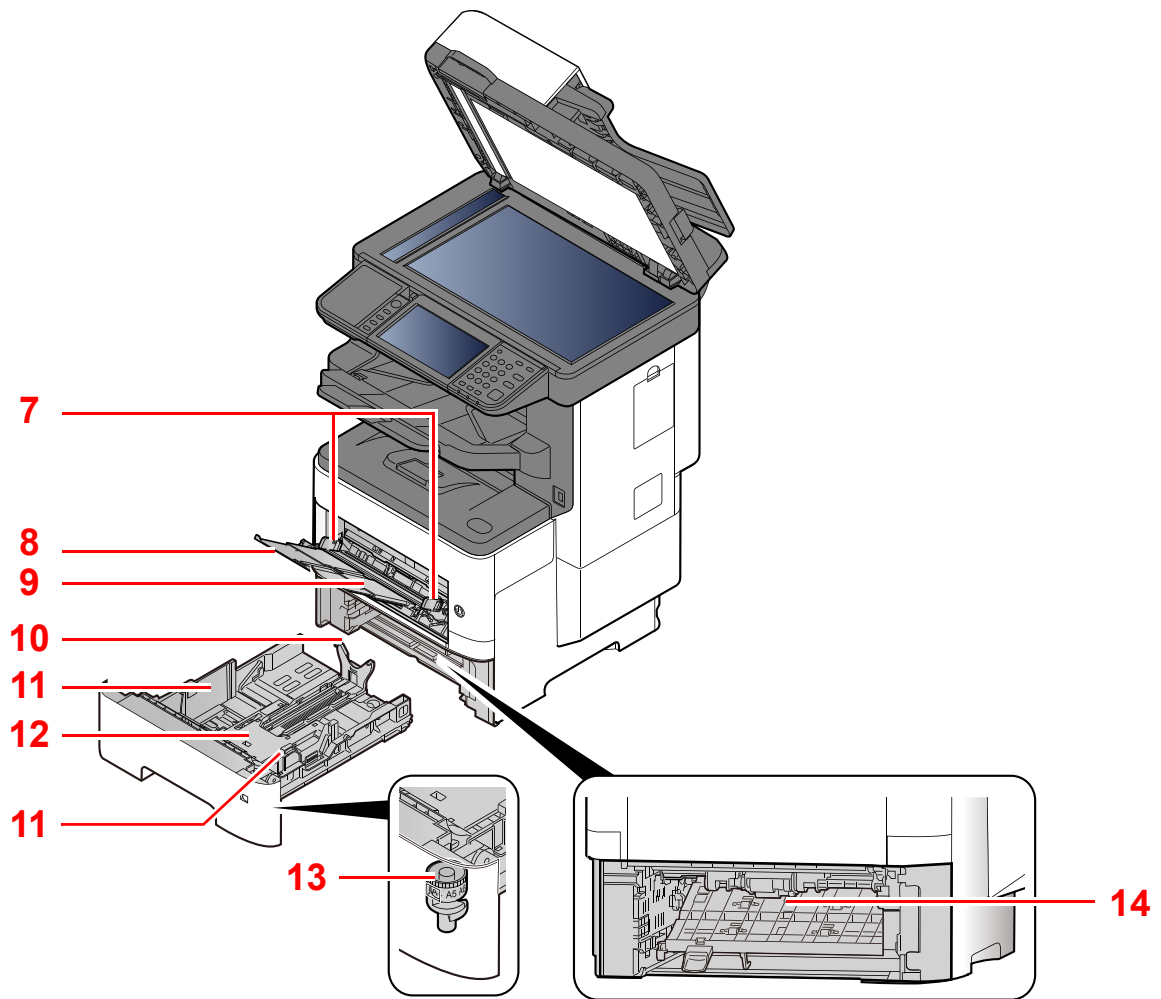


- 7 Paper Width Guides
- 8 Tray Extension
- 9 Multi Purpose Tray
- 10 Paper Length Guide

- 11 Paper Width Guides
- 12 Bottom Plate
- 13 Size Dial
- 14 Duplex Cover

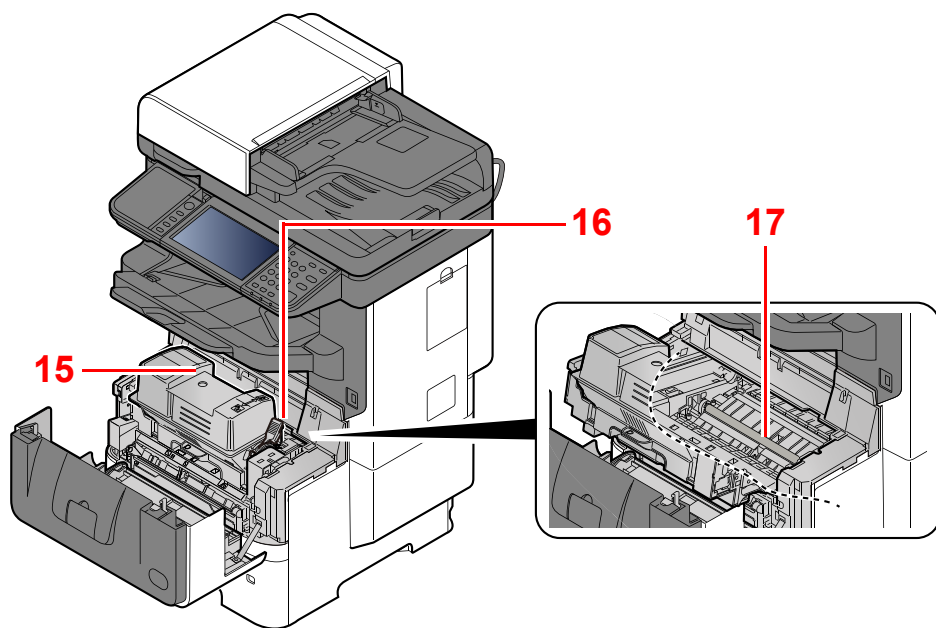


- 15 Toner Container
- 16 Toner Container Lock Lever
- 17 Registration Roller

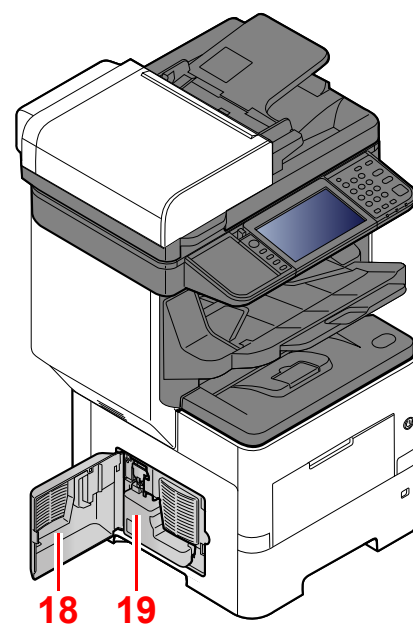

- 18 Left Cover
- 19 Waste Toner Box

With Optional Equipments Attached

Model without the finisher


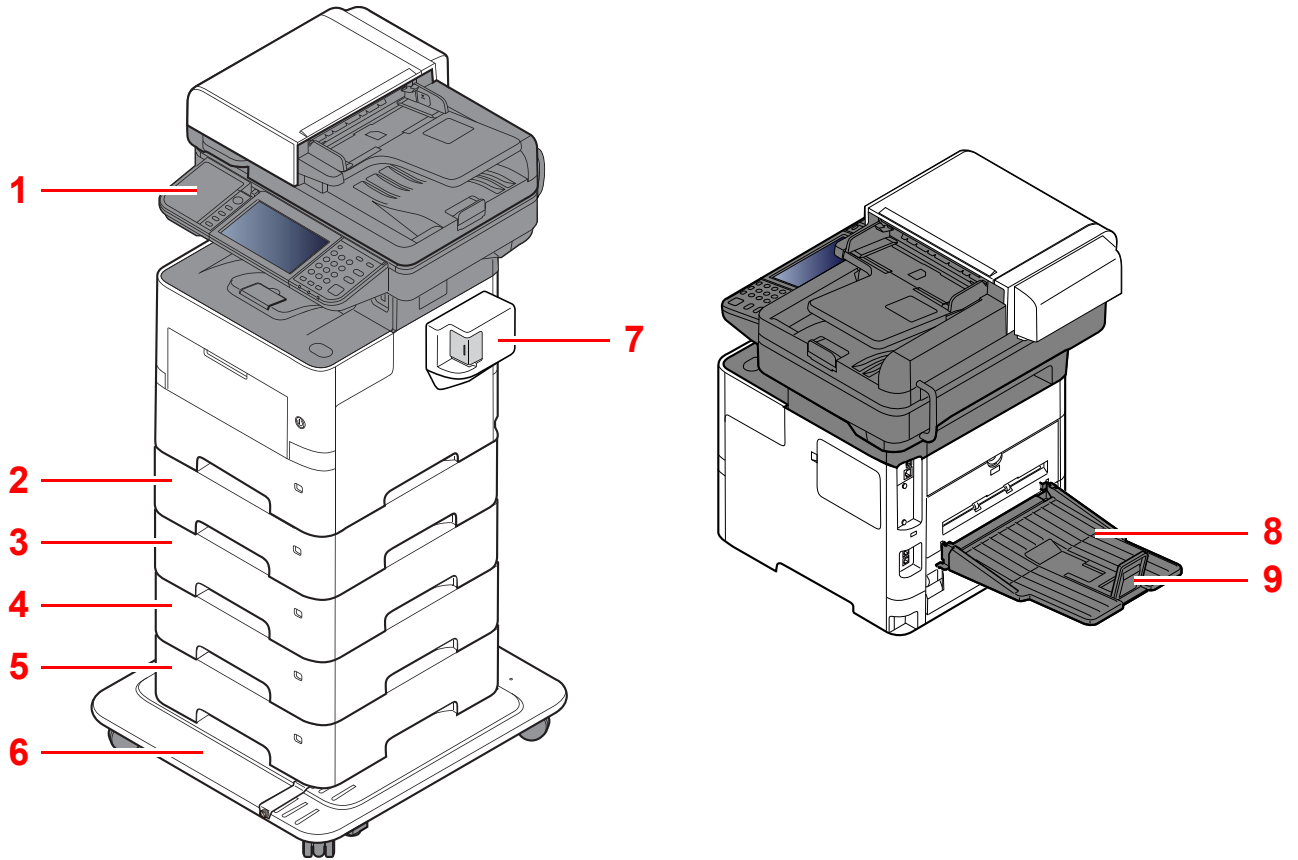


- 1 Card Reader
- 2 Cassette 2
- 3 Cassette 3
- 4 Cassette 4
- 5 Cassette 5

- 6 Caster kit
- 7 Manual Stapler
- 8 Rear Tray
- 9 Paper Stopper

➔ [Optional Equipment \(page 11-2\)](#)

Model with the finisher

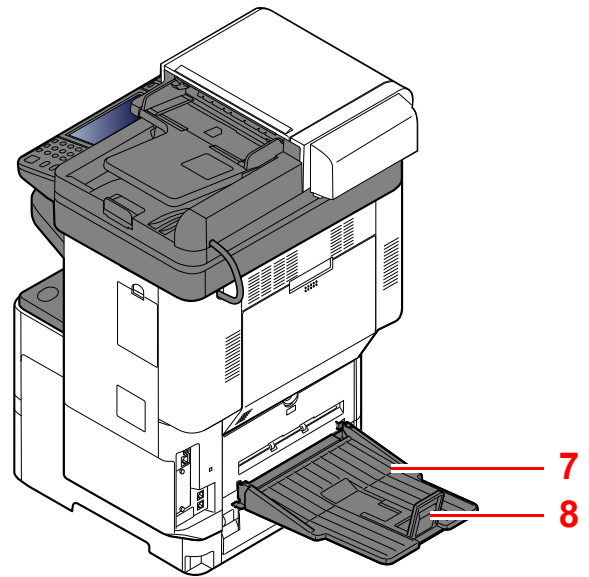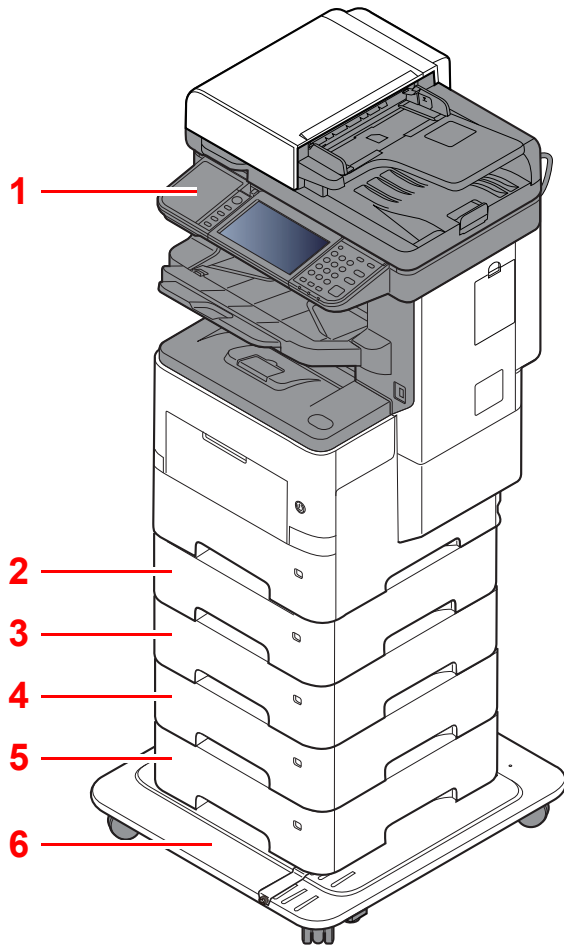

- 1 Card Reader
- 2 Cassette 2
- 3 Cassette 3
- 4 Cassette 4
- 5 Cassette 5


- 6 Caster kit
- 7 Rear Tray
- 8 Paper Stopper

➔ [Optional Equipment \(page 11-2\)](#)


Connecting the Machine and Other Devices

Prepare the cables necessary to suit the environment and purpose of the machine use.

When Connecting the Machine to the PC via USB

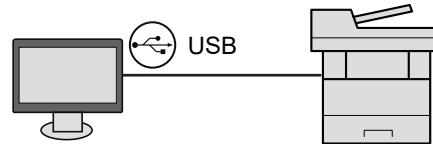

When Connecting the Machine to the PC or Tablet by network cable, Wi-Fi, or Wi-Fi direct

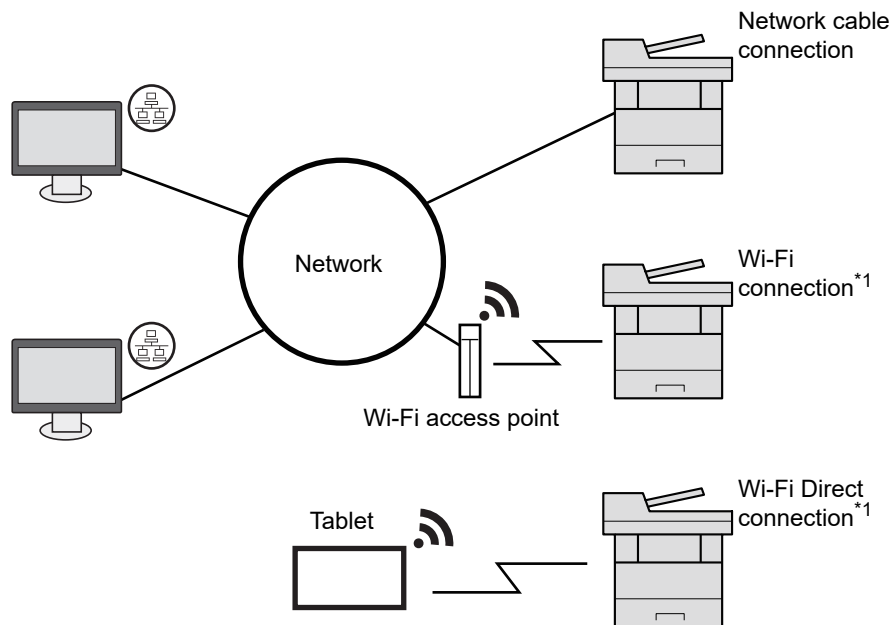

*1 Only for models with the optional Wireless Network Interface Kit (IB-36).

NOTE

If you are using wireless LAN, refer to the following.

➔ [Configuring the Wireless Network \(page 2-32\)](#)

Cables that Can Be Used

Connection Environment	Function	Necessary Cable
Connect a LAN cable to the machine.	Printer/Scanner/Network FAX	LAN cable (10BASE-T, 100BASE-TX, 1000BASE-T)
Connect a USB cable to the machine.	Printer/Scanner (TWAIN/WIA)	USB 2.0 compatible cable (Hi-Speed USB compliant, max. 5.0 m , shielded)

IMPORTANT

Using a cable other than a USB 2.0 compatible cable may cause failure.

Connecting Cables

Connecting LAN Cable


✔ **IMPORTANT**

If the power is on, turn the power switch off.

➔ [Power Off \(page 2-15\)](#)

1 Connect the cable to the machine.

- 1 Connect the LAN cable to the network interface connector.

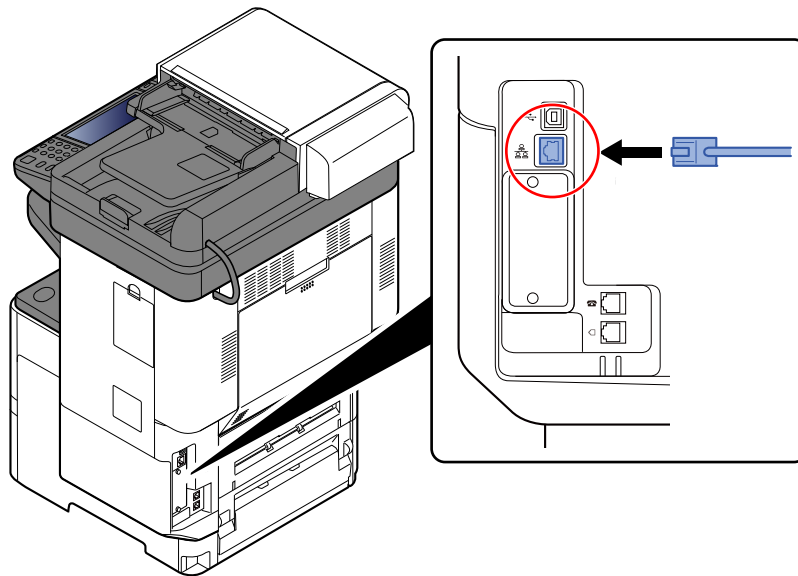

- 2 Connect the other end of the cable to the hub.

2 Power on the machine and configure the network.

➔ [Network Setup \(page 2-30\)](#)

Connecting USB Cable


✔ IMPORTANT

If the power is on, turn the power switch off.

➔ [Power Off \(page 2-15\)](#)

1 Connect the cable to the machine.

- 1 Connect the USB cable to the USB interface connector located on the left side of the body.

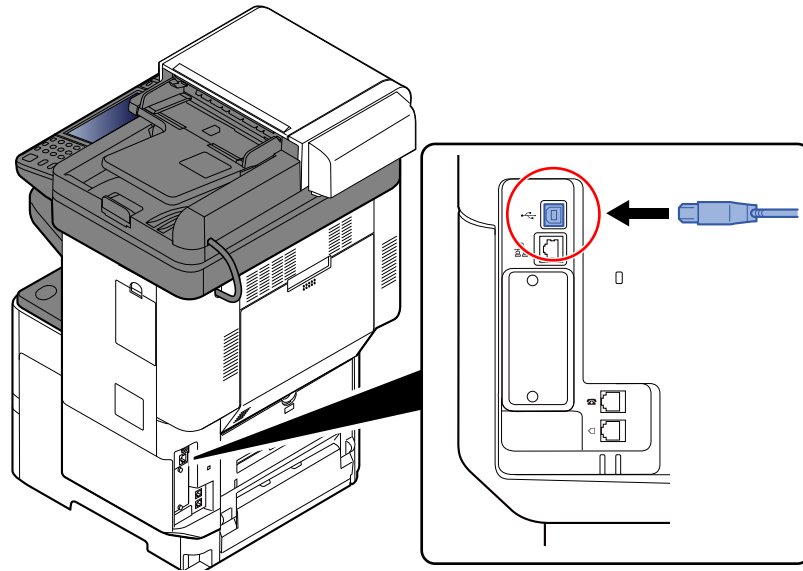


- 2 Connect the other end of the cable to the PC.

2 Power on the machine.

Connecting the Power Cable

1 Connect the cable to the machine.

Connect one end of the supplied power cable to the machine and the other end to a power outlet.

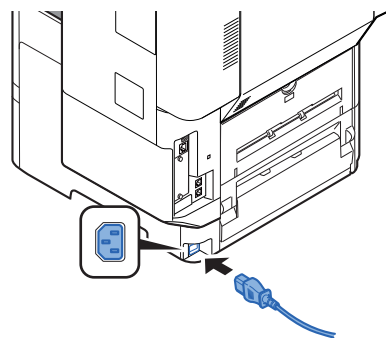


✔ IMPORTANT

Only use the power cable that comes with the machine.

Power On/Off

Power On

1 Turn the power switch on.

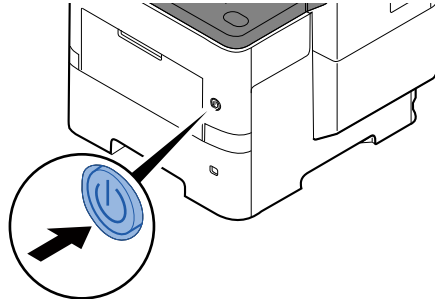


✔ IMPORTANT

When turning off the power switch, do not turn on the power switch again immediately. Wait more than 5 seconds, and then turn on the power switch.

Power Off

1 Turn the power switch off.

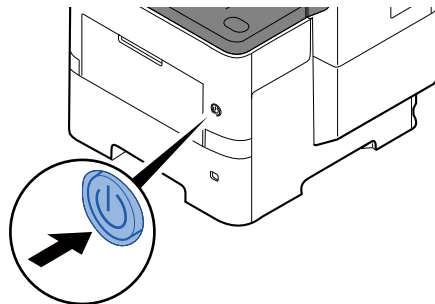

The confirmation message for power supply off is displayed.

➔ [Show Power Off Message \(page 8-21\)](#)

It takes approximately 3 minutes for power off.

⚠ CAUTION






If this machine will be left unused for an extended period (e.g. overnight), turn it off at the main power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.

✔ IMPORTANT

- If using the products equipped with the fax function, note that turning the machine off at the main power switch disables fax transmission and reception.
- Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.

Using the Operation Panel

Operation Panel Keys

	Displays the Home screen.	 Copy	Function Key: These keys enable various functions and applications, including copy and scan, to be registered. ➔ Function Key Assignment (page 8-20)
Status/ Job Cancel 	Displays the Status/Job Cancel screen.	 Send	
		 FAX	






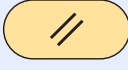






Touch panel.
Displays buttons for configuring machine settings.

Blinks while printing or sending/receiving.


Blinks while the machine is accessing the machine memory, fax memory or USB drive (general purpose item).

Lights or blinks when an error occurs and a job is stopped.

	Displays the System Menu/Counter screen.		Authenticates user switching, and exits the operation for the current user (i.e. log out).		Puts the machine into Sleep Mode. Recovers from Sleep if in Sleep Mode.
	Numeric keys. Enter numbers and symbols.	Clear 	Clears entered numbers and characters.	Reset 	Returns settings to their default states.
		Quick No. Search 	Specifies registered information such as address numbers and user IDs by number.	Stop 	Cancels or pauses the job in progress.
		Enter 	Finalizes numeric key entry, and finalizes details during setting of functions. Operates linked with the on-screen [OK].	Start 	Starts copying and scanning operations and processing for setting operations.

Adjusting the Operation Panel Angle

The angle of the operation panel can be adjusted.

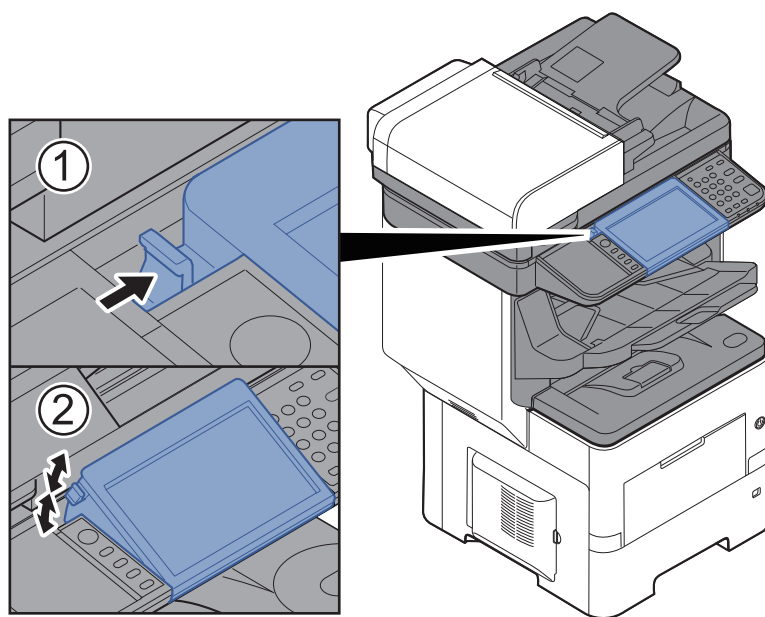


Touch Panel

Home Screen




This screen is displayed by selecting the **[Home]** key on the operation panel. Touching an icon will display the corresponding screen.

You can change the icons to display on the Home screen as well as its background.

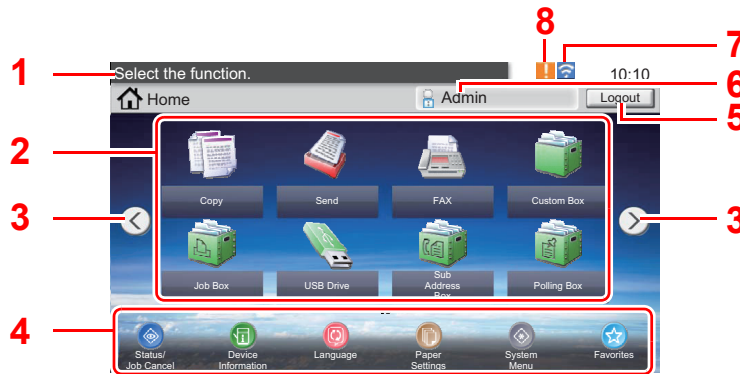➔ [Editing the Home Screen \(page 2-19\)](#)



* The appearance may differ from your actual screen, depending on your configuration and option settings.

No.	Item	Description
1	Message	Displays the message depending on the status.
2	Desktop	Displays a maximum of 40 function icons* ¹ including the functions registered in favorite. Icons that are not displayed on the first page will appear by changing the page.
3	Screen-switching keys	Use these buttons to switch between desktop pages.  NOTE You can also switch views by touching the screen and moving the finger sideways (i.e. swiping). 
4	Taskbar	Displays a maximum of 8 task icons.
5	[Logout]	Logs out the current user. This is displayed when user login administration is enabled.
6	Login User Name	Displays the logged-in user name. This is displayed when user login administration is enabled. Selecting "Login User Name" will display the information of the logged-in user.
7	Status Icon (Wi-Fi)	The icon is displayed when Wi-Fi is connected. When Wi-Fi is not connected, "  " is displayed.
8	Status Icon (Error)	The icon is displayed during network startup or error.

*1 A maximum of 42 icons can be displayed. A maximum of 16 icons can be displayed for installed applications.

Editing the Home Screen

You can change the background of the Home screen as well as which icons are displayed.

1 Display the screen.

- 1 [System Menu/Counter] key > [Home]

 

NOTE

You can only change the settings by logging in with administrator privileges.
The factory default login user name and login password are set as shown below.



Login User Name: 6000
Login Password: 6000

2 Configure the settings.

The available settings are shown below.

Item	Description
Customize Desktop	Specify the function icons to display on the desktop. Select [] to display the screen for selecting the function to display. Select the function to display and [OK]. Select an icon and [Previous] or [After] to change the display position of the selected icon on the Desktop. To delete an icon from desktop, select the desired one and select [].
Customize Taskbar	Specify the task icons to display on the taskbar.
Wallpaper	Configure the wallpaper of the Home screen. Value: Images 1 to 8

Available Functions to Display on Desktop

Function	Icon	Description	Reference page
Copy ^{*1}		Displays the Copy screen.	page 5-16
Send ^{*1}		Displays the Send screen.	page 5-18
FAX		Displays the FAX screen.	Refer to the FAX Operation Guide .
Custom Box ^{*2}		Displays the Custom Box screen.	page 5-39
Job Box ^{*1}		Displays the Job Box screen.	page 4-12
USB Drive ^{*1}		Displays the USB Drive screen.	page 5-50
Sub Address Box		Displays the Sub Address Box screen.	Refer to the FAX Operation Guide .
Polling Box		Displays the Polling Box screen.	Refer to the FAX Operation Guide .
Send to Me (E-mail) ^{*3}		Displays the Send screen. The E-mail address of the logged-in user is set as the destination.	page 5-27
Send to Me for Box (E-mail) ^{*2*3}		Displays the Custom Box screen. The E-mail address of the logged-in user is set as the destination.	page 5-48
FAX Memory RX Box		Displays the FAX Memory RX Box screen.	Refer to the FAX Operation Guide .
FAX Server		Displays the FAX Server screen.	page 8-47
Favorites		Calls up the registered favorite. The icon will change according to the function of the favorite.	page 5-6
Application Name ^{*4}		Displays the selected applications.	page 5-11










*1 Selected at the time of shipment from factory.

*2 Displayed when the optional hard disk/SSD is installed.

*3 Displayed when user login administration is enabled.

*4 The icon of the application appears.

Available Functions to Display on Taskbar

Function	Icon	Description	Reference page
Status/Job Cancel		Displays the Status screen. If an error occurs, the icon will show "!". Once the error clears, the display will return to normal.	-
Device Information		Displays the Device Information screen. Check the system and network information. You can also check information on the options that are used.	page 2-22
Language		Displays the Language setting screen in System Menu.	page 8-5
Paper Settings		Display the paper settings screen.	page 8-12
Wi-Fi Direct		Configures Wi-Fi Direct settings and displays a list of information about machines that are enabled to use the network.	page 2-36
System Menu		Displays the System Menu screen.	page 8-2
Favorites		Displays the favorite list screen.	page 5-6
Outgoing FAX Log		Displays the Outgoing FAX Log screen.	Refer to the FAX Operation Guide .
Incoming FAX Log		Displays the Incoming FAX Log screen.	Refer to the FAX Operation Guide .

Display for Device Information

Shows device information. Allows you to check system and network information, as well as options that are used.

- 1 Select [**Device Information**] in the home screen.
- 2 Check the device information.


Device information

Tab	Description
Identification/Network	You can check ID information such as the model name, serial number, host name and location, and the IP address.
Wi-Fi^{*1}	You can check ID information such as the model name, serial number, host name and location, and the IP address of the wireless network.
FAX	You can check the local fax number, local fax name, local fax ID and other fax information.
Software Ver./Capability	You can check the software version and performance.
Option	You can check information on the options that are used.


*1 Displayed only when the wireless network function is available on the machine.

Functions key

This screen appears when the Functions icon is selected.

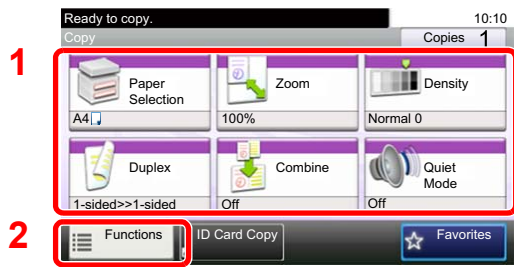

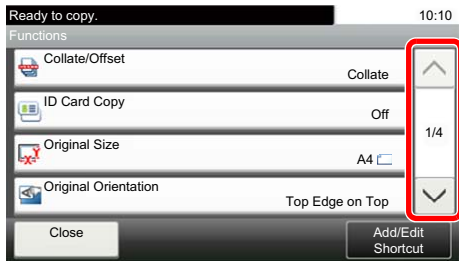


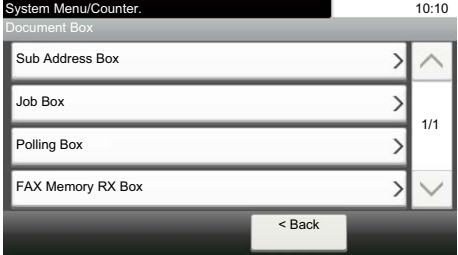



- 1 Display functions.
- 2 Select **[Functions]** to display other functions.
- 3 Select [^] or [v] to scroll up and down.



Display of Keys That Cannot Be Set

Keys of features that cannot be used due to feature combination restrictions or non-installation of options are in a non-selectable state.

Normal	Grayed out
	 <p>In the following cases, the key is grayed out and cannot be selected.</p> <ul style="list-style-type: none"> • Cannot be used in combination with a feature that is already selected.
Normal	Hidden
 	  <p>Cannot be used because an option is not installed. Example: When a hard disk/SSD is not installed, [Custom Box] does not appear.</p>


 **NOTE**
If a key that you wish to use is grayed out, the settings of the previous user may still be in effect. In this case, select the [**Reset**] key and try again.

Enter key and Quick No. Search key

This section explains how to use the [Enter] key and [Quick No. Search] key on the operation panel.

Using the [Enter] key ()

The [Enter] key has the same function as the key with the Enter mark (↵), such as the [OK ↵] key and the [Close ↵].

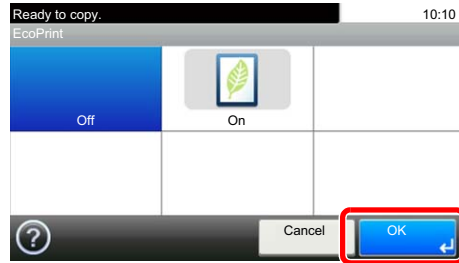


Using the [Quick No. Search] key ()

The [Quick No. Search] key is used when using the numeric keys to directly enter the number, for example, when specifying the destination for the transmission using a speed-dial number.

For more information on speed dialing, refer to the following:

➔ [Specifying Destination \(page 5-20\)](#)

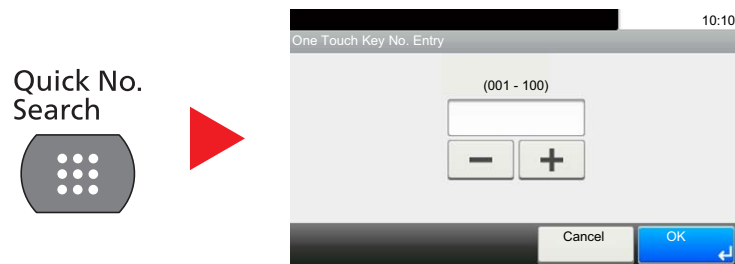

Help Screen

If you have difficulty operating the machine, you can check how to operate it using the touch panel.



When the [?] (help) is displayed on the touch panel, you can select it to display the Help screen. The Help screen shows explanations of functions and how to use them.

Example: Checking the paper selection Help screen

1 Display the Paper Selection screen.

→ [Paper Selection \(page 6-11\)](#)

2

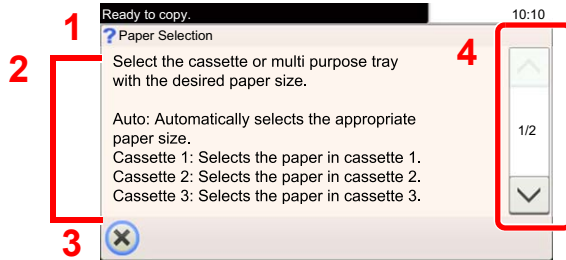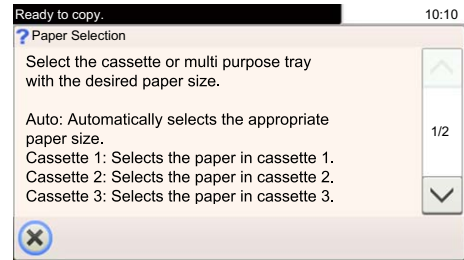

- 1 Help titles
- 2 Displays information about functions and machine operation.
- 3 Closes the Help screen and returns to the original screen.
- 4 Scrolls up and down when the help text cannot be displayed in its entirety on a single screen.

Login/Logout

If you are setting a function that requires administrator rights, or if user login administration is enabled, you must enter your login user name and login password.

NOTE

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000


You will be unable to login if you forget your login user name or login password. In this event, login with administrator privileges and change your login user name or login password.

Login

Normal login

1 Enter the login user name and login password to login.

- 1 If this screen is displayed during operations, select **[Keyboard]** to enter the login user name.

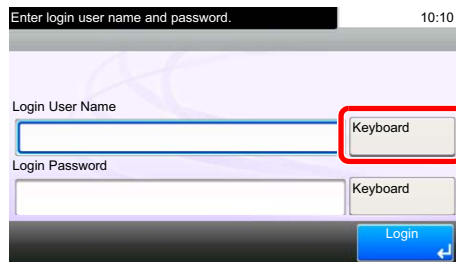

The screenshot shows a login interface with the title "Enter login user name and password." and a time display of "10:10". There are two input fields: "Login User Name" and "Login Password". Each field has a "Keyboard" button to its right. A red rectangular box highlights the "Keyboard" button for the "Login User Name" field. At the bottom right, there is a blue "Login" button with a right arrow.

➔ [Character Entry Method \(page 11-10\)](#)


- 2 **[Password]** > Enter the login password > **[OK]**

NOTE

If **[Network Authentication]** is selected as the user authentication method, authentication destinations are displayed and either **[Local]** or **[Network]** can be selected as the authentication destination.

2 Select **[Login]**.

Simple Login

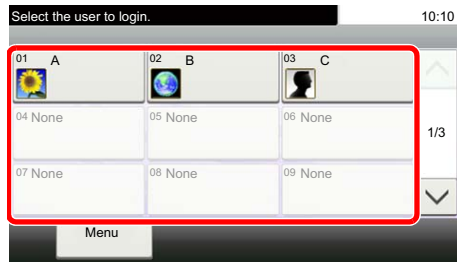

If this screen is displayed during operations, select a user and log in.



NOTE

If a user password is required, an input screen will be displayed.

➔ [Simple Login Settings \(page 9-27\)](#)

Logout



To logout from the machine, select the **[Authentication/Logout]** key to return to the login user name/login password entry screen.

Users are automatically logged out in the following circumstances:

- When the machine enters the sleep state.
- When the auto panel reset function is activated.

Default Settings of the Machine

Before using this machine, configure such settings as date and time, network configuration, and energy saving functions as needed. The Machine Setup Wizard is launched when the equipment is turned on for the first time after being installed. Also, configure the following settings if necessary.

NOTE

The default settings of the machine can be changed in System Menu. For settings that are configurable from System Menu, refer to the following:

➔ [Setup and Registration \(System Menu\) \(page 8-1\)](#)

Setting Date and Time

Follow the steps below to set the local date and time at the place of installation.

When you send an E-mail using the transmission function, the date and time as set here will be printed in the header of the E-mail message. Set the date, time and time difference from GMT of the region where the machine is used.

NOTE

• To make changes after this initial configuration, refer to the following:

➔ [Date/Timer/Energy Saver \(page 8-49\)](#)

• The correct time can be periodically set by obtaining the time from the network time server.

➔ [Command Center RX User Guide](#)

1 Display the screen.

[System Menu/Counter] key > [Date/Timer/Energy Saver]

2 Configure the settings.

[Time Zone] > [Date/Time] > [Date Format]

Item	Description
Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.
Date/Time	Set the date and time for the location where you use the machine. If you perform Send as E-mail, the date and time set here will be displayed on the header. Value: Year (2000 to 2037), Month (1 to 12), Day (1 to 31), Hour (00 to 23), Minute (00 to 59), Second (00 to 59)
Date Format	Select the display format of year, month, and date. The year is displayed in Western notation. Value: Month/Day/Year, Day/Month/Year, Year/Month/Day

Network Setup

Configuring the Wired Network

The machine is equipped with network interface, which is compatible with network protocols such as TCP/IP (IPv4), TCP/IP (IPv6), NetBEUI, and IPSec. It enables network printing on the Windows, Macintosh, UNIX and other platforms.

Set up TCP/IP (IPv4) to connect to the Windows network.

The configuration methods are as follows

Configuration Method	Description	Reference Page
Configuring the Connection from the Operation Panel on This Machine	Use Quick Setup Wizard when configuring the network in a wizard-style screen, without setting individually in System menu.	Quick Setup Wizard (page 2-40)
Configuring Connections on the Web Page	For the equipped network interface, the connection can be set by using Command Center RX. For the optional IB-50, the connection can be set by using the dedicated Web page.	Command Center RX User Guide IB-50 Operation Guide
Setting the Connection by Using the Setup Utility of IB-50	This is the setup tool included in the CD of IB-50. You can use it on Windows.	IB-50 Operation Guide

Be sure to connect the network cable before configuring the settings.

➔ [Connecting LAN Cable \(page 2-13\)](#)

For other network settings, refer to the following:

➔ [Network \(page 8-28\)](#)



NOTE

If user login administration is enabled, you can only change the settings by logging in with administrator privileges. If user login administration is disabled, the user authentication screen appears. Enter a login user name and password, and select **[Login]**.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

IPv4 setting

1 Display the screen.

[System Menu/Counter] key > [System/Network] > [Network] > [Wired Network Settings] > [TCP/IP Setting] > [IPv4]

2 Configure the settings.

When using DHCP server

[DHCP]: Set to [On].

When setting the static IP address

[DHCP]: Set to [Off].

[IP Address]: Enter the address.

[Subnet Mask]: Enter the subnet mask in decimal representation (0 to 255).

[Default Gateway]: Enter the address.

[Auto-IP]: Set to [Off].

When using the Auto-IP, enter "0.0.0.0" in [IP Address].



IMPORTANT

After changing the setting, restart the network from System Menu, or turn the machine OFF and then ON.

➔ [Restart Network \(page 8-40\)](#)



NOTE

Ask your network administrator for the IP address in advance, and have it ready when you configure this setting.

In the following cases, set the IP address of DNS server on the Command Center RX.

- When using the host name with "DHCP" setting set to "Off"
- When using the DNS server with IP address that is not assigned by DHCP automatically.

Setting the IP Address of the DNS Server, refer to the following:

➔ [Command Center RX User Guide](#)

Configuring the Wireless Network

When the Wireless Network Interface Kit (IB-36 and IB-51) is installed on the machine and the connection settings are configured, it is possible to print or send in a wireless network (wireless LAN) environment. The configuration methods are as follows:

Configuration Method	Description	Reference Page
Configuring the Connection from the Operation Panel on This Machine	Use Quick Setup Wizard when configuring the network in a wizard-style screen, without setting individually in System menu.	Quick Setup Wizard (page 2-40)
	Use Wi-Fi Settings to configure the network in details from System menu.	Wi-Fi Settings (page 8-28)
Setting the Connection by Using the Wi-Fi Setup Tool	This is the tool included in the Product Library. You can configure the connection according to the instructions provided by the wizard.	Setting the Connection by Using the Wi-Fi Setup Tool (page 2-32)
Configuring Connections on the Web Page	For the IB-36, the connection can be set from the Command Center RX.	Command Center RX User Guide
	For the IB-51, the connection can be set on the dedicated Web page.	IB-51 Operation Guide
Setting the Connection by Using the Setup Utility of IB-51	This is the setup tool included in the CD of IB-51. You can use it on both Windows and Mac OS.	IB-51 Operation Guide

NOTE

When you want to switch to the network interface other than Wired (default) after installing an optional Network Interface Kit (IB-50) and a Wireless Network Interface Kit (IB-36 or IB-51), select the desired setting on "Primary Network (Client)".

➔ [Primary Network \(Client\) \(page 8-42\)](#)

Setting the Connection by Using the Wi-Fi Setup Tool

To send the Wi-Fi settings configured in the Wi-Fi Setup Tool to the machine, connect the computer or handheld device with the machine locally. The connection methods are wired connection via LAN cable and wireless LAN connection (Wi-Fi Direct).

NOTE

- Before using the Wi-Fi Setup Tool, connect your computer to this machine locally with wired LAN cable or Wi-Fi Direct.
- To use Wi-Fi Direct, confirm that the Wi-Fi Direct is enabled (Wi-Fi Direct is set to **[ON]**) and Restart Network from the operation panel, before your computer will be connected to this machine with Wi-Fi Direct.
- To use a wired LAN cable directly connected to the machine, the Auto-IP (Link-local) address will be assigned to the machine and the computer. This machine applies Auto-IP as the default settings.
- Configure the settings on the operation panel if your computer supports WPS.


➔ [Wi-Fi Settings \(page 8-28\)](#)

Wired Connection by Using LAN Cable

1 Connect the machine with a computer

- 1 Connect the machine with a computer via LAN cable when the machine is powered on.
- 2 Turn on the computer.
IP address (link local address) of the machine and computer is generated automatically.


2 Insert the DVD.

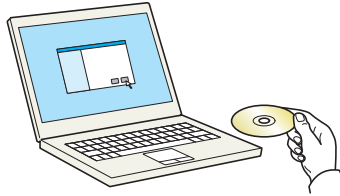

NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select **[Cancel]**.
- If the autorun screen is displayed, click **[Run setup.exe]**.
- If the user account management window appears, click **[Yes]** (**[Allow]**).


3 Display the screen.

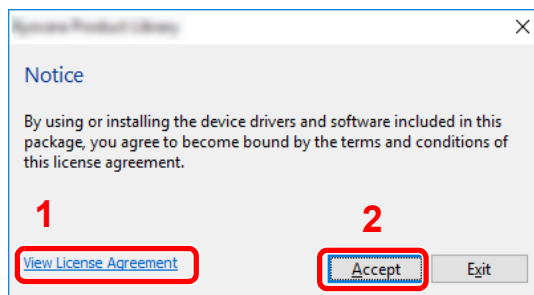

- 1 Click **[View License Agreement]** and read the License Agreement.
- 2 Click **[Accept]**.

4 Select **[Maintenance]**.

5 **[Wi-Fi Setup Tool]** > **[OK]**

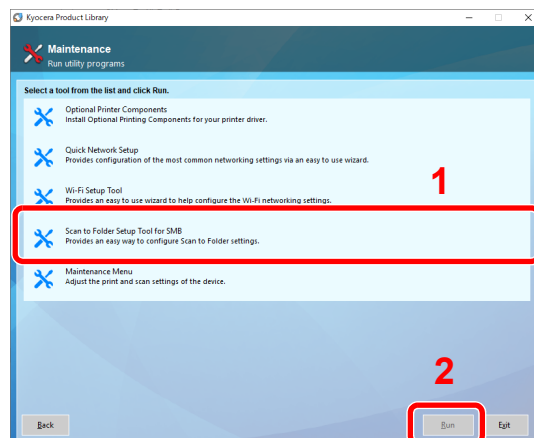

6 Configure the settings.

1 [Do not use automatic configuration] > [Next] > [Next]

2 [Use LAN cable] > [Next] > [Next]

3 [Easy setup] > [Next]

The machine is detected.

NOTE

- Only one machine can be searched using Wi-Fi Setup Tool. It may take times to search the machine.
- If the machine is not detected, select [Advanced setup] > [Next]. Select [Express] or [Custom] as device discovery method and specify the IP address or host name to search the machine.

4 Select the machine > [Next]

5 Select [Use the device settings.] on [Authentication mode], and enter the login user name and password. Login user name and Password are both Admin.

6 Configure the communication settings > [Next]

7 Change the settings of access point as necessary > [Next]

The network is configured.

Wireless LAN Connection by Using Wi-Fi Direct

1 Display the screen.

[System Menu/Counter] key > [System/Network] > [Network] > [Wi-Fi Direct Settings] > [Wi-Fi Direct]

2 Configure the settings.

[On] > [OK]


3 Restart the network.

[System Menu/Counter] key > [System/Network] > [Network] > [Restart Network] > [Yes]

4 Connect a computer or a handheld device with the machine.

➔ [Setting Wi-Fi Direct \(page 2-36\)](#)

5 Insert the DVD.

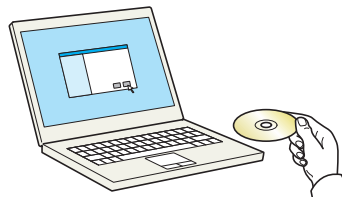




NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select **[Cancel]**.
- If the autorun screen is displayed, click **[Run setup.exe]**.
- If the user account management window appears, click **[Yes]** (**[Allow]**).


6 Display the screen.

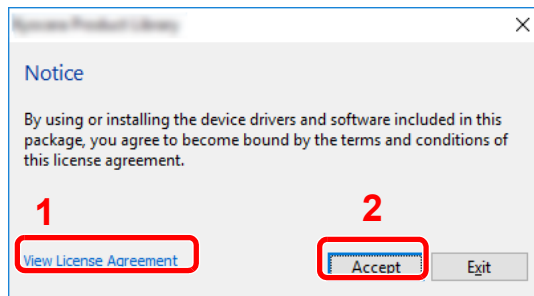

- 1 Click **[View License Agreement]** and read the License Agreement.
- 2 Click **[Accept]**.

7 Select [Maintenance].

8 [Wi-Fi Setup Tool] > [OK]

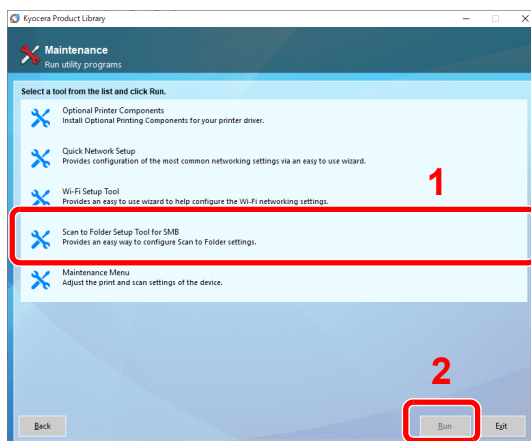

9 Configure the settings.

- 1 **[Do not use automatic configuration]** > **[Next]** > **[Next]**
- 2 **[Wi-Fi Direct]** > **[Next]** > **[Next]**
- 3 **[Advanced setup]** > **[Next]**
 Select **[Express]** or **[Custom]** as device discovery method and specify the IP address or host name to search the machine.
- 4 Select the machine > **[Next]**
- 5 Select **[Use the device settings.]** on **[Authentication mode]**, and enter the login user name and password. Login user name and Password are both Admin.
- 6 Configure the communication settings > **[Next]**
- 7 Change the settings of access point as necessary > **[Next]**
 The network is configured.

Setting Wi-Fi Direct

You can install the optional Wireless Network Interface Kit (IB-36) on the machine and configure the connection settings to print in a Wi-Fi Direct environment. The configuration methods are as follows:

Configuring the Connection from the Operation Panel on This Machine

Connecting to Computers or Handheld Devices that Support Wi-Fi Direct

1 Display the screen.

[System Menu/Counter] key > [System/Network] > [Network] > [Wi-Fi Direct Settings] > [Wi-Fi Direct]

2 Configure the settings.

[On] > [OK]

3 Restart the network.

[System Menu/Counter] key > [System/Network] > [Network] > [Restart Network] > [Yes]

4 Specify the machine name from the computer or handheld device.

If a confirmation message appears on the operation panel of the machine, select [Yes].

The network between this machine and the handheld device is configured.

Connecting to Computers or Handheld Devices Unsupported Wi-Fi Direct

Here, we'll explain the procedures for connecting to iOS handheld devices.

1 Display the screen.

[System Menu/Counter] key > [System/Network] > [Network] > [Wi-Fi Direct Settings] > [Wi-Fi Direct]

2 Configure the settings.

[On] > [OK]

3 Restart the network.

[System Menu/Counter] key > [System/Network] > [Network] > [Restart Network] > [Yes]

4 [Home] key > [Wi-Fi Direct]

5 Note the network name (SSID), IP address, and password.

6 Configure the handheld device.

1 [Settings] > [Wi-Fi]

2 Select the network name (SSID) appeared in step 5 from the list.

3 Enter the password that was provided in step 5 > [Connect]

The network between this machine and the handheld device is configured.

Configuring the Connection by Using Push Button

When your computer or handheld device does not support Wi-Fi Direct but supports WPS, you can configure the network using push button.

1 Display the screen.

[System Menu/Counter] key > [System/Network] > [Network] > [Wi-Fi Direct Settings] > [Wi-Fi Direct]

2 Configure the settings.

[On] > [OK]

3 Restart the network.

[System Menu/Counter] key > [System/Network] > [Network] > [Restart Network] > [Yes]

4 [Home] key > [Wi-Fi Direct]

5 Press the push button on the computer or handheld device and select [Push Button] on the screen of operation panel simultaneously.

The network between this machine and the computer or handheld device is configured.

IMPORTANT

You can connect up to three handheld devices at the same time using Wi-Fi Direct setting. When the devices that support Wi-Fi Direct are connected, if you want to connect other device, disconnect the already-connected devices from the network. The disconnection methods are as follows:

- Disconnect the network from the computer or handheld computer
- Disconnecting all devices from the network on the operation panel
Select [Home] key > [Wi-Fi Direct] > [Connected Device List] > [Disconnect All]
- Configuring auto disconnecting time from the System menu
 - ➔ [Wi-Fi Settings \(page 8-28\)](#)
- Configuring auto disconnecting time from the Command Center RX
 - ➔ [Command Center RX User Guide](#)

Energy Saver function

If a certain period of time elapses after the machine is last used, the machine automatically enters Low Power Mode to reduce power consumption. If a further period of time elapses without the machine being used, the machine automatically enters Sleep Mode, which minimizes power consumption.

Low Power Mode

If the machine is not operated for a certain period of time, the energy saver indicator will light up and the screen will become dark to reduce power consumption. This status is referred to as Low Power Mode.

"Low power." will be displayed on the screen.

The amount of time before entering Low Power Mode: 1 minutes (default setting).

If print data is received during Low Power Mode, the machine automatically wakes up and starts printing. Also when fax data arrives while the machine is in Low Power Mode, the machine automatically wakes up and starts printing.

To resume, perform one of the following actions.

- Select any key on the operation panel.
- Touch the touch panel.
- Place originals in the document processor.

Recovery time from Low Power Mode is as follows.

- 10 seconds or less

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.




NOTE

If the Low Power Timer is equal to the Sleep Timer, a Sleep mode is preceded.

Sleep and Auto Sleep

Sleep

To enter Sleep, select the **[Energy Saver]** key. Touch panel and all indicators on the operation panel will go out to save a maximum amount of power except the Energy Saver indicator. This status is referred to as Sleep.

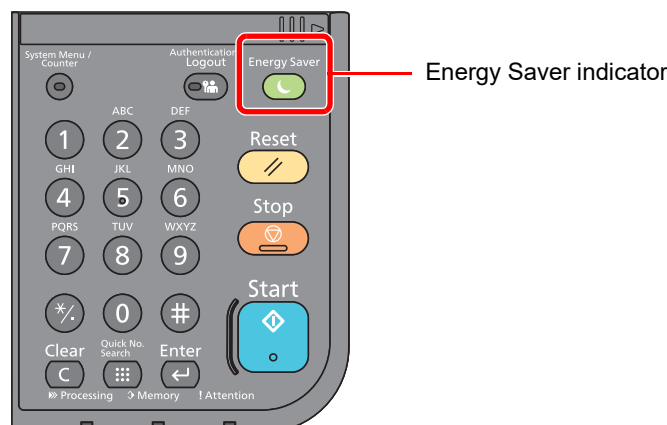

If print data is received during Sleep, the machine automatically wakes up and starts printing.

Also when fax data arrives while the machine is in Sleep, the machine automatically wakes up and starts printing.

To resume, perform the following actions.

- Select the **[Energy Saver]** key.

The machine will be ready to operate within 25 seconds.

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.

Auto Sleep

Auto Sleep automatically switches the machine into Sleep if left idle for a preset time.

The default preset time is 1 minute.

To change the preset sleep time, refer to the following:

➔ [Quick Setup Wizard \(page 2-40\)](#)

Sleep Rules (models for Europe)

You can set whether sleep mode operates for each function. When the machine enters sleep mode, the ID card cannot be recognized.

For more information on Sleep Rules settings, refer to the following:

➔ [Sleep Rules \(models for Europe\) \(page 8-50\)](#)

Sleep Level (Energy Saver and Quick Recovery) (models except for Europe)

For sleep level, you can toggle between the following two modes: Energy Saver mode and Quick Recovery mode. The default setting is Energy Saver mode.

Energy Saver mode reduces power consumption even more than Quick Recovery mode, and allows Sleep Mode to be set separately for each function. The ID card cannot be recognized.



NOTE

If the optional Network Interface Kit is installed, Energy Saver cannot be specified.

For more information on Sleep Level settings, refer to the following:

➔ [Quick Setup Wizard \(page 2-40\)](#)

Power Off Rule (models for Europe)

The Power Off Rule is used to stop the power from automatically turning off.

The default preset time is 3 days.

For more information on Power Off Rule settings, refer to the following:

➔ [Power Off Rule \(models for Europe\) \(page 8-51\)](#)

Quick Setup Wizard

For FAX functions, paper settings, Energy Saver functions and network settings, the following settings can be configured in a wizard-style screen.

FAX Setup	Configures basic fax settings.	
	1. Dialing/RX Mode	Dialing Mode Reception Mode Auto (DRD)
	2. Local FAX Info.	Local FAX Name Local FAX Number Local FAX ID TTI
	3. Sound	Speaker Volume Monitor Volume Job Finish Buzzer
	4. Rings	Normal Answering Machine FAX/TEL Switch
	5. Redial	Retry Times
Paper Setup	Configures the paper size and media type of paper to be used in cassettes and multi purpose tray.	
	1. Cassette 1	Paper Size ^{*1} Media Type
	2. Cassette 2 ^{*2}	Paper Size ^{*1} Media Type
	3. Cassette 3 ^{*2}	Paper Size ^{*1} Media Type
	4. Cassette 4 ^{*2}	Paper Size ^{*1} Media Type
	5. Cassette 5 ^{*2}	Paper Size ^{*1} Media Type
	6. MP Tray	Paper Size Media Type
Energy Saver Setup	Configures sleep mode.	
	1. Sleep Mode	Sleep Timer Sleep Level (models except for Europe)
	2. Low Power Mode	Low Power Timer
	3. Weekly Timer	Weekly Timer Schedule ^{*3} Retry Times ^{*3} Retry Interval ^{*3}

Network Setup	Configures network settings.		
	1. Network	Wi-Fi* ⁴	Wi-Fi Available Network
		Wired Network	Obtain IP Address IP Address* ⁵ Subnet Mask* ⁵ Default Gateway* ⁵

*1 Displayed only when the size dial on the cassette is set to "Other".

*2 Displayed only when the optional paper feeder is installed.

*3 This function is displayed when [Weekly Timer] is set to [On].

*4 This function is displayed when the optional Wireless Network Interface Kit is installed.

*5 Not displayed when "Obtain IP Address" is set to [Auto (DHCP)].



NOTE

If the user authentication screen appears, enter your login user name and login password and select [Login].

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

1 Display the screen.

[System Menu/Counter] key > [Quick Setup Wizard]

2 Select a function.

3 Configure the settings.

Start the wizard. Follow the instructions on the screen to configure settings.

[Next>]>



NOTE

If you experience difficulty configuring the settings, refer to the following:

➔ [Help Screen \(page 2-26\)](#)

Control	Description
End	Exits the wizard. Settings configured so far are applied.
Previous	Returns to the previous item.
Skip	Advances to the next item without setting the current item.
Next	Advances to the next screen.
Back	Returns to the previous screen.
Complete	Register the settings and exit the wizard.

Installing Software

Install appropriate software on your PC from the included DVD (Product Library) if you want to use the printer function of this machine or perform TWAIN / WIA transmission or Network FAX transmission from your PC.

Software on DVD (Windows)

You can use either **[Express Install]** or **[Custom Install]** can be selected for the installation method. **[Express Install]** is the standard installation method. To install components that cannot be installed by **[Express Install]**, use **[Custom Install]**.

For details on Custom Installation, refer to the following:

➔ [Custom Install \(page 2-46\)](#)

Software	Description	Express Install
KX DRIVER	This driver enables files on a computer to be printed by the machine. Multiple page description languages (PCL XL, KPDL, etc.) are supported by a single driver. This printer driver allows you to take full advantage of the features of the machine. Use this driver to create PDF files.	<input type="radio"/>
KX XPS DRIVER	This printer driver supports the XPS (XML Paper Specification) format developed by Microsoft Corporation.	-
KPDL mini-driver/PCL mini-driver	This is a Microsoft MiniDriver that supports PCL and KPDL. There are some restrictions on the machine features and option features that can be used with this driver.	-
FAX Driver	This makes it possible to send a document created in a computer software application as a fax via the machine.	-
Kyocera TWAIN Driver	This driver enables scanning on the machine using a TWAIN-compliant software application.	<input type="radio"/>
Kyocera WIA Driver	WIA (Windows Imaging Acquisition) is a function of Windows that enables reciprocal communication between an imaging device such as a scanner and an image processing software application. An image can be acquired using a WIA-compliant software application, which is convenient when a TWAIN-compliant software application is not installed in the computer.	-
KYOCERA Net Viewer	This is a utility that enables monitoring of the machine on the network.	-
Status Monitor	This is a utility that monitors the printer status and provides an ongoing reporting function.	<input type="radio"/>
File Management Utility	This makes it possible to send and save a scanned document to a specified network folder.	-
KYOCERA Net Direct Print	This makes it possible to print a PDF file without starting Adobe Acrobat/Reader.	-
FONTS	These are display fonts that enable the machine's built-in fonts to be used in a software application.	<input type="radio"/>



NOTE

Installation on Windows must be done by a user logged on with administrator privileges.

Installing Software in Windows


Express Install

The following procedure is an example for installing the software in Windows 10 using **[Express Install]**.

For details on **[Custom Install]**, refer to the following:

➔ [Custom Install \(page 2-46\)](#)


1 Insert the DVD.

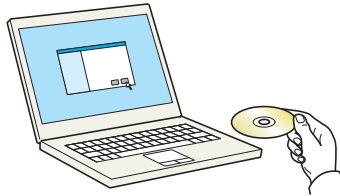

NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select **[Cancel]**.
- If the autorun screen is displayed, click **[Run setup.exe]**.
- If the user account management window appears, click **[Yes]** (**[Allow]**).


2 Display the screen.

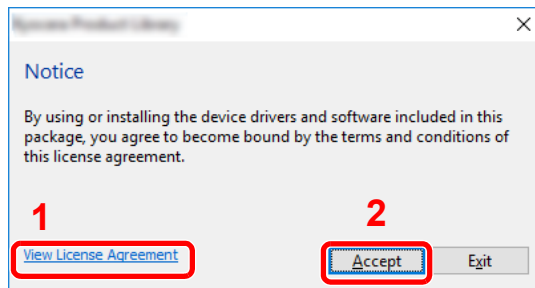

- 1 Click **[View License Agreement]** and read the License Agreement.
- 2 Click **[Accept]**.

3 Select **[Express Install]**.

4 Install the software.

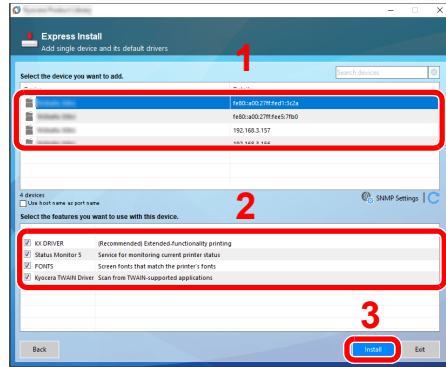

You can also select **[Use host name as port name]** and set to use the host name of the standard TCP/IP port. (A USB connection cannot be used.)


When you click **[Install]**, a screen asking for your cooperation with data collection will be displayed. Select one of the answer choices and click **[OK]**.

✔ IMPORTANT


If Wi-Fi or Wi-Fi Direct is enabled, be sure to specify the IP address for the port name. Installation may fail if the host name is specified.

💡 NOTE

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable and that it is turned on and click **C** (Refresh).
- If the Windows security window appears, click **[Install this driver software anyway]**.
- To install Status Monitor on Windows versions preceding Windows 8, it is necessary to install Microsoft .NET Framework 4.0 beforehand.

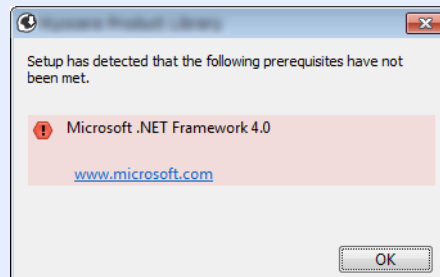

5 Finish the installation.

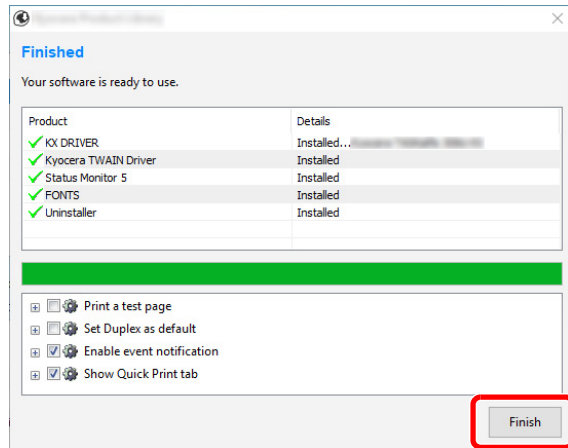

When "**Your software is ready to use.**" appears, you can use the software. To print a test page, click the "**Print a test page**" checkbox and select the machine.

Click [**Finish**] to exit the wizard.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.


If you are installing the TWAIN driver, continue by configuring the following:

➔ [Setting TWAIN Driver \(page 2-52\)](#)

Custom Install

The following procedure is an example for installing the software in Windows 10 using [Custom Install].


1 Insert the DVD.

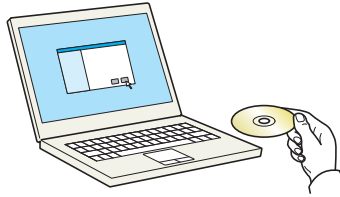

NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [Cancel].
- If the autorun screen is displayed, click [Run setup.exe].
- If the user account management window appears, click [Yes] ([Allow]).

2 Display the screen.

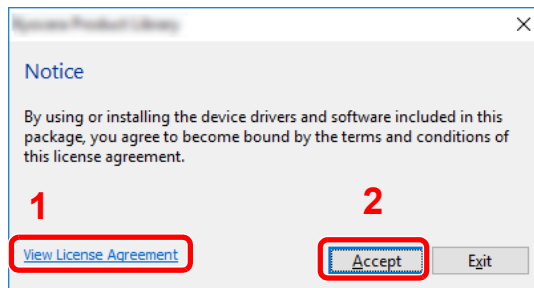


- 1 Click [View License Agreement] and read the License Agreement.
- 2 Click [Accept].

3 Select [Custom Install].

4 Install the software.

- 1 Select the device to be installed.

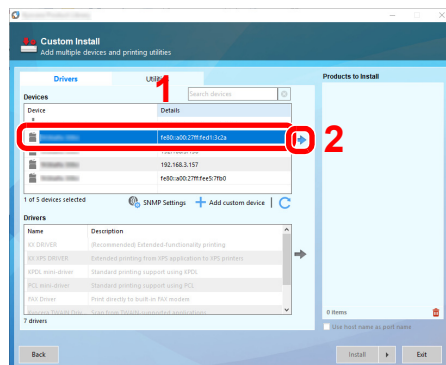


IMPORTANT

If Wi-Fi or Wi-Fi Direct is enabled, be sure to specify the IP address for the port name. Installation may fail if the host name is specified.


NOTE

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable and that it is turned on and click **C** (Refresh).
- If the desired device does not appear, select **[Add custom device]** to directly select the device.


2 Select the driver to be installed.

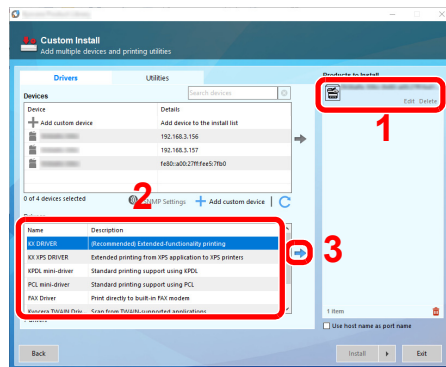

3 Click [Utilities] tab and select the utility to be installed.

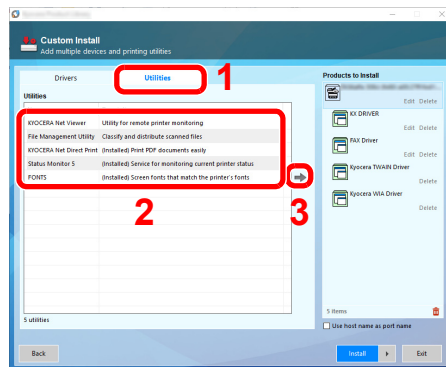

4 Click **[Install]**.

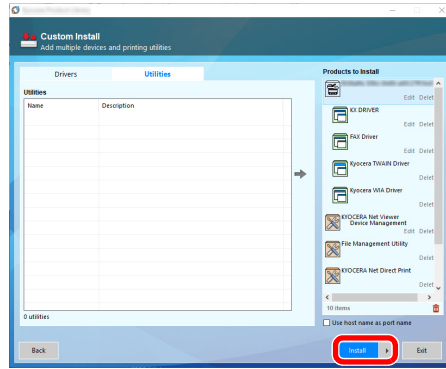


When you click **[Install]**, a screen asking for your cooperation with data collection will be displayed. Select one of the answer choices and click **[OK]**.




NOTE

- To install Status Monitor on Windows versions preceding Windows 8, it is necessary to install Microsoft .NET Framework 4.0 beforehand.

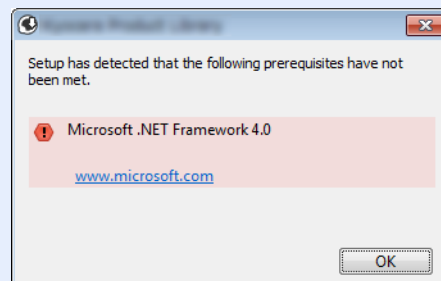

5 **Finish the installation.**

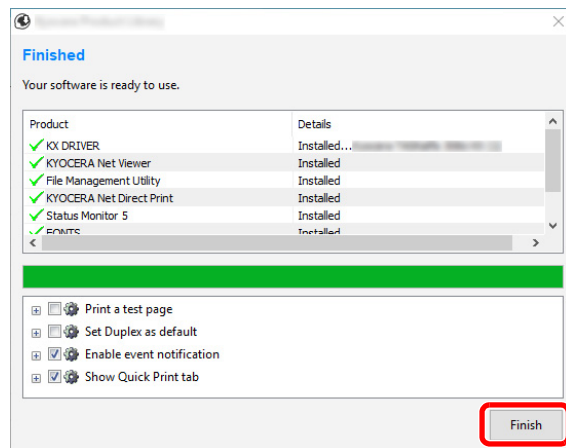

When "**Your software is ready to use.**" appears, you can use the software. To print a test page, click the "**Print a test page**" checkbox and select the machine.

Click **[Finish]** to exit the wizard.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

If you are installing the TWAIN driver, continue by configuring the following:

- ➔ [Setting TWAIN Driver \(page 2-52\)](#)

Uninstalling the Software

Perform the following procedure to delete the Software from your computer.

NOTE

Uninstallation on Windows must be done by a user logged on with administrator privileges.

1 Display the screen.


Click the search box in the taskbar, and type “Uninstall Kyocera Product Library” in there. Select **[Uninstall Kyocera Product Library]** in the search list. The Software Uninstall Wizard is displayed.

NOTE

- In Windows 8.1, click **[Search]** in charms, and enter "Uninstall Kyocera Product Library" in the search box. Select **[Uninstall Kyocera Product Library]** in the search list.
- In Windows 7, click **[Start]** button on the Windows and then select **[All Programs]**, **[Kyocera]**, and **[Uninstall Kyocera Product Library]** to display the Uninstall Wizard.

2 Uninstall the software.

Place a check in the check box of the software to be deleted.

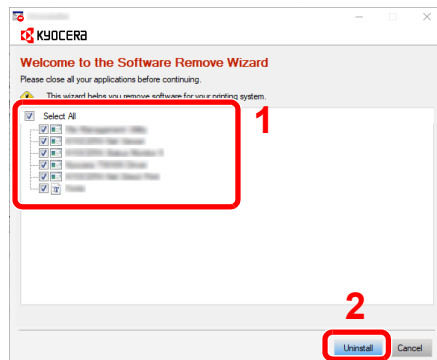

3 Finish uninstalling.

If a system restart message appears, restart the computer by following the screen prompts. This completes the software uninstallation procedure.

NOTE

- The software can also be uninstalled using the Product Library.
- In the Product Library screen, click **[Uninstall]**, and follow the on-screen instructions to uninstall the software.


Installing Software in Mac Computer

The machine's printer functionality can be used by a Mac computer.

NOTE


- Installation on Mac OS must be done by a user logged on with administrator privileges.
 - When printing from a Macintosh computer, set the machine's emulation to **[KPDL]** or **[KPDL(Auto)]**.
- ➔ [Printer \(page 8-25\)](#)
- If connecting by Bonjour, enable Bonjour in the machine's network settings.
- ➔ [Bonjour \(page 8-32\)](#)
- In the Authenticate screen, enter the name and password used to log in to the operating system.
 - When printing via AirPrint, you do not have to install the software.

1 Insert the DVD.

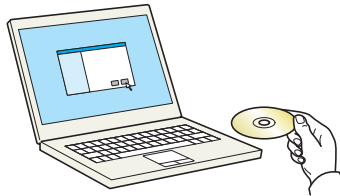


Double-click the **[Kyocera]** icon.

2 Display the screen.

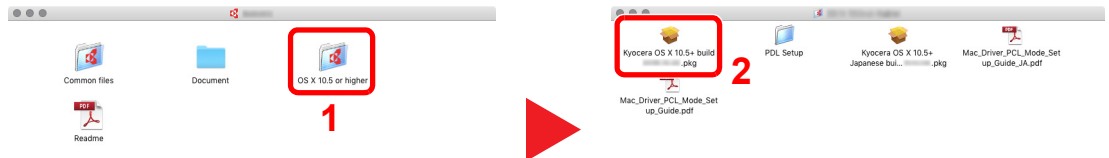

Double-click **[Kyocera OS X x.x]** depending on your Mac OS version.

3 Install the Printer Driver.

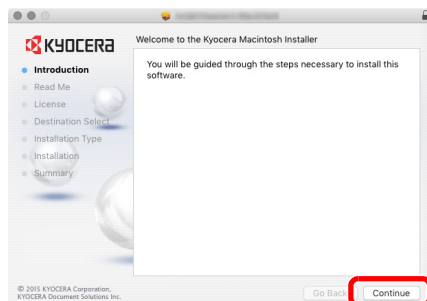


Install the printer driver as directed by the instructions in the installation software.

This completes the printer driver installation.


If a USB connection is used, the machine is automatically recognized and connected.
If an IP connection is used, the settings below are required.

4 Configure the printer.


- 1 Open System Preferences and add the printer.

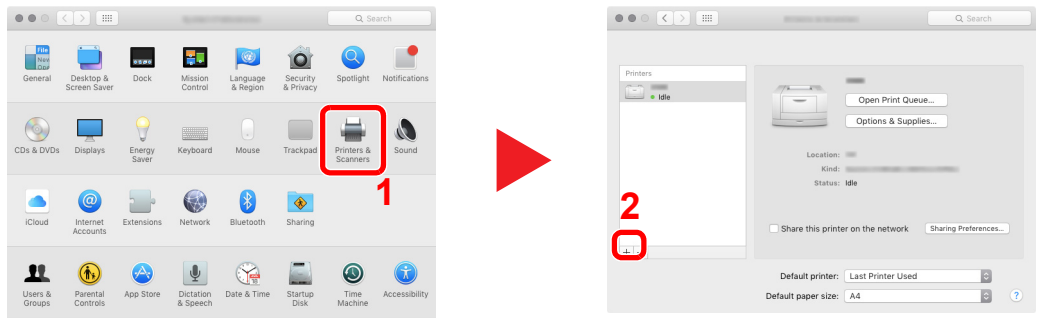

- 2 Select [Default] and click the item that appears in "Name" and then select the driver in "Use".

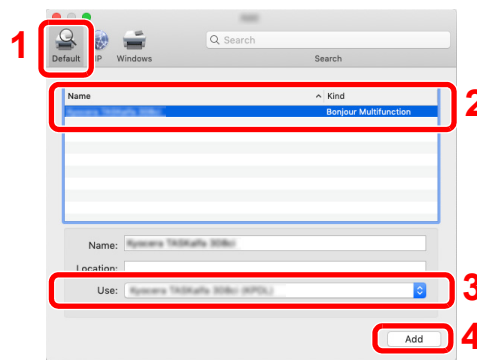


- 3 The selected machine is added.

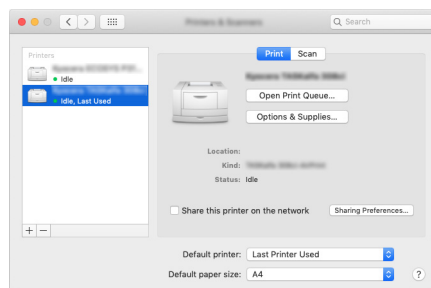

NOTE

When using an IP connection, click the IP icon for an IP connection and then enter the host name or IP address. The number entered in "Address" will automatically appear in "Name". Change if needed.

- 4 Select the printer added newly, and click the [Options & Supplies...] to select the options equipped with the machine.

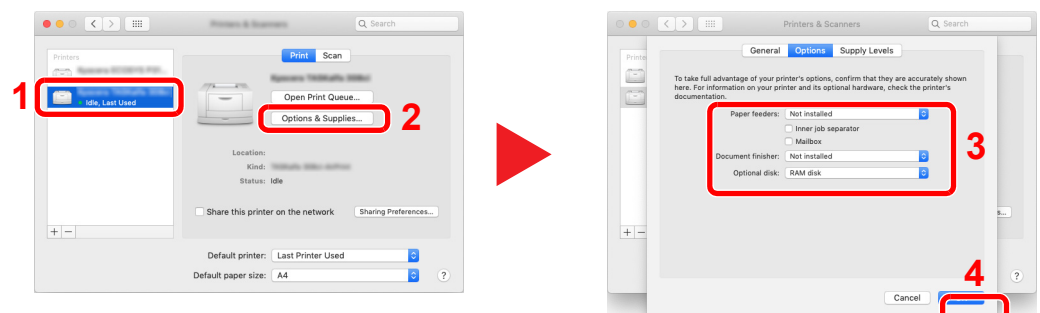

Setting TWAIN Driver

Register this machine to the TWAIN Driver. Instructions are based on interface elements as they appear in Windows 10.


1 Display the screen.

- 1 Click the search box in the taskbar, and type "TWAIN Driver Setting" in there. Select **[TWAIN Driver Setting]** in the search list. TWAIN Driver screen is displayed.

NOTE


- In Windows 8.1, click **[Search]** in charms, and enter "TWAIN Driver Setting" in the search box. Select **[TWAIN Driver Setting]** in the search list.
- In Windows 7, select **[Start]** button on the Windows, **[All Programs]**, **[Kyocera]** and then **[TWAIN Driver Setting]**. TWAIN Driver screen appears.

- 2 Click **[Add]**.

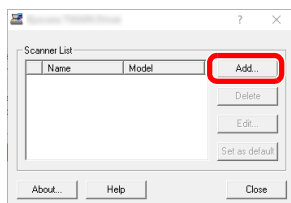


2 Configure TWAIN Driver.

(Network)

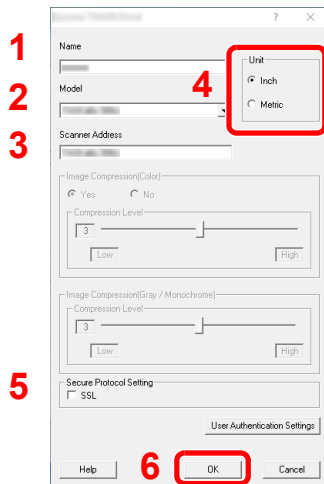

- 1 Enter the machine name.
- 2 Select this machine from the list.
- 3 Enter the machine's IP address or host name.
- 4 Set units of measurement.
- 5 When using SSL, select the checkbox beside SSL.
- 6 Click **[OK]**.

(USB)

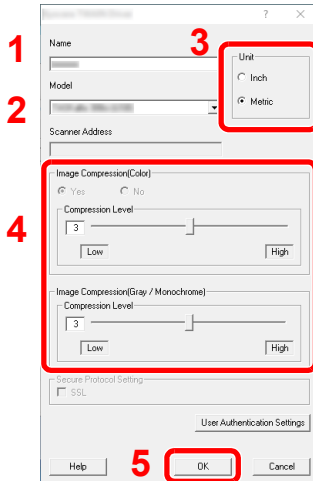


- 1 Enter the machine name.
- 2 Select this machine from the list.
- 3 Set units of measurement.
- 4 Set the Compression Level.
- 5 Click **[OK]**.



NOTE

When the machine's IP address or host name is unknown, contact Administrator.

3 Finish registering.

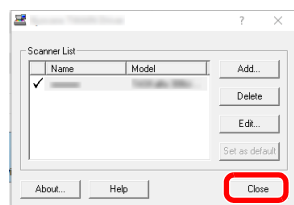

NOTE

Click **[Delete]** to delete the added machine. Click **[Edit]** to change names.

Setting WIA Driver

Register this machine to the WIA Driver. Instructions are based on interface elements as they appear in Windows 10.


1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**. Click the search box in the Control Panel, and type "Scanner" in there. Select **[View scanners and cameras]** in the search list. The Scanners and Cameras screen is displayed.

NOTE


- In Windows 8.1, click **[Search]** in charms, and enter "View scanners and cameras" in the search box. Select **[View scanners and cameras]** in the search list then the Scanners and Cameras screen appears.
- In Windows 7, click **[Start]** button on the Windows and enter **[Scanner]** in **[Program and File Search]**. Click **[View scanners and cameras]** in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and click **[Properties]**.

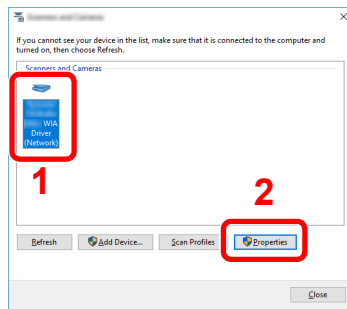


2 Configure WIA Driver.

(Network)

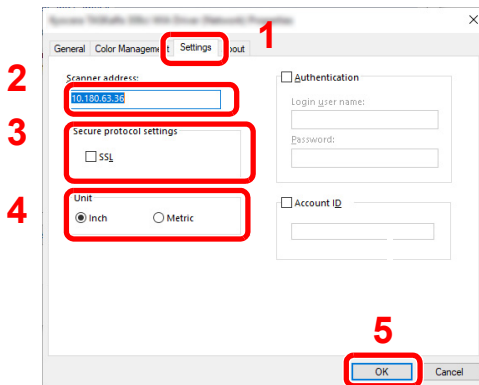

- 1 Click the **[Settings]** tab.
- 2 Enter the machine IP addresses or host name.
- 3 When using SSL, select the checkbox beside SSL.
- 4 Set units of measurement.
- 5 Click **[OK]**.

(USB)

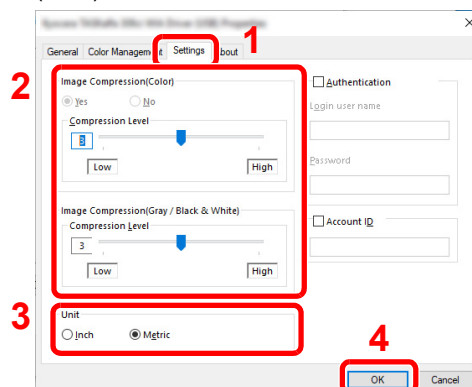

- 1 Click the **[Settings]** tab.
- 2 Set the Compression Level.
- 3 Set units of measurement.
- 4 Click **[OK]**.

Checking the Counter

Check the number of sheets printed and scanned.

- 1 Display the screen.**
[System Menu/Counter] key > [Counter]
- 2 Check the counter.**

Additional Preparations for the Administrator

In addition to the information provided in this chapter, the administrator of this machine should check the following, and configure the settings as needed.

Sending Documents to a PC

To Send to a Shared Folder (Send to Folder (SMB))

To send a document that has been loaded, you need to create a shared folder to receive the document on your computer.

➔ [Preparation for Sending a Document to a Shared Folder in a PC \(page 3-18\)](#)

To E-mail Scanned Images (Send as E-mail)

You can send a scanned original image as an E-mail attachment.

➔ [E-mail Settings \(page 2-64\)](#)

Strengthening the Security

This machine is shipped with two default users registered one with Machine Administrator rights, and another with Administrator rights. Logging in as this user will allow you to configure all settings; therefore, please change the login user name and password.

In addition, this machine is equipped with user authentication function, which can be configured to limit the access to this machine to only those who have a registered login name and password.

➔ [User Authentication and Accounting \(User Login, Job Accounting\) \(page 9-1\)](#)



NOTE

Protection of confidential information by TPM

With the optional security chip called TPM (Trusted Platform Module) installed in the machine, confidential information can be safely protected. The encryption key used to encrypt confidential information on this machine is stored in a dedicated storage area on the TPM chip. Since this storage area cannot be read from outside the TPM, confidential information can be safely protected.

I want to...	Function	Reference page
Restrict the users of the machine.	User Login	page 9-2
	Auto Panel Reset	page 8-49
	ID Card Settings* ¹	page 9-30
Restrict the basic functions that can be used.	Local Authorization	page 9-18
	Group Authorization Set.	page 9-19
Prevent another user from handling the documents stored in the machine.	Custom Box* ²	page 5-39
Prevent the data stored in the machine from being leaked.	Data Overwrite* ³	Refer to the Data Encryption/Overwrite Operation Guide.
	Encryption* ³	
	PDF Encryption Functions	page 6-32
Completely delete the data on the machine before disposing of the machine.	Data Sanitization	page 8-46

*1 The optional Card Authentication Kit is required.

*2 The optional hard disk/SSD is required.

*3 This function is displayed when the optional hard disk/SSD is installed and the Data Encryption/Overwrite is activated.

I want to...	Function	Reference page
Protect the transmission from interception and wiretapping.	IPP over SSL	page 8-35
	HTTPS	page 8-34
	LDAP Security	Refer to the Command Center RX User Guide .
	SMTP Security	page 8-39
	POP3 Security	page 8-39
	FTP Encrypted TX	page 6-36
	Enhanced WSD (SSL)	page 8-36
	IPSec	page 8-32
SNMPv3	page 8-34	

Command Center RX

If the machine is connected to the network, you can configure various settings using Command Center RX.

This section explains how to access Command Center RX, and how to change security settings and the host name.

➔ Command Center RX User Guide

NOTE

To fully access the features of the Command Center RX pages, enter the User Name and Password and click **[Login]**. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu. The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: Admin

Login Password: Admin

Settings that the administrator and general users can configure in Command Center RX are as follows.

Setting	Description	Administ-rator	General User
Device Information	The machine's structure can be checked.	<input type="radio"/>	<input type="radio"/>
Job Status	Displays all device information, including print and scan jobs, storing jobs, scheduled jobs, and job log history.	<input type="radio"/>	<input type="radio"/>
Document Box	Add or delete document boxes, or delete documents within a document box.	<input type="radio"/>	<input type="radio"/> *1
Address Book	Create, edit, or delete addresses and address groups.	<input type="radio"/>	<input type="radio"/> *1
Device Settings	Configure the advanced settings of the machine.	<input type="radio"/>	-
Function Settings	Configure the advanced function settings.	<input type="radio"/>	-
Network Settings	Configure the network advanced settings.	<input type="radio"/>	-
Security Settings	Configure the security advanced settings.	<input type="radio"/>	-
Management Settings	Configure the advanced management settings.	<input type="radio"/>	-

*1 The logged in user may not be able to configure some settings, depending on the permissions of the user.

NOTE

Here, information on the FAX settings has been omitted.

➔ FAX Operation Guide

Accessing Command Center RX


1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.

Click in the following order to check the machine's IP address and the host name.

[Device Information] in the home screen > [Identification/Network]

Examples: `https://192.168.48.21/` (for IP address)
`https://MFP001` (if the host name is "MFP001")

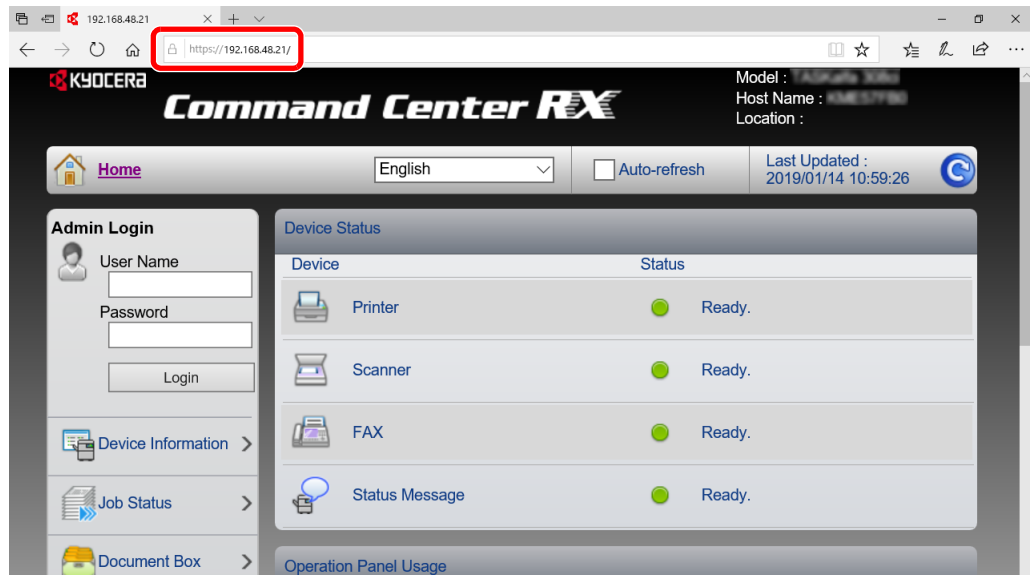

The web page displays basic information about the machine and Command Center RX as well as their current status.



NOTE

If the screen "There is a problem with this website's security certificate." is displayed, configure the certificate.

➔ Command Center RX User Guide

You can also continue the operation without configuring the certificate.

2 Configure the function.

Select a category from the navigation bar on the left of the screen.



NOTE


To fully access the features of the Command Center RX pages, enter the User Name and Password and click [Login]. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu. The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: Admin
Login Password: Admin

Changing Security Settings

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Network]
- 3 Log in with administrator privileges.

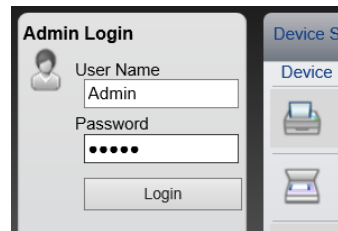

The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: Admin
Login Password: Admin

- 4 Click [Security Settings].

2 Configure the Security Settings.

From the [Security Settings] menu, select the setting you want to configure.

The screenshot shows the 'Security Settings : Device Security' page. The left sidebar contains a navigation menu with 'Security Settings' highlighted in a red box. The main content area is titled 'Device Security Settings' and includes the following sections:

- Interface Block**
 - Network : Refer to this link. [Protocol](#)
 - *USB Device : Block Unblock
 - *USB Host : Block Unblock
 - *USB Drive : Block Unblock
 - *Optional Interface 1 : Block Unblock
 - *Optional Interface 2 : Block Unblock
- Lock Operation Panel**
 - Operation Panel :
- Display Status/Log**
 - Display Jobs Detail Status :
 - Display Jobs Log :



NOTE


For details on settings related to certificates, refer to the following:

➔ **Command Center RX User Guide**

Changing Device Information

1 Display the screen.


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Network]
- 3 Log in with administrator privileges.

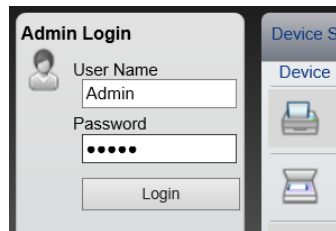

The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: Admin
Login Password: Admin

- 4 From the [Device Settings] menu, click [System].

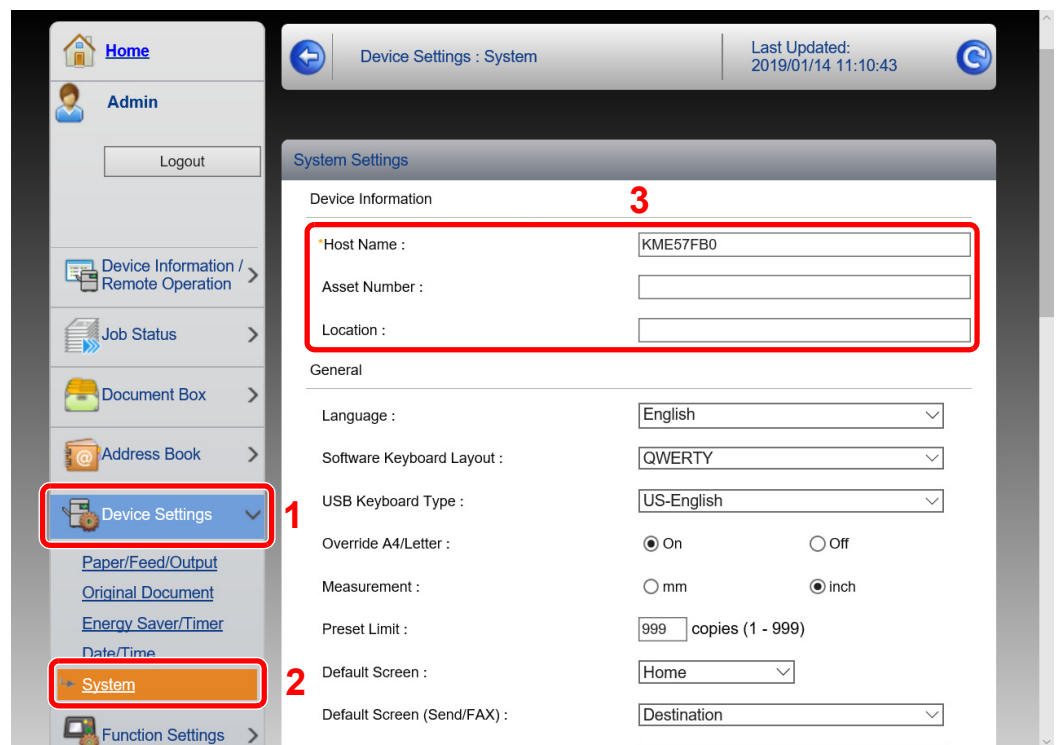

2 Specify the host name.

Enter the device information, and then click **[Submit]**.

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

To restart the network interface card, click **[Reset] in the **[Management Settings]** menu, and then click **[Restart Network]** in "Restart".**

E-mail Settings

By configuring the SMTP settings, it is possible to send the images scanned by the machine as E-mail attachments and to send E-mail notices when jobs have been completed.

To use this function, this machine must be connected to a mail server using the SMTP protocol.

In addition, configure the following.


- SMTP settings
Item: "SMTP Protocol" and "SMTP Server Name" in "SMTP"
- The sender address when the machine sends E-mails
Item: "Sender Address" in "E-mail Send Settings"
- The setting to limit the size of E-mails
Item: "E-mail Size Limit" in "E-mail Send Settings"

The procedure for specifying the SMTP settings is explained below.

1 Display the screen.

Display the SMTP Protocol screen.


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Network]
- 3 Log in with administrator privileges.

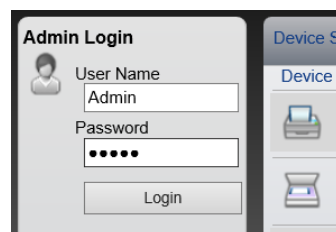

The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)


Login User Name: Admin
Login Password: Admin

4 From the [Network Settings] menu, click [Protocol].

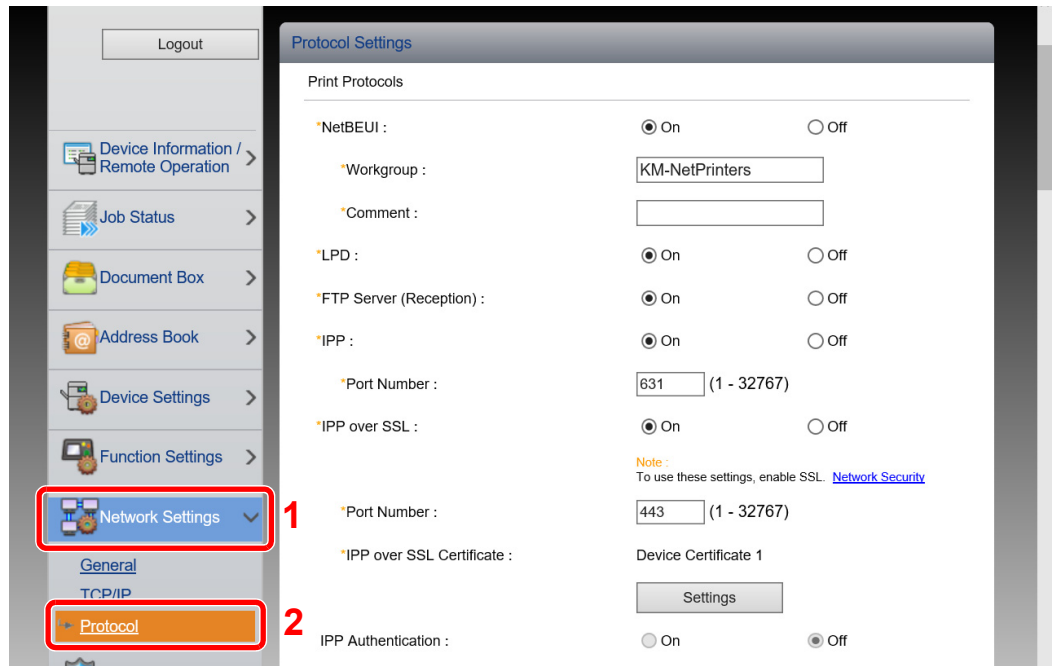

2 Configure the settings.


Set "SMTP (E-mail TX)" to [On] in the "Send Protocols".

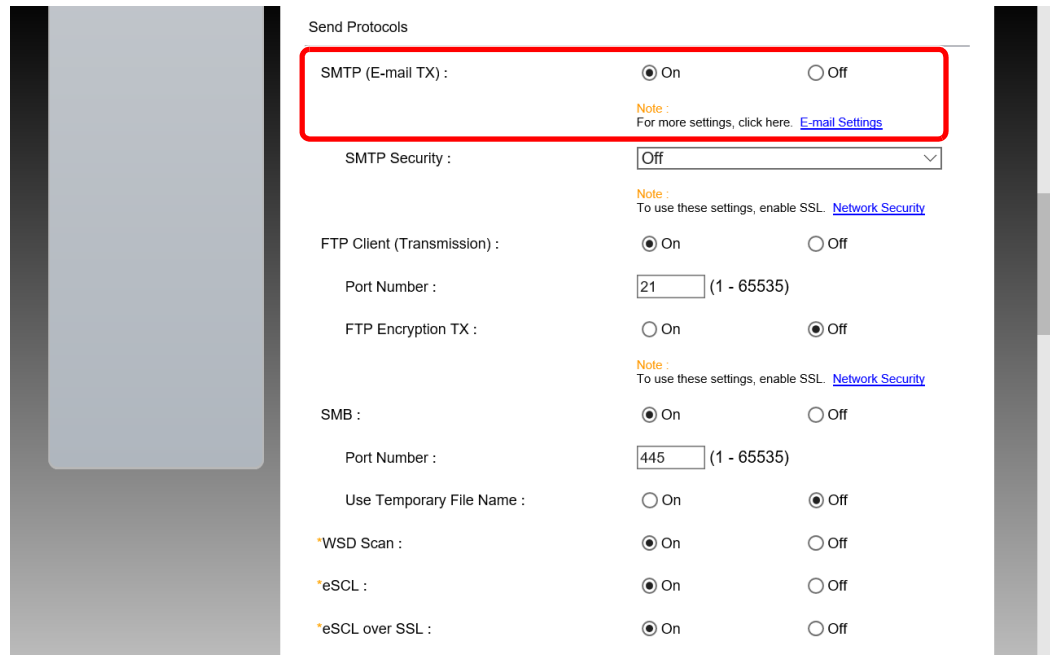

3 Display the screen.

Display the E-mail Settings screen.

From the [Function Settings] menu, click [E-mail].

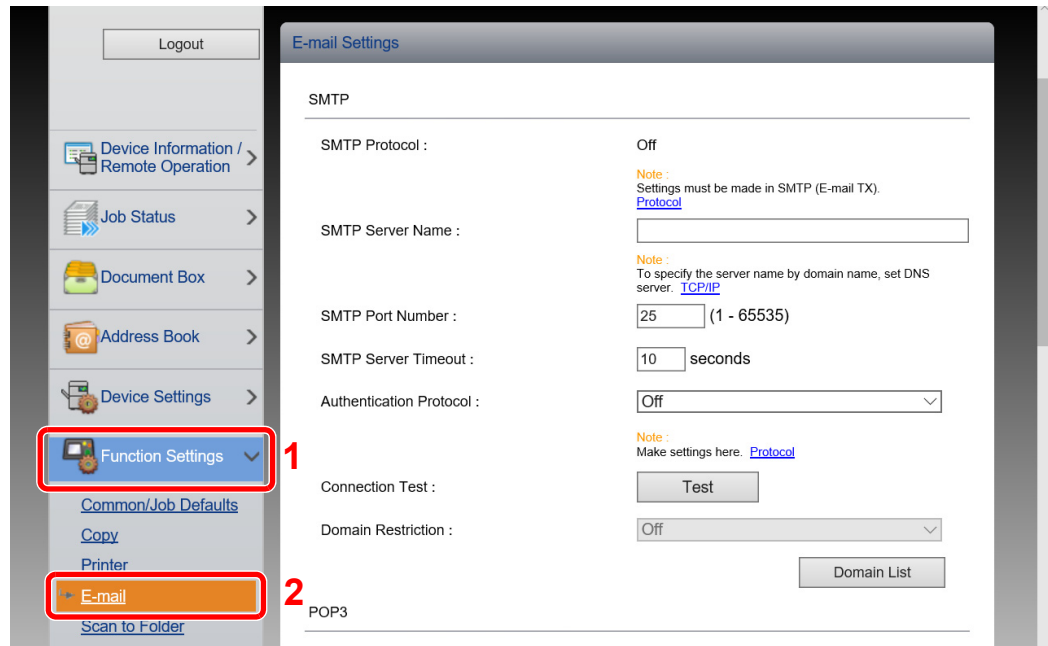

4 Configure the settings.

Enter "SMTP" and "E-mail Send Settings" items.

Setting	Description
SMTP	Set to send e-mail from the machine.
SMTP Protocol	Displays the SMTP protocol settings. Check that "SMTP Protocol" is set to [On] . If [Off] is set, click [Protocol] and set the SMTP protocol to [On] .
SMTP Server Name^{*1}	Enter the host name or IP address of the SMTP server.
SMTP Port Number	Specify the port number to be used for SMTP. The default port number is 25.
SMTP Server Timeout	Set the amount of time to wait before time-out in seconds.
Authentication Protocol	To use SMTP authentication, enter the user information for authentication.
SMTP Security	Set SMTP security. Turn on "SMTP Security" in "SMTP (E-mail TX)" on the [Protocol Settings] page.
Connection Test	Tests to confirm that the E-mail function is operating under the settings without sending a mail.
Domain Restriction	To restrict the domains, click the [Domain List] and enter the domain names of addresses to be allowed or rejected. Restriction can also be specified by e-mail address.
POP3	<p>You don't need to set the following items when you only enable the function of sending e-mail from the machine. Set the following items if you want to enable the function of receiving e-mail on the machine.</p> <p>➡ Command Center RX User Guide</p>
POP3 Protocol	
Check Interval	
Run once now	
POP3 User Settings	
Domain Restriction	
E-mail Send Settings	
E-mail Size Limit	Enter the maximum size of E-mail that can be sent in kilobytes. When E-mail size is greater than this value, an error message appears and E-mail sending is cancelled. Use this setting if you have set E-mail Size Limit for SMTP server. If not, enter a value of 0 (zero) to enable E-mail sending regardless of the size limit.
Sender Address^{*1}	Specify the sender address for when the machine sends E-mails, such as the machine administrator, so that a reply or non-delivery report will go to a person rather than to the machine. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 128 characters.
Signature	Enter the signature. The signature is free form text that will appear at the end of the E-mail body. It is often used for further identification of the machine. The maximum length of the signature is 512 characters.
Function Defaults	Change the function default settings in [Common/Job Default Settings] page.


*1 Be sure to enter the items.

5 Click **[Submit]**.

Registering Destinations


1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Network]
- 3 Log in with administrator privileges.
The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

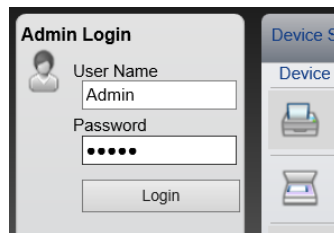

Login User Name: Admin
Login Password: Admin

- 4 From the [Address Book] menu, click [Machine Address Book].

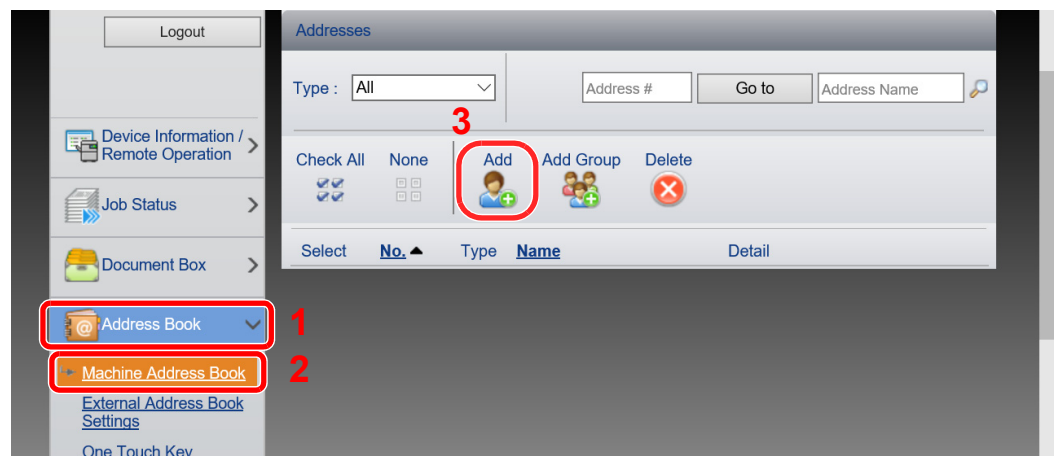

- 5 Click [Add].

2 Populate the fields.

- 1 Enter the destination information.
Enter the information for the destination you want to register. The fields to populate are the same as when registering via operation panel.
[▶ Registering Destinations in the Address Book \(page 3-34\)](#)
- 2 Click [Submit].

Creating a New Custom Box



NOTE

To use Custom Box, an optional hard disk/SSD must be installed in the machine.

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Network]
- 3 From the [Document Box] menu, click [Custom Box].

The screenshot displays the 'Custom Boxes' management interface. On the left sidebar, the 'Document Box' menu is expanded, and 'Custom Box' is highlighted. The main area shows a table of existing boxes and an 'Add' button circled in red. The table contains the following data:

No.	Type	Box Name	Owner	Files	Size
0001	Folder	Box_01		0	0.0 KB
0002	Folder	Box_02		0	0.0 KB
0003	Folder	Box_03		0	0.0 KB

At the bottom of the table, there is a page indicator: '1' and '1 - 3 / 3 box(s)'. The 'Add' button is circled in red and labeled with a '3'. The 'Document Box' menu item is circled in red and labeled with a '1', and the 'Custom Box' sub-item is circled in red and labeled with a '2'.

- 4 Click [Add].


2 Configure the Custom Box.

- 1 Enter the box details.
Enter the information for the custom box you want to register. For details on the fields to populate, refer to the following:
➔ **Command Center RX User Guide**
- 2 Click [Submit].

Printing a document stored in a Custom Box

1 Display the screen.


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Network]
- 3 From the [Document Box] menu, click [Custom Box].

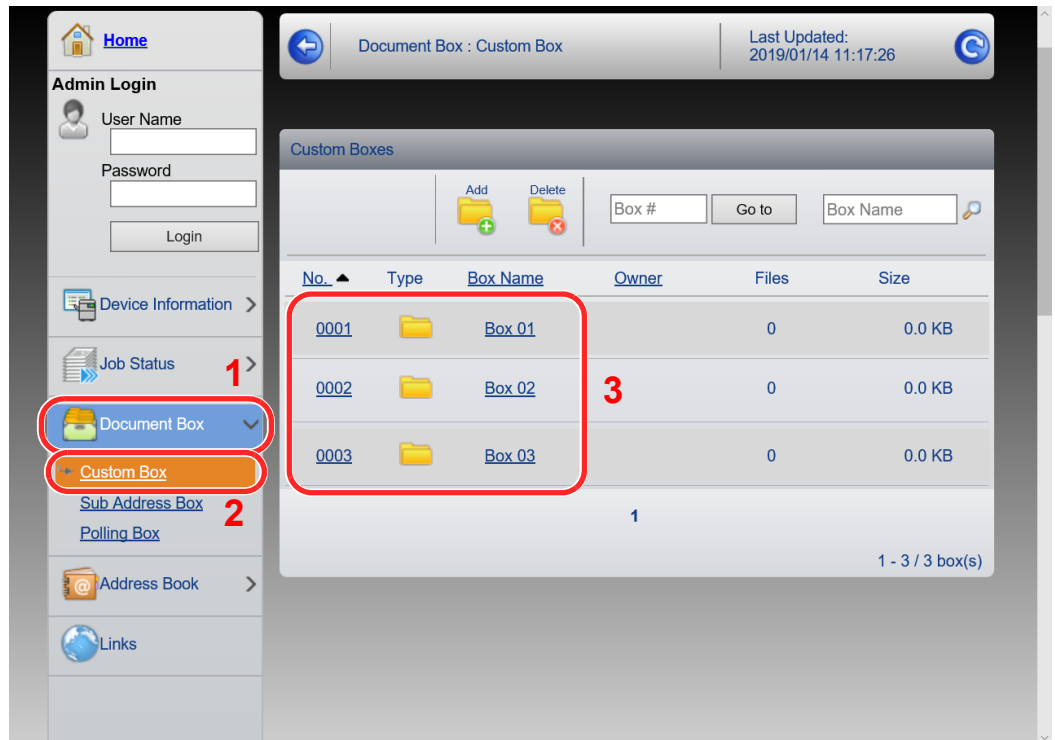

- 4 Click the number or name of the Custom Box in which the document is stored.

2 Print the document.

- 1 Select the document you wish to print.

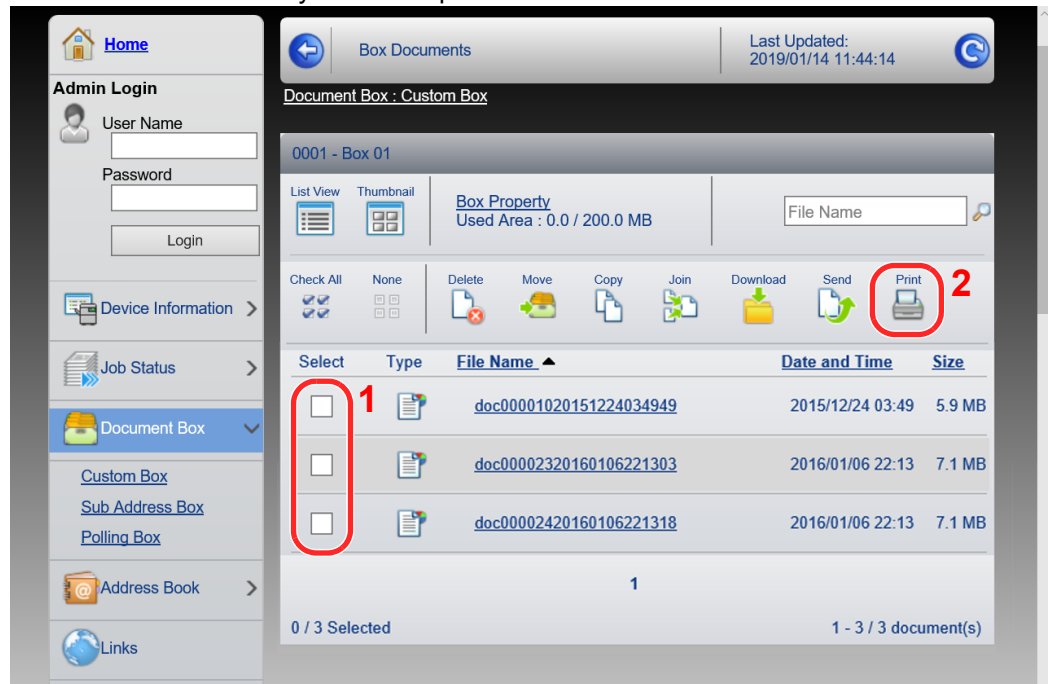

Select the checkbox of the document to be printed.

- 2 Click **[Print]**.
- 3 Configure settings for printing, click **[Print]**.

Transferring Data from Our Other Products

By using the machine's utility, you can smoothly migrate address books when the machine is to be replaced. This section explains how to transfer data between our products.

Migrating the Address Book

The Address Book registered on the machine can be backed up or migrated using the KYOCERA Net Viewer on the included DVD.

For details on operating the KYOCERA Net Viewer, refer to the following:


➔ [KYOCERA Net Viewer User Guide](#)

Backing Up Address Book Data to PC


1 Launch the KYOCERA Net Viewer.

2 Create a backup.


- 1 Right-click on the model name from which you want to back up the Address Book, and select **[Advanced]** - **[Set multiple devices]**.

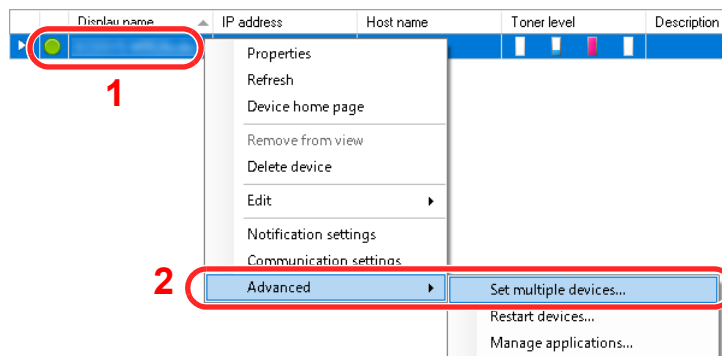


- 2 Select **[Custom Mode]** and click **[Next]**.

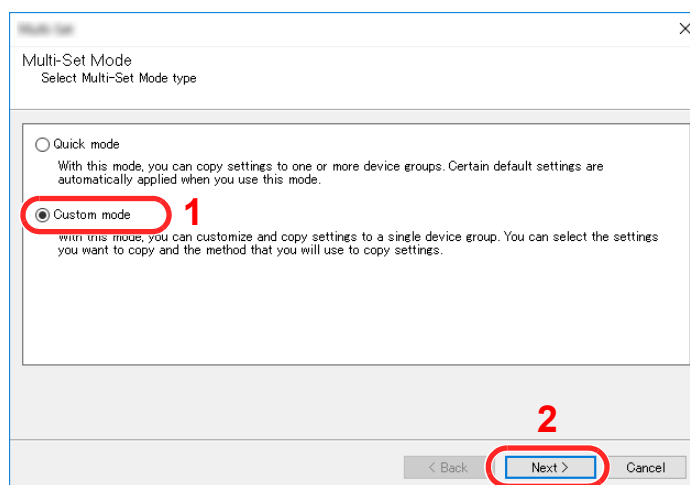


3 Select destination device group and click **[Next]**.

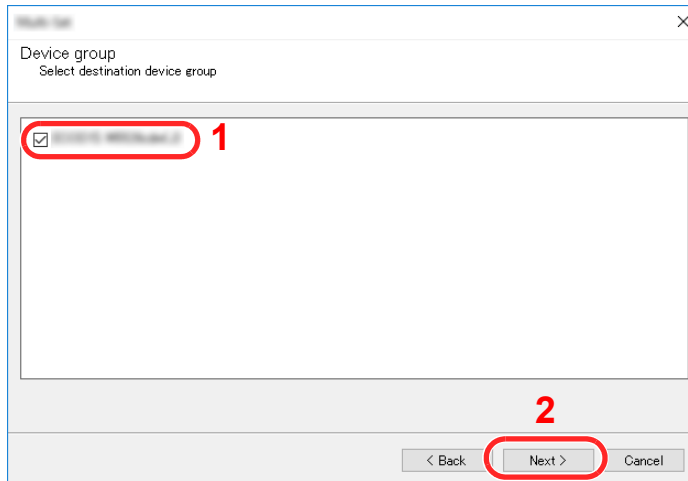


4 Select **[Device Address Book]** and click **[Next]**.

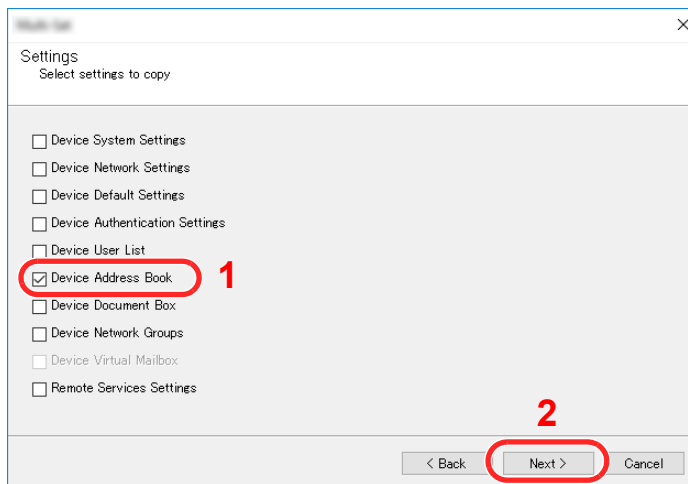


5 Select **[Create from device]** and remove the checkmark from **[Overwrite settings on target device]**, and then click **[Next]**.

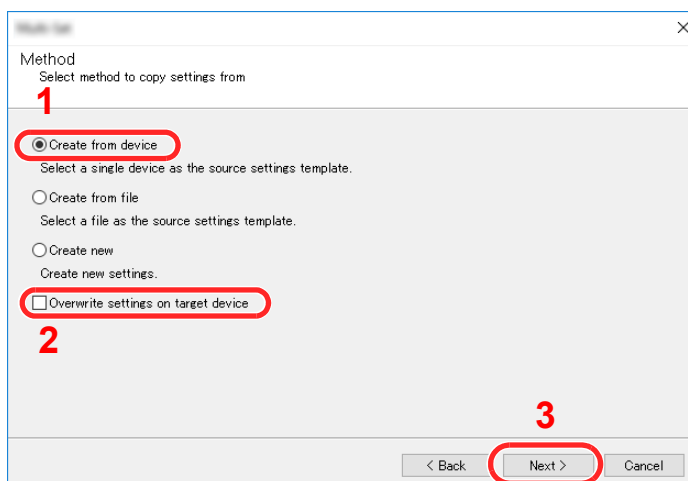

- 6 Select the model you want to back up, and click **[Next]**.

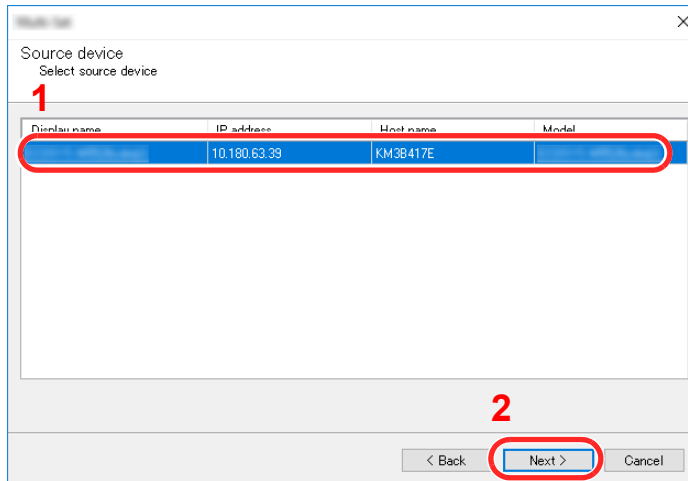


 **NOTE**

If the "Admin Login" screen appears, enter the "Admin Login" and "Login Password", and then click **[OK]**. The default settings are as follows (Upper case and lower case letters are distinguished (case sensitive)).

Login User Name: Admin


Login Password: Admin

- 7 Click on **[Save to file]**.

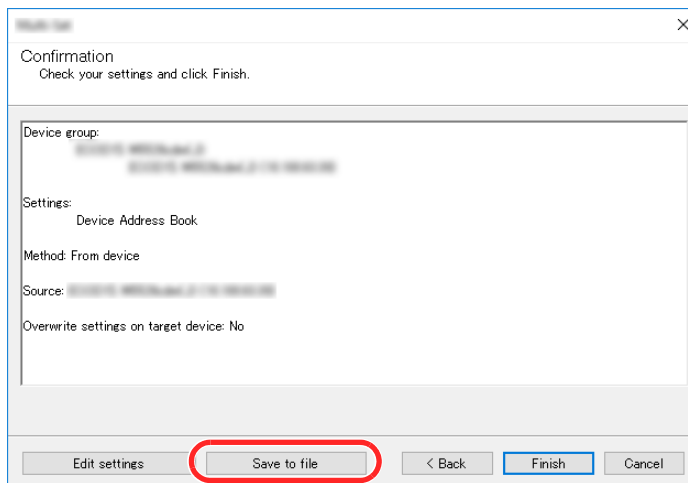

- 8 Specify the location to save the file, enter the file name, and then click **[Save]**.
For "Save as type", make sure to select "XML File".

- 9 After saving the file, always click [**Cancel**] to close the screen.

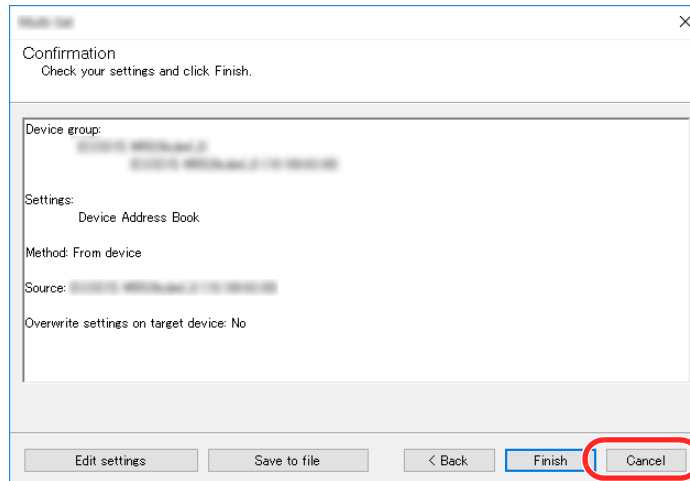


Please note that selecting [**Finish**] will write the data to the machine's Address Book.

Writing Address Book Data to the Machine


1 Launch the KYOCERA Net Viewer.

2 Load the Address Book data.


- 1 Right-click on the model name to which you want to transfer the Address Book, and select [**Advanced**] - [**Set multiple devices**].

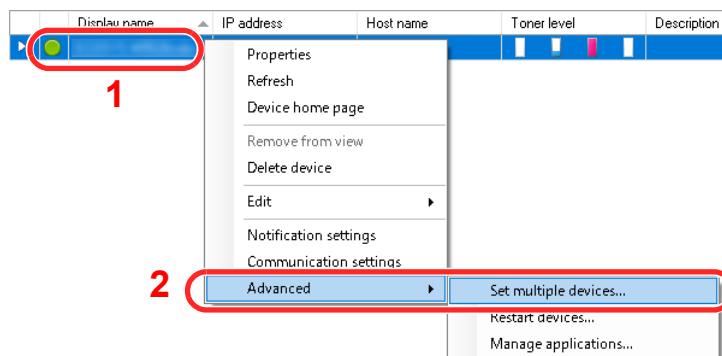


- 2 Select [**Custom Mode**] and click [**Next**].

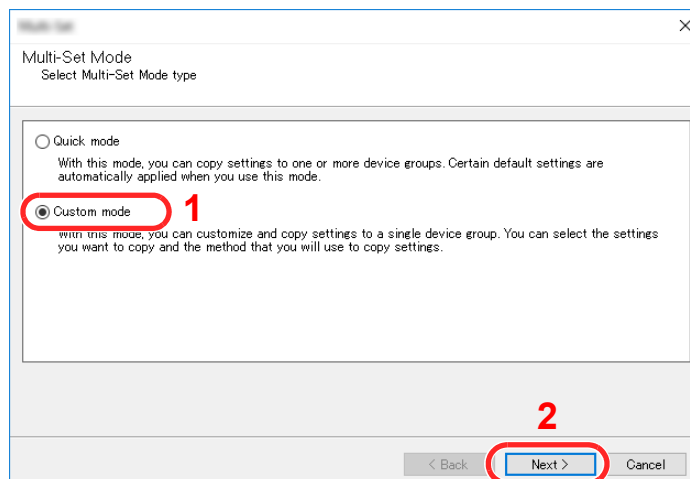


3 Select destination device group and click **[Next]**.

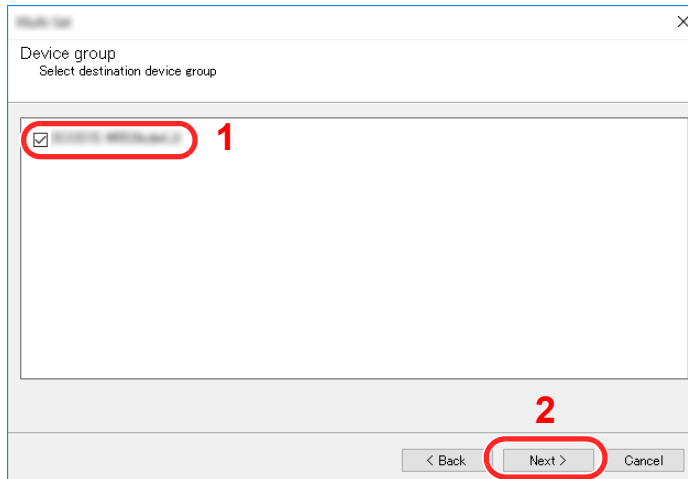

4 Select **[Device Address Book]** and click **[Next]**.

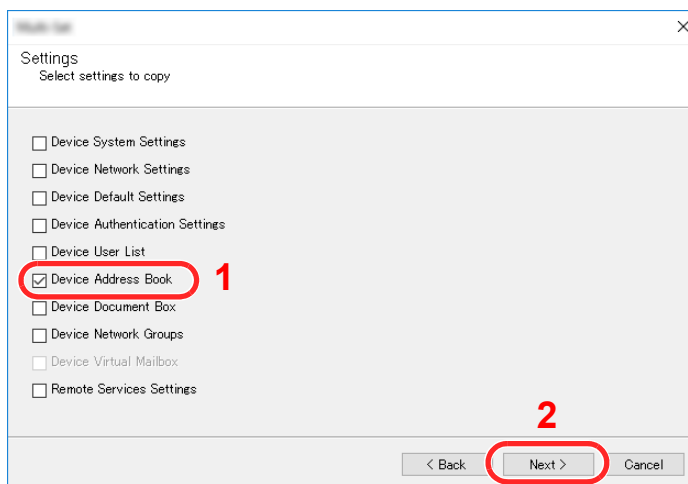


5 Select **[Create from file]** and remove the checkmark from **[Overwrite settings on target device]**, and then click **[Next]**.

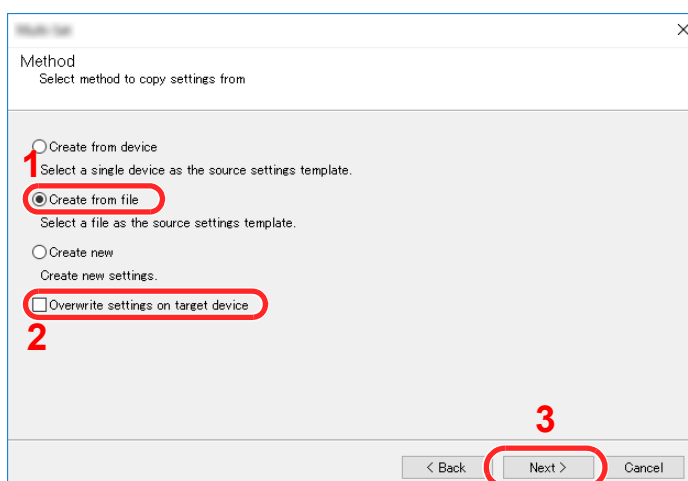


Selecting the **[Overwrite settings on target device]** checkbox will overwrite the machine's Address Book from entry No.1.

- 6 Click [**Browse**] and select the backup Address Book file, and then click [**Next**].

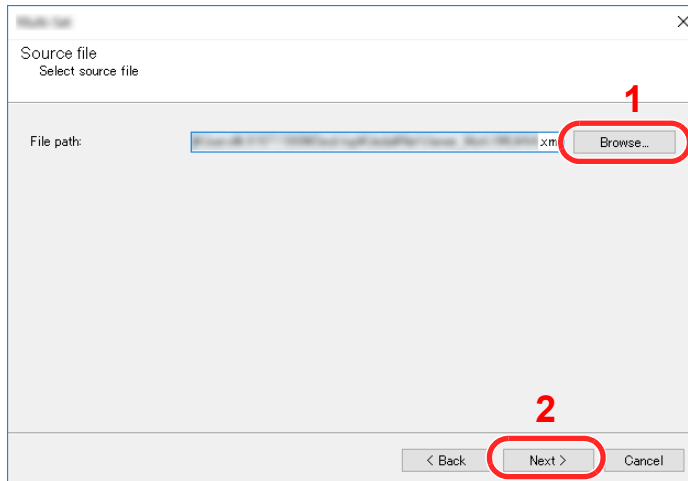

- 7 Click [**Finish**].

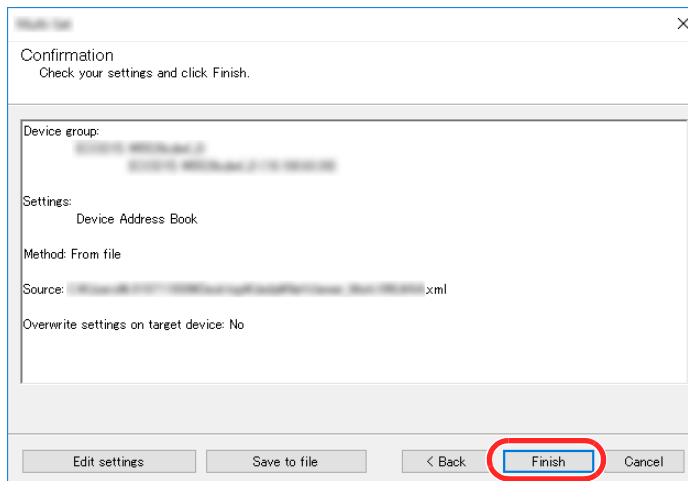

The write process of the Address Book data starts.

- 8 Once the write process is complete, click [**Close**].

3 Preparation before Use


This chapter explains the following operations.

Loading Paper	3-2
Precaution for Loading Paper	3-3
Loading in the Cassettes	3-4
Loading Statement in the Cassettes (For inch models)	3-8
Loading Paper in the Multi Purpose Tray	3-11
Specifying Paper Size and Media Type	3-15
Paper Stopper	3-17
Preparation for Sending a Document to a Shared Folder in a PC	3-18
Making a Note of the Computer Name and Full Computer Name	3-18
Making a Note of the User Name and Domain Name	3-19
Creating a Shared Folder, Making a Note of a Shared Folder	3-20
Configuring Windows Firewall	3-24
Turn off password-protected sharing (Windows 10 only)	3-28
Scan to Folder Setup Tool for SMB	3-30
Registering Destinations in the Address Book	3-34
Adding a Destination (Address Book)	3-34
Adding a Destination on One Touch Key (One Touch Key)	3-39

Loading Paper

Load paper in the cassettes and multipurpose tray.

For the paper load methods for each cassette, refer to the page below.

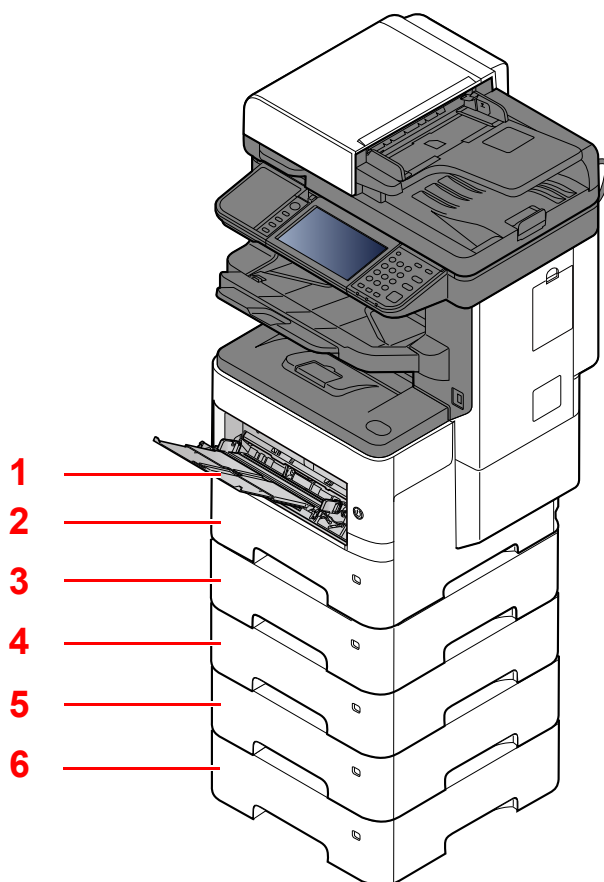


No.	Name	Page
1	Multi Purpose Tray	page 3-11
2	Cassette 1	page 3-4
3	Cassette 2	page 3-4
4	Cassette 3	page 3-4
5	Cassette 4	page 3-4
6	Cassette 5	page 3-4

NOTE

- The number of sheets that can be held varies depending on your environment and paper type.
- You should not use inkjet printer paper or any paper with a special surface coating. (Such paper may cause paper jams or other faults.)

Precaution for Loading Paper

When you open a new package of paper, fan the sheets to separate them slightly prior to loading in the following steps.

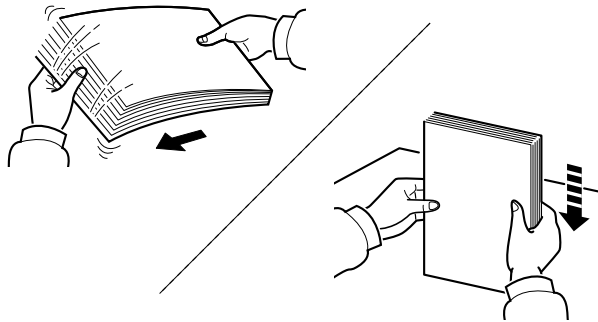

Fan the paper, then tap it on a level surface.

In addition, note the following points.

- If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.
- Avoid exposing opened paper to high temperatures and high humidity as dampness can be a cause of problems. Seal any remaining paper after loading in the multi purpose tray or cassettes back in the paper storage bag.
- If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.

✔ IMPORTANT

If you copy onto used paper (paper already used for printing), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.

💡 NOTE

If you use special paper such as letterhead, paper with holes or paper with pre-prints like logo or company name, refer to the following:

➔ [Paper \(page 11-13\)](#)

Loading in the Cassettes

The cassettes can hold plain paper, recycled paper or color paper.

The number of sheets that can be loaded in each cassette is shown below.

Cassette	No. Sheets
Cassette 1 to 5	500 sheets (Plain paper: 80 g/m ²)

For details of the supported paper sizes, refer to the following:

➔ [Choosing the Appropriate Paper \(page 11-14\)](#)

NOTE

A6 paper cannot be loaded in the Cassette 2 to 5.


For the paper type setting, refer to the following:

➔ [Media Type Setting \(page 8-14\)](#)

IMPORTANT

- The cassettes can hold paper with weight between 60 - 120 g/m².
- Do not load thick paper that is heavier than 120 g/m² in the cassettes. Use the multi purpose tray for paper that is heavier than 120 g/m².

1 Pull the cassette completely out of the machine.

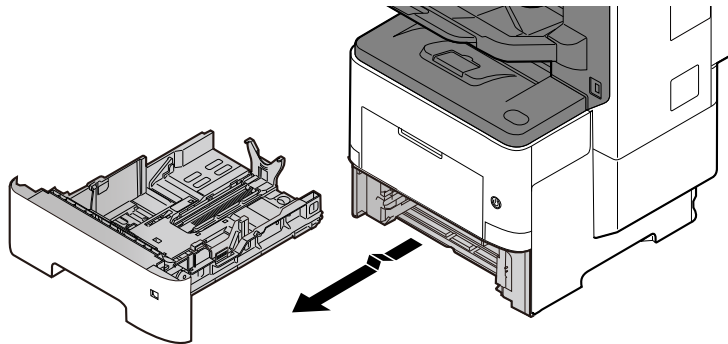


NOTE

When pulling the cassette out of the machine, ensure it is supported and does not fall out.


2 Adjust the cassette size.

- 1 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the paper size required.

Paper sizes are marked on the cassette.

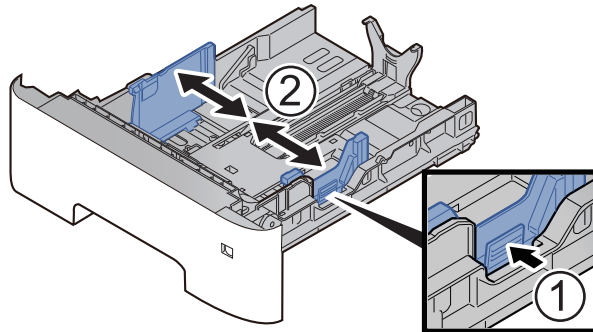


- 2 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the paper size required.

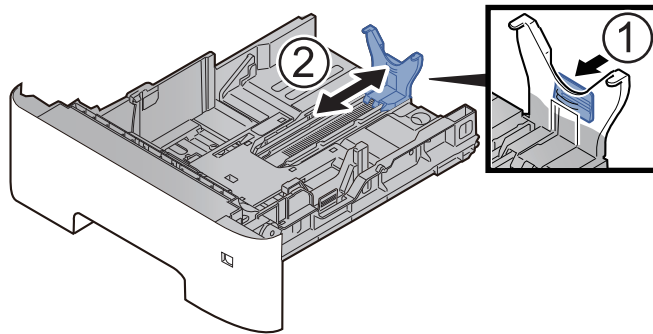


NOTE

If you are going to use paper that is longer than A4, pull out the paper length guide backwards.

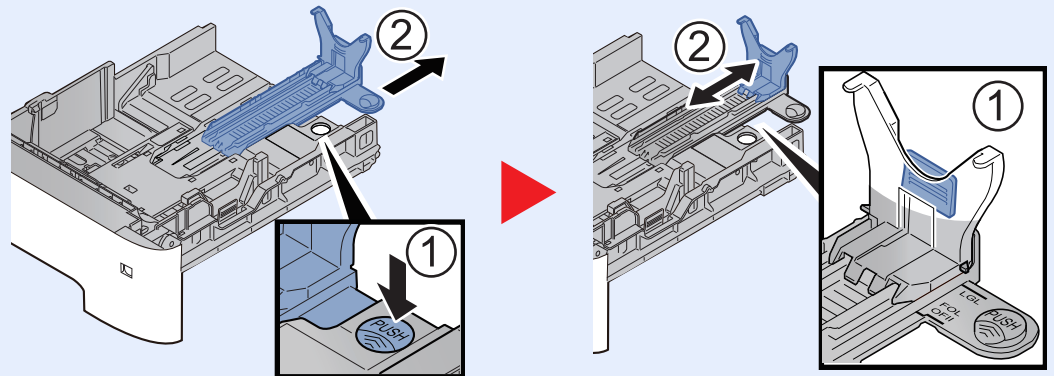

- 3 Turn the size dial so that the size of the paper you are going to use appears in the paper size window.

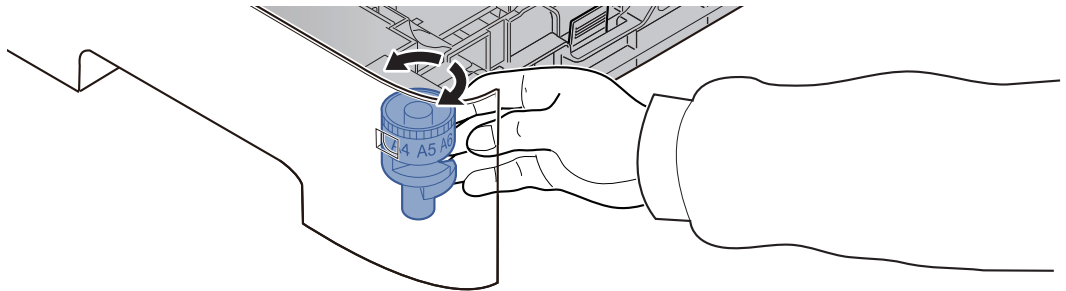


 **NOTE**

When the size is set to "Other" the paper size must be set into the machine on the operation panel.

➔ [Paper Size and Media Type for the Cassettes \(page 3-15\)](#)

3 Load paper.


- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- 2 Load the paper in the cassette.

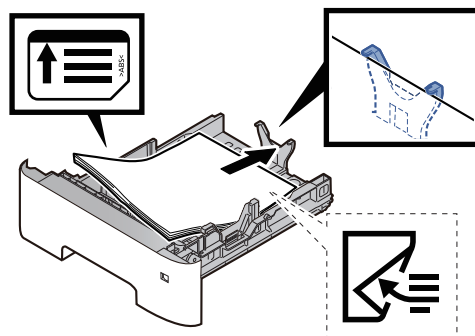

 **IMPORTANT**

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
➔ [Precaution for Loading Paper \(page 3-3\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

4 Gently push the cassette back in.

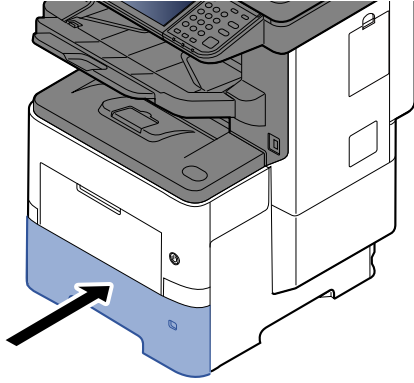


5 Specify the type of paper loaded in the cassette using the operation panel.

➔ [Paper Size and Media Type for the Cassettes \(page 3-15\)](#)

Loading Statement in the Cassettes (For inch models)

Load Statement in the cassettes. Here, we'll explain the procedures for cassette 1, as an example.

1 Pull the cassette completely out of the machine.

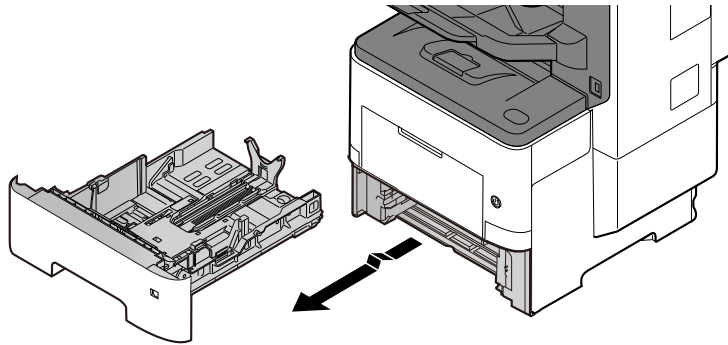


NOTE

When pulling the cassette out of the machine, ensure it is supported and does not fall out.


2 Adjust the cassette size.

- 1 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the Letter/Legal size.


Paper sizes are marked on the cassette.

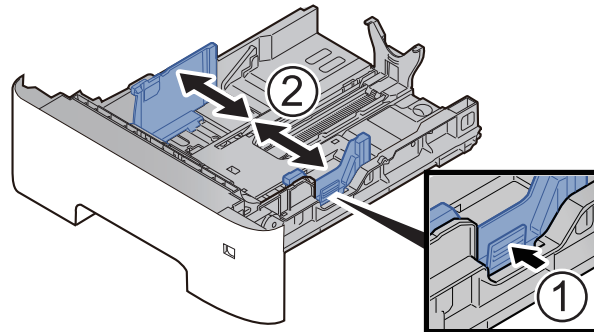


- 2 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the A6 size.

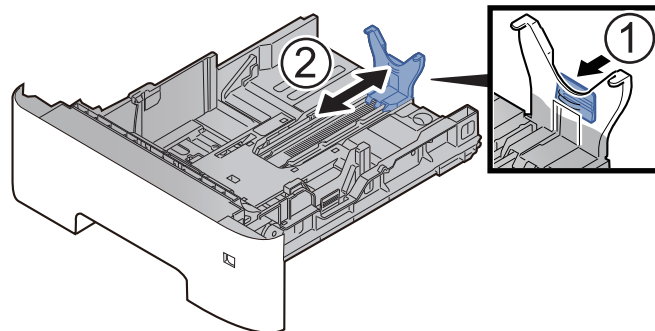

- 3 Attach the auxiliary guide to the paper length guide as shown in the illustration.

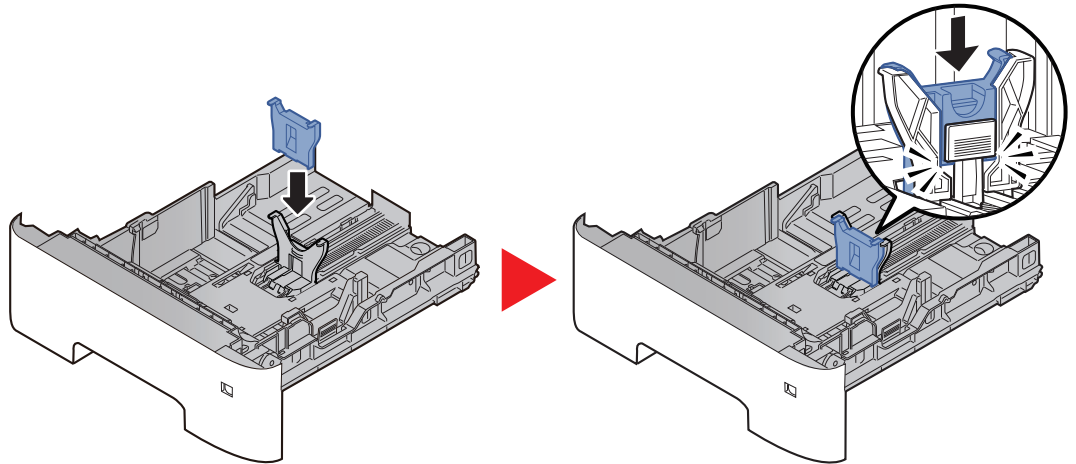


- 4 Turn the size dial so that "Other" appears in the paper size window.

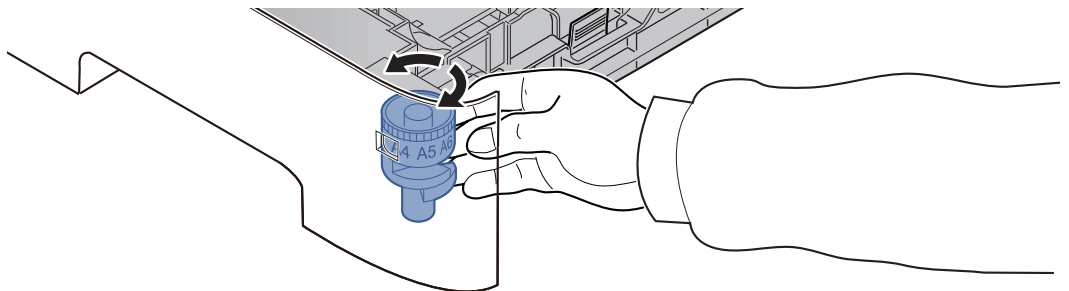

3 Load paper.


- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- 2 Load the paper in the cassette.

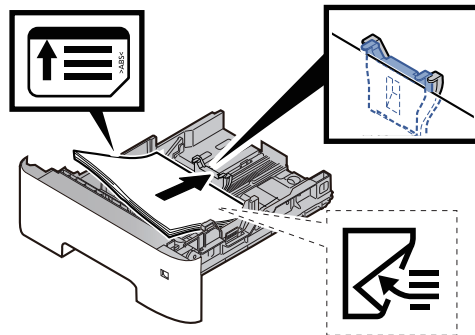

✓ IMPORTANT

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
 - ▶ [Precaution for Loading Paper \(page 3-3\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

4 Gently push the cassette back in.

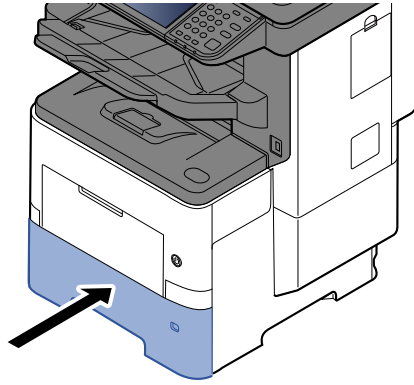


5 Specify the type of paper loaded in the cassette using the operation panel.

➔ [Paper Size and Media Type for the Cassettes \(page 3-15\)](#)



NOTE

When removing the auxiliary guide, hold down the paper length adjusting tab and removing the auxiliary guide.

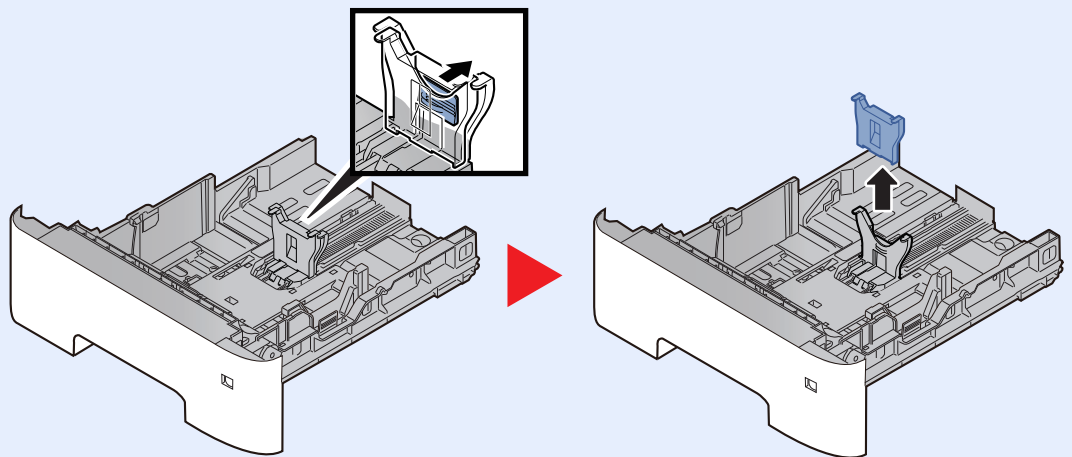

Loading Paper in the Multi Purpose Tray

The multi purpose tray will hold up to 100 sheets of plain paper (80 g/m²).

For details of the supported paper sizes, refer to the following:

➔ [Choosing the Appropriate Paper \(page 11-14\)](#)

For the paper type setting, refer to the following:

➔ [Media Type Setting \(page 8-14\)](#)

Be sure to use the multi purpose tray when you print on any special paper.

✔ IMPORTANT

- If you are using a paper weight of 106 g/m² or more, set the media type to Thick and set the weight of the paper you are using.
- Remove each transparency from the inner tray as it is printed. Leaving transparencies in the inner tray may cause a paper jam.


The capacity of the multi purpose tray is as follows.

- Plain paper (80 g/m²), recycled paper or color paper: 100 sheets
- Thick paper (106 to 220 g/m²): 5 sheets
- Thick paper (104.7 g/m²): 100 sheets
- Hagaki (Cardstock): 1 sheets
- Envelope DL, Envelope C5, Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Youkei 4, Youkei 2: 5 sheets
- OHP film: 1 sheet


💡 NOTE

- When you load custom size paper, enter the paper size by referring to the following:
➔ [Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) \(page 3-16\)](#)
- When you use special paper such as transparencies or thick paper, select the media type by referring to the following:
➔ [Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) \(page 3-16\)](#)

1 Open the multi purpose tray.

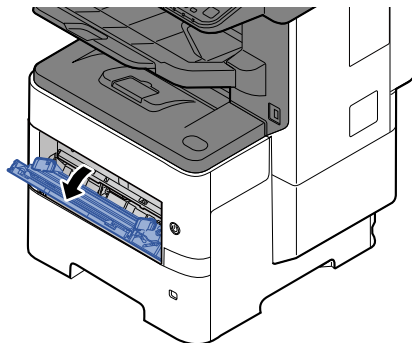


2 Pull out the support tray section of the MP tray.

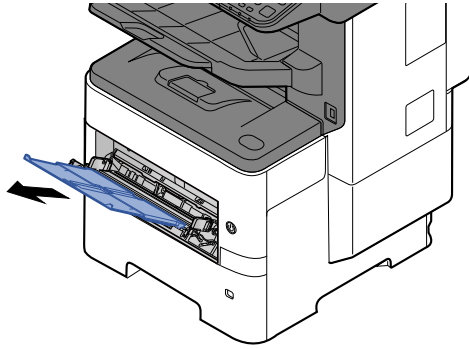


3 Adjust the multi purpose tray size.

Paper sizes are marked on the multi purpose tray.

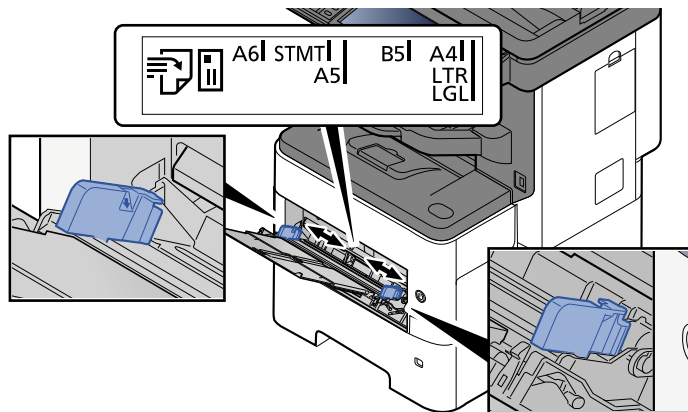

4 Load paper.

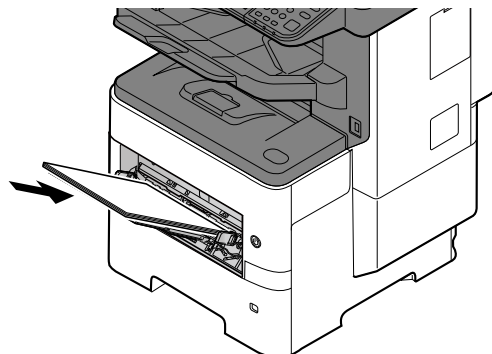

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multi purpose tray.

➔ [Precaution for Loading Paper \(page 3-3\)](#)

✔ **IMPORTANT**

- When loading the paper, keep the print side facing up.
- Curled paper must be uncurled before use.
- When loading paper into the multi purpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in the multi purpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.
- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).

5 Specify the type of paper loaded in the multi purpose tray using the operation panel.


- ➔ [Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) \(page 3-16\)](#)

When you load envelopes or cardstock in the multi purpose tray

Load the paper with the print side facing up. For the procedure for printing, refer to the following:

▶ **Printer Driver User Guide**

Example: When printing the address.

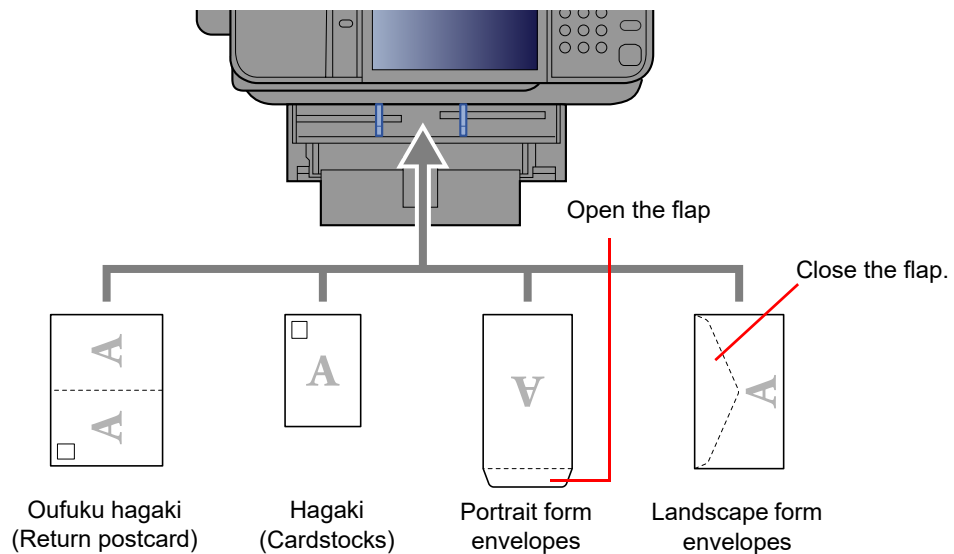

✔ **IMPORTANT**

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

💡 **NOTE**

When you load envelopes in the multi purpose tray, select the envelope type by referring to the following:

- ▶ [Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) \(page 3-16\)](#)

Specifying Paper Size and Media Type

The default paper size setting for cassette 1, for the multi purpose tray and for the optional paper feeder (cassettes 2 to 5) is "A4" or "Letter", and the default media type setting is "Plain".

To change the type of paper to be used in cassettes, specify the paper size and media type setting.

Paper Size and Media Type for the Cassettes

Specify the paper size and media type of paper to be used in cassettes.

Item		Description
Paper Size ^{*1}	Metric	Select from the Metric standard sizes. Values Cassette 1: A4, A5, A5 (Landscape), A6, B5, B6, Folio, 216 × 340 mm Cassettes 2 to 5: A4, A5, B5, B6, Folio, 216 × 340 mm
	Inch	Select from the Inch series standard sizes. Values Cassette 1: Letter, Legal, Statement, Statement (Landscape), Executive, Oficio II Cassettes 2 to 5: Letter, Legal, Statement, Executive, Oficio II
	Other	Select from special standard sizes and custom sizes. Values Cassette 1: 16K, ISO B5, Envelope DL, Envelope C5, Oufukuhagaki (Return postcard), Custom ^{*2} Cassettes 2 to 5: 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Oufukuhagaki (Return postcard), Youkei 4, Youkei 2, Custom ^{*2}
Media type ^{*3}		Select the media type. Values Cassette 1: Plain (60 - 105 g/m ²), Rough, Recycled, Preprinted ^{*4} , Bond, Color, Prepunched ^{*4} , Letterhead ^{*4} , High Quality, Custom 1 - 8 Cassettes 2 to 5: Plain (60 - 105 g/m ²), Rough, Recycled, Preprinted ^{*4} , Bond, Color, Prepunched ^{*4} , Letterhead ^{*4} , Envelope, High Quality, Custom 1 - 8

*1 Only set this when the size dial on the cassette is set to "Other".

*2 The custom paper sizes are set for each cassette. Refer to the following:

➔ [Custom Paper Size \(page 8-12\)](#)

*3 To change to a media type other than Plain, refer to the following:

➔ [Media Type Setting \(page 8-14\)](#)

When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.

*4 To print on preprinted or prepunched paper or on letterhead, refer to the following:

➔ [Special Paper Action \(page 8-13\)](#)



NOTE

- The available media types for printing received faxes are as shown below.
Plain, Labels, Recycled, Bond, Vellum, Color, Envelope, Thick, High Quality, Rough and Custom 1 to 8
- Set the paper size of the cassette used for fax reception as follows:
Inch models: Letter, Legal, Statement
Metric models: A4, B5, A5, Folio
If the above setting is changed, it will not be possible to print faxes.

Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting)

Specify the paper size and media type of paper to be used in the multi purpose tray.

Item		Description
Paper Size	Metric	Select from the Metric standard sizes. Values: A4, A5, A6, B5, B6, Folio, 216 × 340 mm
	Inch	Select from the Inch series standard sizes. Values: Letter, Legal, Statement, Executive, Oficio II
	Other	Select from special standard sizes and custom sizes. Values: 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Youkei 4, Youkei 2, Custom ^{*1}
Media Type ^{*2}		Select the media type. Values: Plain (60 to 105 g/m ²), Rough, Transparency, Vellum, Labels, Recycled, Preprinted ^{*3} , Bond, Cardstock, Color, Prepunched ^{*3} , Letterhead ^{*3} , Envelope, Thick (106 to 220 g/m ²), High Quality, Custom 1-8

*1 For instructions on how to specify the custom paper size, refer to the following:

➔ [Custom Paper Size \(page 8-12\)](#)

*2 To change to a media type other than "Plain", refer to the following:

➔ [Media Type Setting \(page 8-14\)](#)

*3 To print on preprinted or prepunched paper or on letterhead, refer to the following:

➔ [Special Paper Action \(page 8-13\)](#)

**NOTE**

- The available media types for printing received faxes are as shown below.
Plain, Label, Recycled, Bond, Vellum, Color, Envelope, Cardstock, Thick, High Quality, Rough and Custom 1 to 8
- Set the paper size of the multi purpose tray used for fax reception as follows:
Inch models: Letter, Legal, Statement
Metric models: A4, B5, A5, Folio
If the above setting is changed, it will not be possible to print faxes.

1 Display the screen.

[System Menu/Counter] > [Quick Setup Wizard]

2 Select a function.


Select [Paper Setup].

3 Configure the function.

Start the wizard. Follow the instructions on the screen to configure settings.

Paper Stopper

When using paper A4/Letter or larger, open the paper stopper shown in the figure.

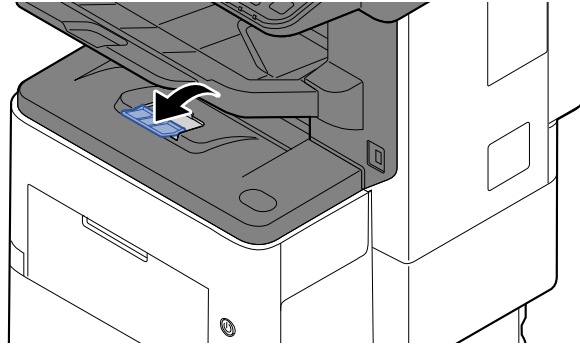

Preparation for Sending a Document to a Shared Folder in a PC

Check the information that needs to be set on the machine and create a folder to receive the document on your computer. Screens of Windows 10 are used in the following explanation. The details of the screens will vary in other versions of Windows.



NOTE

Log on to Windows with administrator privileges.

Making a Note of the Computer Name and Full Computer Name

Check the name of the computer name and full computer name.

1 Display the screen.


Right-click **[Start]** button on the Windows and select **[System]**.



NOTE

- In Windows 8.1, right-click **[PC]** in the Start screen and select **[Properties]**. Or, right-click the Window icon and select **[System]**.
- In Windows 7, from **[Start]** button on the Windows, select **[Computer]** and then **[System Properties]**.

2 Check the computer name.

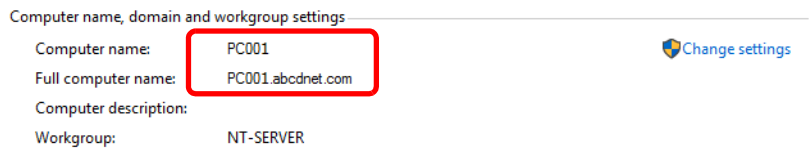


Check the computer name and full computer name.

Screen example:

Computer name: PC001

Full computer name: PC001.abcdnet.com

After checking the computer name, click the  **[Close]** button to close the "System Properties" screen.

Making a Note of the User Name and Domain Name

Check the domain name and user name for logging onto Windows.

1 Display the screen.

Click the search box in the taskbar, and type "Command Prompt" in there. Right-click [Command Prompt] in the search list and select [Run as administrator].

The Command Prompt window appears.



NOTE

- In Windows 8.1, click [Search] in charms, and enter "Command Prompt" in the search box. Select [Command Prompt] in the search list.
- In Windows 7, from [Start] button on the Windows, select [All Programs] (or [Programs]), [Accessories] and then [Command Prompt].

2 Check the domain name and user name.

At the Command Prompt, enter "net config workstation" and then press [Enter].

```
Microsoft Windows [Version 10.0.15063]
(c) 2017 Microsoft Corporation. All rights reserved.

C:\Users\PC0270>net config workstation
Computer name          \PC0270
Full Computer name
User name              PC0270

Workstation active on
NetBT_Tcpip_{FABABC9C-741F-40DF-B0ED-BD92F1900FE6} (00252261F4D8)

Software version      Windows 10 Pro

Workstation domain
Logon domain          PC0270

COM Open Timeout (sec)      0
COM Send Count (byte)      16
COM Send Timeout (msec)    250
The command completed successfully.

C:\Users\PC0270>
```

Check the user name and domain name.

Screen example:

User Name: PC0270
Domain Name: PC0270

Creating a Shared Folder, Making a Note of a Shared Folder


Create a shared folder to receive the document in the destination computer.

NOTE

If there is a workgroup in System Properties, configure the settings below to limit folder access to a specific user or group.

- 1 Open up a window in File Explorer and select **[View]**, **[Options]**, and then **[Folder Options]**.
 - In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, **[Appearance and Personalization]**, and then **[Folder Options]**.
 - In Windows 7, from **[Start]** button on the Windows, select **[Control Panel]**, **[Appearance and Personalization]**, and then **[Folder Options]**.

2

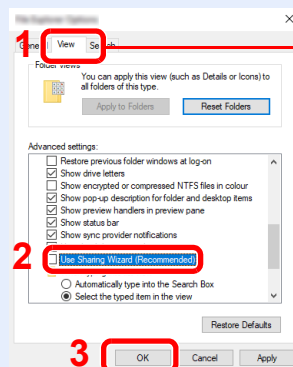


Make sure that the **[View]** tab is selected.

Remove the checkmark from **[Use Sharing Wizard (Recommended)]** in "Advanced settings".


1 Create a folder.

- 1 Create a folder on your computer.

For example, create a folder with the name **"scannerdata"** on the desktop.

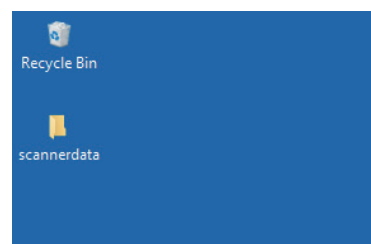


- 2 Right-click the **"scannerdata"** folder, select **[Properties]**, and click **[Sharing]** and **[Advanced Sharing]**.

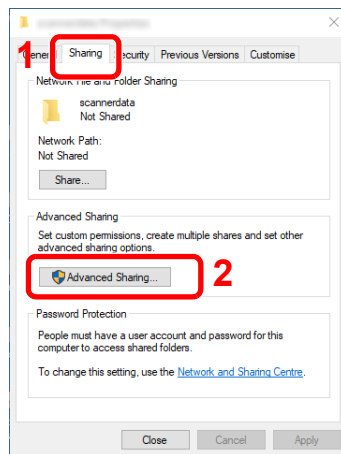


2 Configure permission settings.

- 1 Select the **[Share this folder]** checkbox and click the **[Permissions]** button.

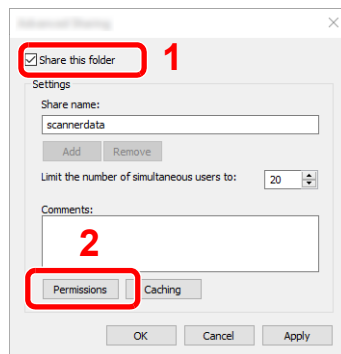


- 2 Make a note of the **[Share name]**.

- 3 Click the **[Add]** button.

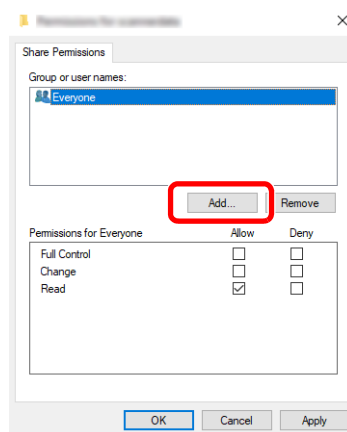

4 Specify the location.

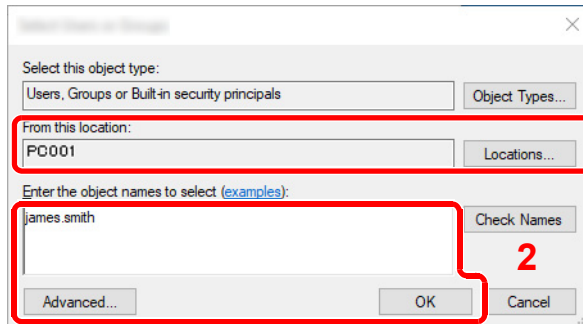

1 If the computer name that you made a note of on [page 3-18](#) is the same as the domain name:

If the computer name is not shown in "From this location", click the [**Locations**] button, select the computer name, and click the [**OK**] button.

Example: PC001

If the computer name that you made a note of on [page 3-18](#) is not the same as the domain name:

If the text after the first dot (.) in the full computer name that you made a note of does not appear in "From this location", click the [**Locations**] button, select the text after the dot (.), and click the [**OK**] button.


Example: abcdnet.com

➔ [Making a Note of the User Name and Domain Name \(page 3-19\)](#)

2 Enter the user name that you made a note of on page in the text box, and click the [**OK**] button.

Also the user name can be made by clicking the [**Advanced**] button and selecting a user.

5 Set the access permission for the user selected.

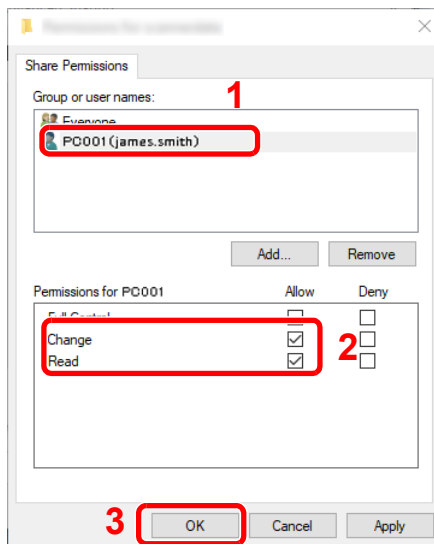

1 Select the user you entered.

2 Select the [**Allow**] checkbox of the "Change" and "Read" permissions


3 Press [**OK**].

NOTE

"**Everyone**" gives sharing permission to everyone on the network. To strengthen security, it is recommended that you select "**Everyone**" and remove the "**Read**" [**Allow**] checkmark.

6 Click the [**OK**] button in the "**Advanced Sharing**" screen to close the screen.

7 Check the details set in the **[Security]** tab.

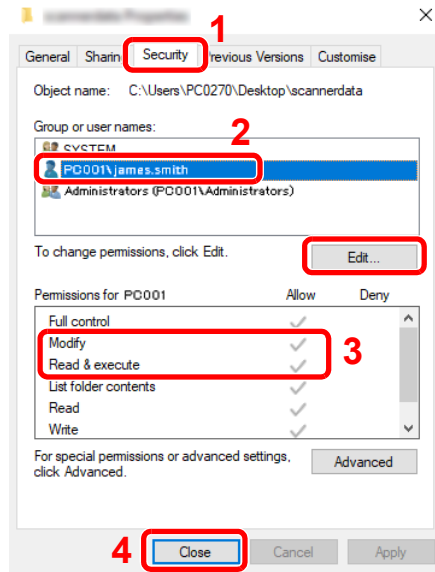

- 1 Select the **[Security]** tab.
- 2 Select the user you entered.
If the user does not appear on "Group or user names", click **[Edit]** button to add user in a similar way of "configuration of permission settings".
- 3 Make sure that checkmarks appear on **[Allow]** checkbox for the "**Modify**" and "**Read & execute**" permissions.
- 4 Click the **[Close]** button.

Configuring Windows Firewall


Permit sharing of files and printers and set the port used for SMB transmission.

NOTE

Log on to Windows with administrator privileges.

1 Check file and printer sharing.


- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, **[System and Security]**, and **[Allow an app through Windows Firewall]**.

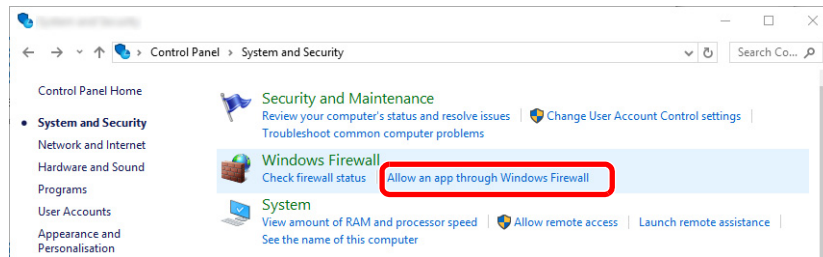

NOTE


If the User Account Control dialog box appears, click the **[Continue]** button.

- 2 Select the **[File and Printer Sharing]** checkbox.

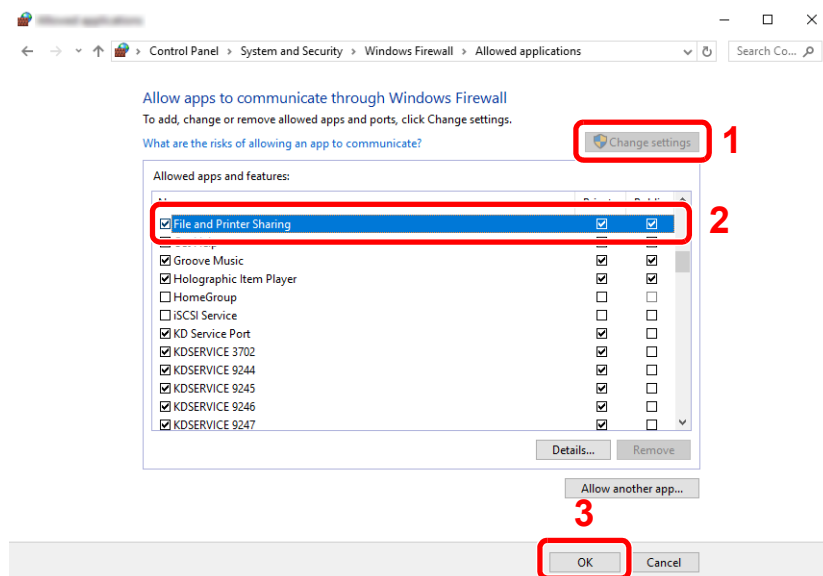


2 Add a port.


- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, **[System and Security]**, and **[Check firewall status]**.

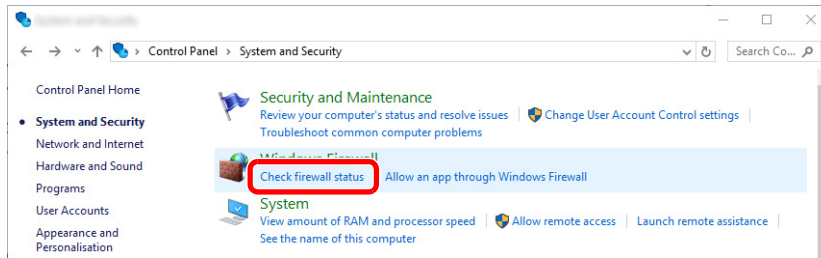


- 2 Select **[Advanced settings]**.

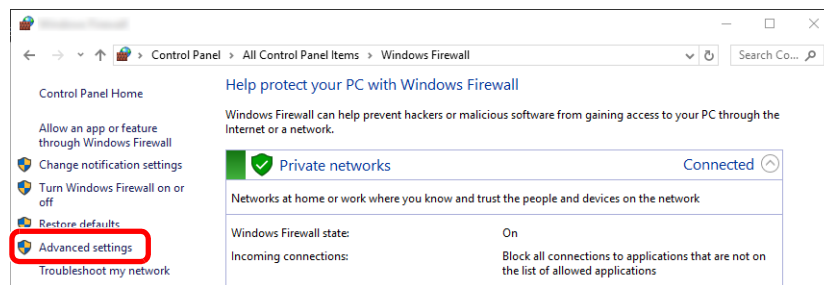


- 3 Select **[Inbound Rules]**.

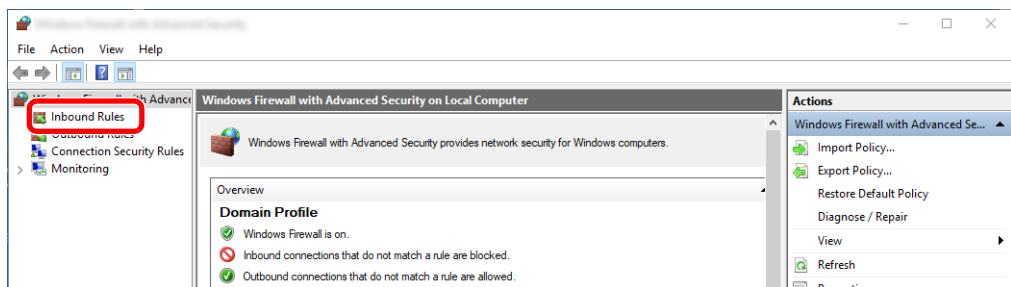


- 4 Select **[New Rule]**.

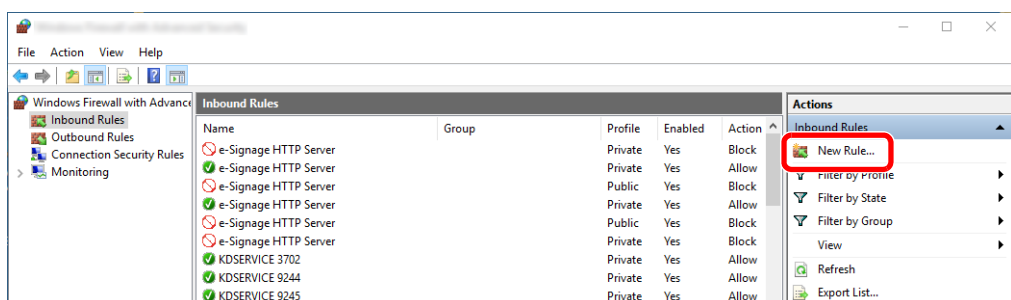


5 Select [Port].

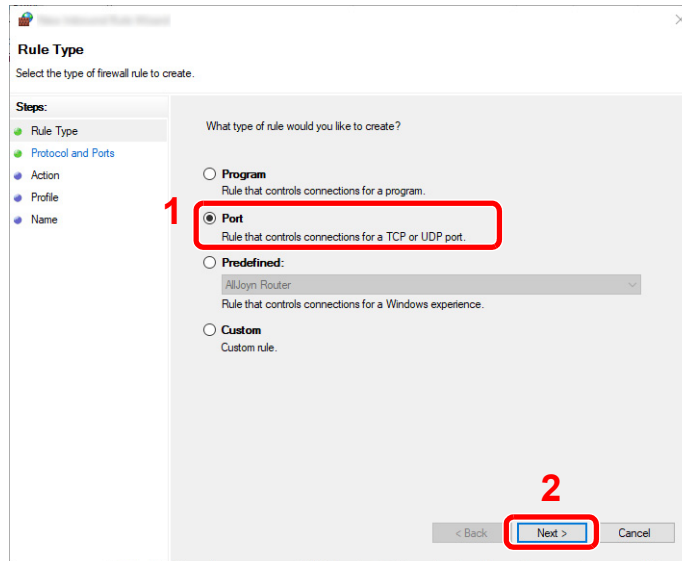


6 Select [TCP] as the port to apply the rule to. Then select [Specific local ports] and enter "445" then click [Next].

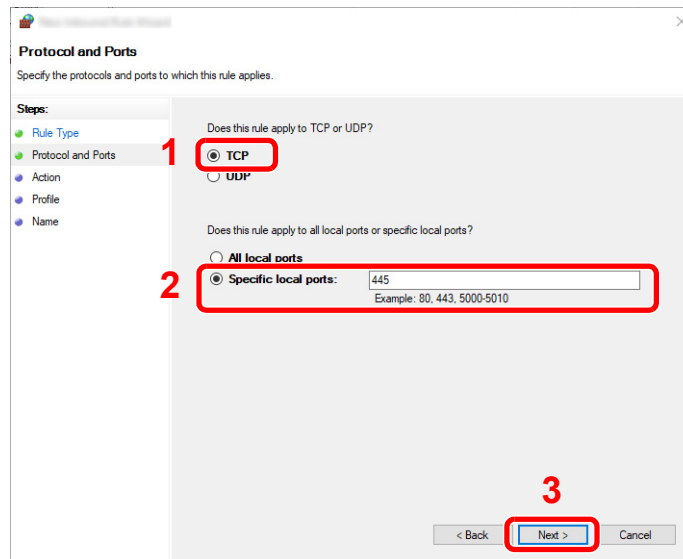


7 Select [Allow the connection] and click the [Next] button.

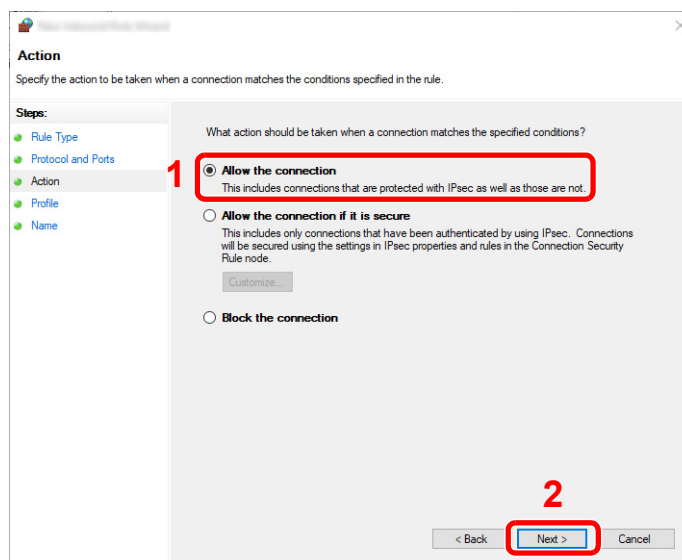

- 8 Make sure all checkboxes are selected and click the **[Next]** button.

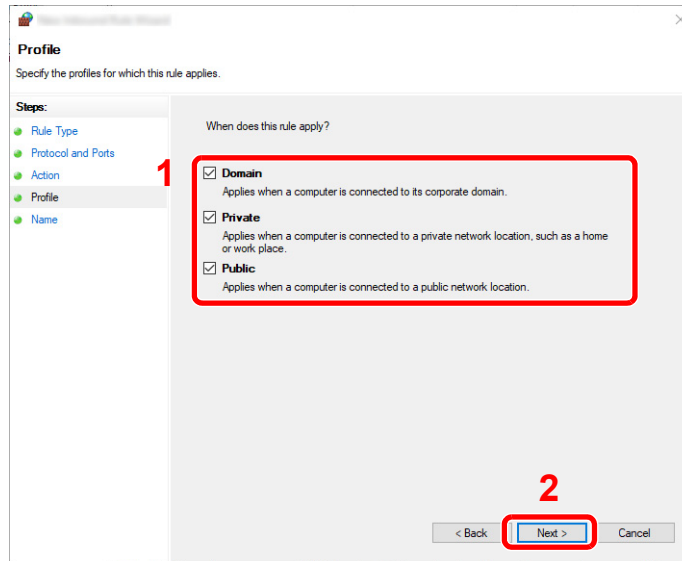

- 9 Enter "Scan to SMB" in "Name" and click **[Finish]**.

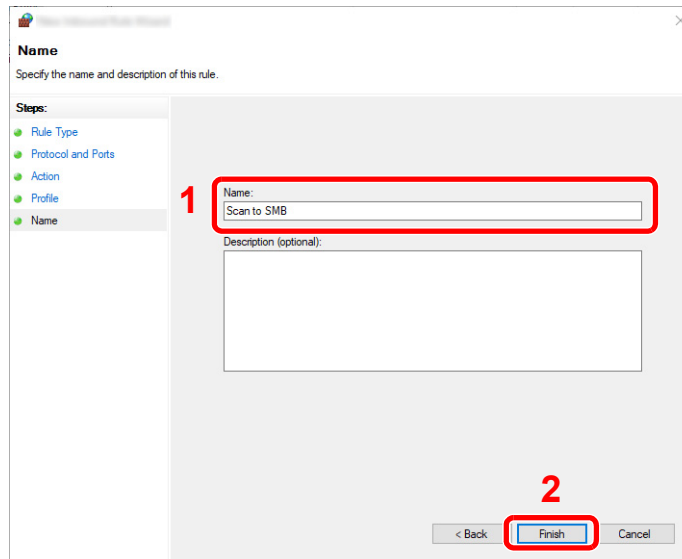

In Windows 8.1

- 1 In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, **[System and Security]**, and then **[Windows Firewall]**.
If the User Account Control dialog box appears, click the **[Continue]** button.
- 2 Configure the settings.
➔ [Configuring Windows Firewall \(page 3-24\)](#)

In Windows 7

- 1 In Windows 7, from **[Start]** button on the Windows, select **[Control Panel]**, **[System and Security]**, and then **[Allow a program through Windows Firewall]**.
If the User Account Control dialog box appears, click the **[Continue]** button.
- 2 Configure the settings.
➔ [Configuring Windows Firewall \(page 3-24\)](#)

Turn off password-protected sharing (Windows 10 only)

If it is not possible to access the shared folder that you specified, the settings for operating system may be changed. Follow the steps below to confirm and change the settings.

- 1 Right-click [Start] button and select [Settings].**
- 2 Select [Network & Internet].**
- 3 Select [Sharing options].**
- 4 Select [Turn on network discovery] in [Network discovery].**

Change sharing options for different network profiles

Windows creates a separate network profile for each network you use. You can choose specific options for each profile.

Private (current profile) ⌵

Network discovery ⌵

When network discovery is on, this computer can see other network computers and devices and is visible to other network computers.

Turn on network discovery

Turn on automatic setup of network-connected devices.

Turn off network discovery

File and printer sharing ⌵

When file and printer sharing is on, files and printers that you have shared from this computer can be accessed by people on the network.

Turn on file and printer sharing

Turn off file and printer sharing

HomeGroup connections ⌵

Typically, Windows manages the connections to other homegroup computers. But if you have the same user accounts and passwords on all of your computers, you can have HomeGroup use your account instead.

Allow Windows to manage homegroup connections (recommended)

Use user accounts and passwords to connect to other computers

Guest or Public ⌵

All Networks ⌵

5 Select [Turn on file and printer sharing] in [File and printer sharing].

Change sharing options for different network profiles

Windows creates a separate network profile for each network you use. You can choose specific options for each profile.

Private (current profile) ⌵

Network discovery ⌵

When network discovery is on, this computer can see other network computers and devices and is visible to other network computers.

Turn on network discovery
 Turn on automatic setup of network-connected devices.
 Turn off network discovery

File and printer sharing ⌵

When file and printer sharing is on, files and printers that you have shared from this computer can be accessed by people on the network.

Turn on file and printer sharing
 Turn off file and printer sharing

HomeGroup connections ⌵

Typically, Windows manages the connections to other homegroup computers. But if you have the same user accounts and passwords on all of your computers, you can have HomeGroup use your account instead.

Allow Windows to manage homegroup connections (recommended)
 Use user accounts and passwords to connect to other computers

Guest or Public ⌵

All Networks ⌵

6 Click [⌵] of [All Networks] and select [Turn off password-protected sharing] in [Password-protected sharing].



NOTE

It is recommended to set a password for the user account. (Regarding security, ask your network administrator.)

Scan to Folder Setup Tool for SMB

An environment for sending a document to Windows can be set up smoothly by using the Scan to Folder Setup Tool for SMB contained on the supplied DVD.


By operating the Scan to Folder Setup Tool for SMB, you can configure the following settings.

- Create a shared folder in a PC for receiving documents
A new folder can be easily created on the desktop. Also, the newly created folder is automatically set as a shared folder.
- Set the created shared folder as an address on this machine
Information about such things as the name of the computer and shared names for the shared folder is easily recorded in the address book of this machine with a sequence of actions. Can also be registered on the One Touch Keys.

NOTE

- Log in to Windows with administrator privileges.
- If user login administration is enabled, log in with administrator privileges or as a user with execution authority.


1 Insert the DVD.

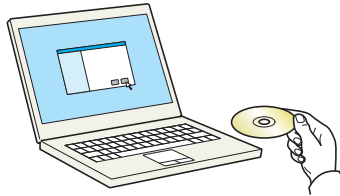

NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [Cancel].
- If the autorun screen is displayed, click [Run setup.exe].
- If the user account management window appears, click [Yes] ([Allow]).

2 Display the screen.

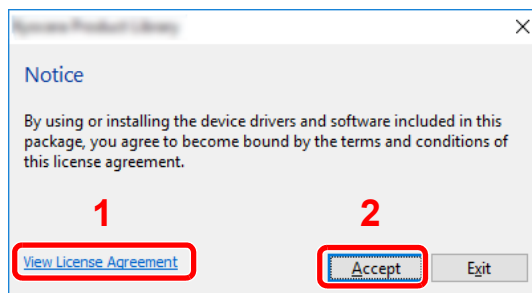


- 1 Click [View License Agreement] and read the License Agreement.
- 2 Click [Accept].

After clicking [Accept] in the license dialog box, depending on your region, a message about resource and energy conservation may appear. Read the message and click [OK].


3 Select [Maintenance].

4 [Scan to Folder Setup Tool for SMB] > [Run].

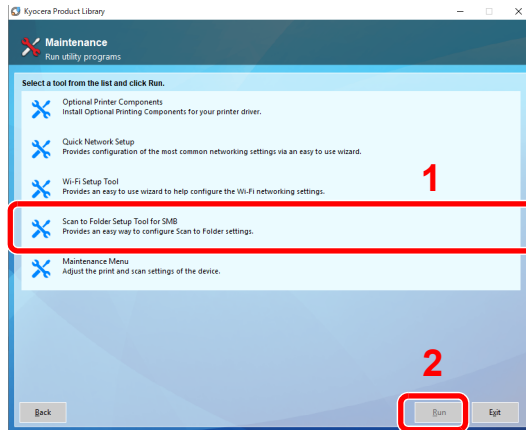


5 Configure the settings.

1 Select the device to use and click [Next].

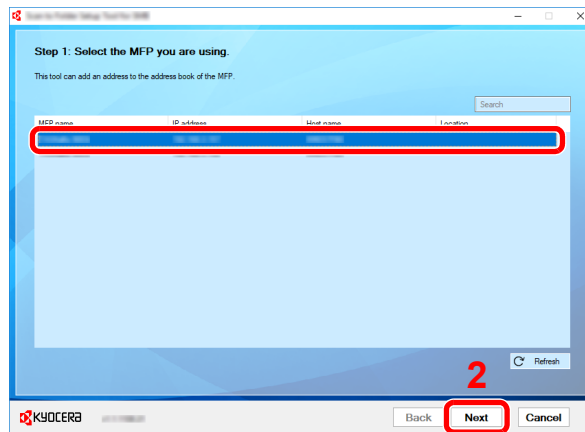


NOTE

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network cable and that it is turned on and click  **Refresh**.
- If user administration is valid on this machine, the user authentication screen appears. Log in with administrator privileges or as a user with execution authority.

The address book of the device appears.


2 Select [Add].

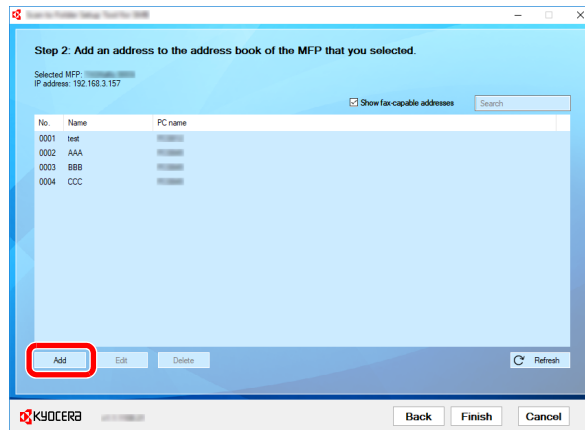

NOTE

- Clicking on **[Edit]** after selecting the registered address allows you to change the content of the registration.
- Unchecking the **[Show fax-capable addresses]** check-box will hide the address containing the fax.

3 Create a new folder.

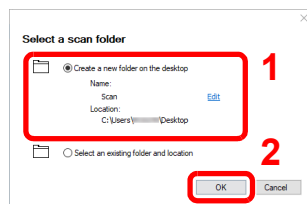

Select "Create a new folder on the desktop" and click **[OK]** to create a new folder on the desktop. (The default folder name is "Scan".)

NOTE

- Click **[Edit]** to change the desktop folder name.
- Selecting **[Select an existing folder and address]** allows you to select an existing folder that is already set as a shared folder on the PC.

4 Enter the information requested to register the address.

- 1 Enter the name for display in the address book.
- 2 Display the folder name and path to the shared folder.
- 3 Shared folders can be selected from a PC on the network.
- 4 Display the user name of the selected PC.
- 5 Enter the password corresponds to the log in user name of the selected PC.

5 Click [OK] to register the address to the address book.

6 Click [Close].

7 To register the registered address in a One Touch key, click [Yes].

8 Select a One Touch Key with no registered destination, and click [Submit].

9 Click [Close].

10 Click [Finish] to exit the Scan to Folder Setup Tool.

Registering Destinations in the Address Book

Save frequently used destinations to the Address Book or One Touch Keys. The saved destinations can be changed. The destinations are available for Send as E-mail, Send to Folder, and Fax Transmission.



NOTE

Registering and editing of the Address Book can also be done in Command Center RX.

➔ [Registering Destinations \(page 2-68\)](#)

Adding a Destination (Address Book)

Add a new destination to the Address Book. There are two registering methods, contacts and groups. When adding a group, enter the group name and select group members from the Address Book.



NOTE

If user login administration is enabled, you can only edit destinations in the Address Book by logging in with administrator privileges.

Contact (Up to 200)

Each address can include the information such as destination name, E-mail address, FTP server folder path, computer folder path, and FAX No.

1 Display the screen.

[System Menu/Counter] key > [Address Book/One Touch] > [Address Book] > [+] > [Contact]

2 Add the name.

Enter the destination name to be displayed on the Address Book > [Next]



NOTE

Up to 32 characters can be entered.
Refer to the following for details on entering characters.

➔ [Character Entry Method \(page 11-10\)](#)

3 Add the address.

E-mail Address

[E-mail Address] > Enter the E-mail address > [OK]



NOTE

Up to 256 characters can be entered.
Refer to the following for details on entering characters.

➔ [Character Entry Method \(page 11-10\)](#)

The Folder (SMB) Address

[SMB] > [Host Name], [Path], [Port], [Login User Name] and [Login Password] > [OK]

**NOTE**

For the computer name, share name, domain name, and user name, enter the information that you noted when you created the shared folder. For details on creating shared folders, refer to the following:

➔ [Preparation for Sending a Document to a Shared Folder in a PC \(page 3-18\)](#)

The table below explains the items to be entered.

Item	Description	Max. No. of Characters
Host Name	Computer name	Up to 256 characters
Path	Share name For example: scannerdata If saving in a folder in the shared folder: share name\folder name in shared folder	Up to 260 characters
Port	Port number (Normally 445.)	1 - 65535
Login User Name	If the computer name and domain name are the same: User Name For example: james.smith If the computer name and domain name are different: Domain name\User name For example: abcdnet\james.smith	Up to 64 characters
Login Password	Windows logon password (Case sensitive.)	Up to 64 characters

To search for a folder on a PC on the network, select in the following order.

[Menu] > [Search Folder from Network] or [Search Folder by Host Name]

If you selected [Search Folder from Network], you can search all PCs on the network for a destination.

If you selected [Search Folder by Host Name], you can enter the "Domain/Workgroup Name", and "Host Name" to search PCs on the network for the destination.

Up to 500 addresses can be displayed. The login user name and login password entry screen appears.

Select the host name (PC name) that you want to specify in the screen that appears > [Next].

**NOTE**

- Refer to the following for details on entering characters.

➔ [Character Entry Method \(page 11-10\)](#)

- Select [Menu] > [Connection Test] to check the connection to the server you chose. If the connection fails, check the entries you made.

The Folder (FTP) Address

[FTP] > [Host Name], [Path], [Port], [Login User Name] and [Login Password] > [OK]

The table below explains the items to be entered.

Item	Descriptions	Max. No. of Characters
Host Name	Host name or IP address of FTP server	Up to 64 characters
Path ^{*1}	Path for the file to be stored For example: User\ScanData If no path is entered, the file is stored in the home directory.	Up to 128 characters
Port	Port number (Normally 21.)	1 - 65535
Login User Name	FTP server login user name	Up to 64 characters
Login Password	FTP server login password	Up to 64 characters

*1 When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

**NOTE**

- Refer to the following for details on entering characters.
➔ [Character Entry Method \(page 11-10\)](#)
- Select [Menu] > [Connection Test] to check the connection to the FTP server you chose. If the connection fails, check the entries you made.

- 1 To specify the Address Number, select [Address Number].
- 2 Use [+] / [-] or the numeric keys to enter an address number (001 to 250).
To have the number assigned automatically, enter "000".

**NOTE**

- Address Number is an ID for a destination. A free number can be selected.
- If you specify an address number that is already in use, an error message appears.

- 3 Select [OK].
- 4 Check if the destination entry is correct > [Save]
The destination is added to the Address Book.

Group (Up to 50)

Compile two or more contacts into a group. Designations in the group can be added at the same time.

NOTE

To add a group, you need individually added destinations. Register one or more individual destinations as needed before proceeding. Up to 100 individually registered destinations and a combined total of up to 5 SMB and FTP destination folders can be registered in a single group.

1 Display the screen.

[System Menu/Counter] key > [Address Book/One Touch] > [Address Book] > [+] > [Group]

2 Add the name.

Enter the group name to be displayed on the Address Book > [Next]

NOTE

Up to 32 characters can be entered.
Refer to the following for details on entering characters.

➔ [Character Entry Method \(page 11-10\)](#)

3 Select the members (destinations).

1 Select [Member].

2 Select [+].

3 Select destinations (contacts) to add to the group. The selected destinations are indicated by a checkmark in the check box.

NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Specifying Destination \(page 5-20\)](#)

4 Select [OK].

If you have more destinations to add, repeat Steps 2 to 4.

5 Select [End].

6 To specify the Address Number, select [Address Number].

7 Use [+] / [-] or the numeric keys to enter an address number (001 to 250).

To have the number assigned automatically, enter "000".

NOTE

- Address Number is an ID for a destination. A free number can be selected.
- If you specify an address number that is already in use, an error message appears.

8 Select [OK].

9 Check if the selected destination was added to the group > [Save]

The group is added to the Address Book.

Editing and Deleting Address Book Entries

Edit and delete the destinations (contacts) you added to the Address Book.

1 Display the screen.

[System Menu/Counter] key > [Address Book/One Touch] > [Address Book]

2 Edit or delete the destination.




NOTE




Destinations can be sorted or searched by destination name or address number.

➔ [Specifying Destination \(page 5-20\)](#)


Editing a Contact

- 1 Select [] for the destination (contacts) to edit.
- 2 Change "Name", "Address Number" and destination type and address.
➔ [Contact \(Up to 200\) \(page 3-34\)](#)
- 3 After you have completed the changes, [Save] > [Yes]
Register the changed destination.

Editing a Group

- 1 Select [] for the group to edit.
- 2 Change "Name" and "Address Number".
➔ [Group \(Up to 50\) \(page 3-37\)](#)
- 3 Select [Member].
- 4 To delete any destination from the group, select the destination > [] > [Yes]
To add the destination, select [].
- 5 After you have completed the changes, [Save] > [Yes]
Register the changed group.

Deleting a Contact or Group

Select a destination or group to delete > [] > [Yes]

Adding a Destination on One Touch Key (One Touch Key)

Assign a new destination (contact or group) to an one touch key. A maximum of 100 destinations can be registered.

NOTE


- Refer to the following for use of One Touch Key.
 - ➔ [Specifying Destination \(page 5-20\)](#)
- You can add One Touch keys and change their settings on Command Center RX.
 - ➔ [Registering Destinations \(page 2-68\)](#)


1 Display the screen.

[System Menu/Counter] key > [Address Book/One Touch] > [One Touch Key]

2 Add One Touch Keys.

- 1 Select a One Touch Key number (001 to 100) for the destination > [**+**]
Selecting the [**Quick No. Search**] key enables direct entry of a One Touch Key number.
Select a One Touch Key with no registered destination.

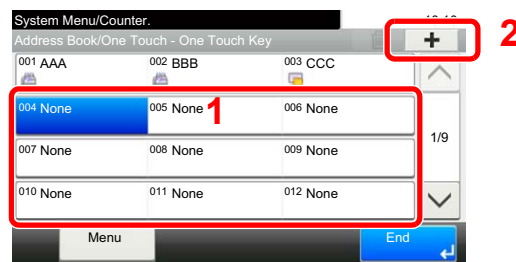

- 2 Select a destination (contact or group) to add to the One Touch Key number > [**Next**]
Selecting [] shows the detailed information of the selected destination.

NOTE

Destinations can be sorted or searched by destination name or address number.

- ➔ [Specifying Destination \(page 5-20\)](#)

- 3 Enter the One Touch Key name displayed in the send base screen > [**Next**]

NOTE

Up to 24 characters can be entered.
Refer to the following for details on entering characters.

- ➔ [Character Entry Method \(page 11-10\)](#)

- 4 Select [**Save**].

The destination will be added to the One Touch Key.

Editing and Deleting One Touch Key

Edit and delete the destinations you added to One Touch Key.

1 Display the screen.

- 1 [System Menu/Counter] key > [Address Book/One Touch] > [One Touch Key]
- 2 Select a One Touch Key number (001 to 100) to edit. Selecting the [Quick No. Search] key enables direct entry of a One Touch Key number.
The procedure differs depending on the details to be edited.

2 Edit and delete the destinations you added to One Touch Key.

Changing the Registered Information

- 1 [Menu] > [Edit] > [Destination]
- 2 Select a new destination (contact or group). Selecting [] shows the detailed information of the selected destination.



NOTE


Destinations can be sorted or searched by destination name or address number.

➔ [Specifying Destination \(page 5-20\)](#)

- 3 [OK] > [Save] > [Yes]
Add the destination to the One Touch Key.

Deleting the Registered Information

- 1 Select [].

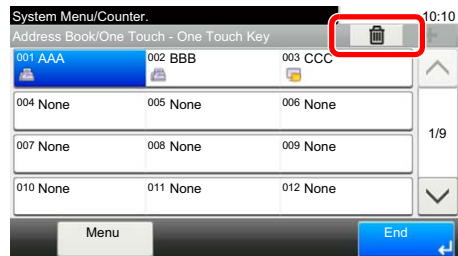

- 2 Select [Yes].
Deletion of the data registered in the One Touch Key.

4 Printing from PC

This chapter explains the following topics:


Printing from PC	4-2
Printing on Non-standard Sized Paper	4-4
Banner printing	4-5
Printer Driver Print Settings Screen	4-9
Printer Driver Help	4-10
Changing the Default Printer Driver Settings (Windows 8.1)	4-10
Canceling Printing from a Computer	4-10
Printing by AirPrint	4-11
Printing by Google Cloud Print	4-11
Printing by Mopria	4-11
Printing with Wi-Fi Direct	4-11
Printing Data Saved on the Printer	4-12
Specifying the Job Box from a Computer and Storing the Job	4-12
Printing Documents from Private Print Box	4-13
Printing Document from Stored Job Box	4-15
Printing Document from Quick Copy Box	4-17
Printing Document from Proof and Hold Box	4-19
Status Monitor	4-21
Accessing the Status Monitor	4-21
Exiting the Status Monitor	4-21
Status Monitor Display	4-21

Printing from PC

This section provides the printing method using the KX DRIVER.

NOTE

- To print the document from applications, install the printer driver on your computer from the supplied DVD (Product Library).
- In some environments, the current settings are displayed at the bottom of the printer driver.

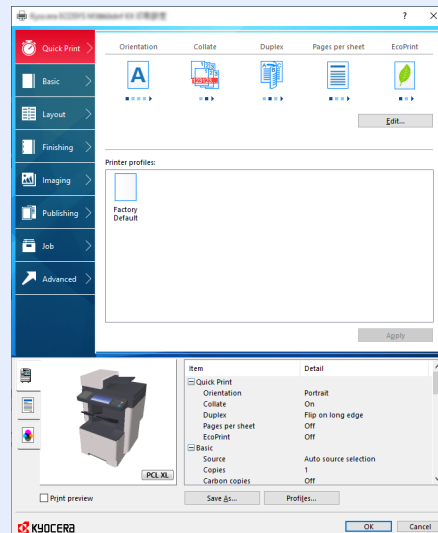

- When printing the cardstock or envelopes, load the cardstock or envelopes in the multi purpose tray before performing the following procedure.


➔ [When you load envelopes or cardstock in the multi purpose tray \(page 3-14\)](#)

1 Display the screen.

Click [File] and select [Print] in the application.

2 Configure the settings.

- 1 Select the machine from the "Printer" menu and click the [Properties] button.

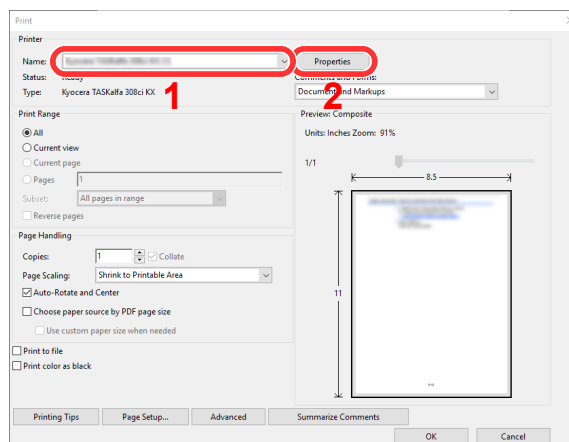


2 Select the **[Basic]** tab.

3 Click "Print size" menu and select the paper size to use for printing.

To load the paper of size that is not included in print sizes of the machine such as cardstock or envelopes, the paper size needs to be registered.

➔ [Printing on Non-standard Sized Paper \(page 4-4\)](#)

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

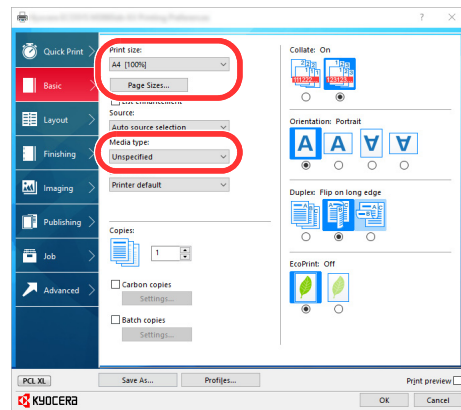

4 Click **[OK]** button to return to the Print dialog box.

3 Start printing.

Click the **[OK]** button.

Printing on Non-standard Sized Paper

If you loaded a paper size that is not included in the print sizes of the machine, register the paper size in the **[Basic]** tab of the print settings screen of the printer driver.

The registered size can be selected from the "Print size" menu.


NOTE

To execute printing at the machine, set the paper size and type in the following:


➔ [Paper Size and Media Type for the Multi Purpose Tray \(MP Tray Setting\) \(page 3-16\)](#)

1 Display the print settings screen.

2 Register the paper size.

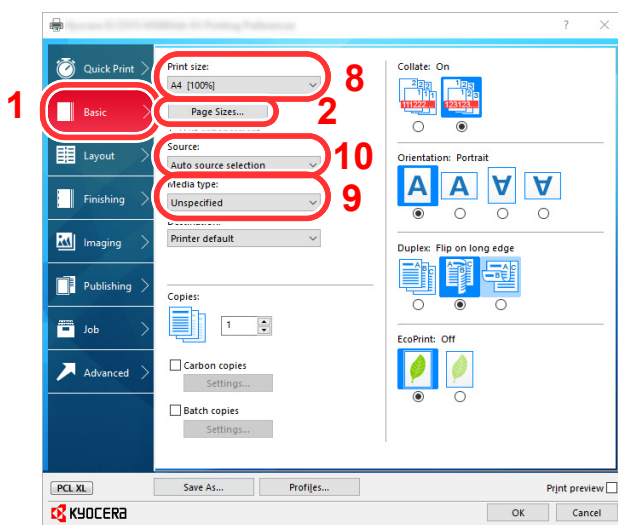

- 1 Click the **[Basic]** tab.
- 2 Click the **[Page Size...]** button.
- 3 Click the **[New]** button.
- 4 Enter the paper size.
- 5 Enter the name of the paper.
- 6 Click the **[Save]** button.
- 7 Click the **[OK]** button.
- 8 In the "Print size" menu, select the paper size (name) that you registered in steps 4 to 7.
- 9 Select the type of paper in the "Media type" menu.
- 10 Click **[MP tray]** in the "Source" menu.

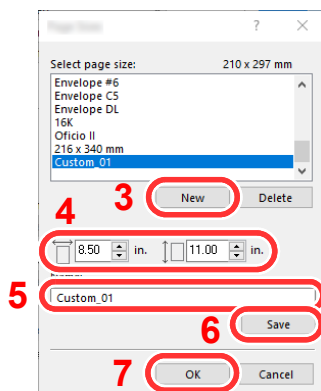

NOTE

If you loaded a postcard or envelope, select **[Cardstock]** or **[Envelope]** in the "Media type" menu.

Banner printing

When a document length from 470.1 mm (18.52") to a maximum of 915.0 mm (36.03") is specified for printing, the print job is treated as banner printing.


Follow the steps below to set banner paper in the printer driver.

1 Display the screen.


Click [File] and select [Print] in the application.

2 Configure the settings.

1 Select the machine from the "Name" menu and click the [Properties] button.

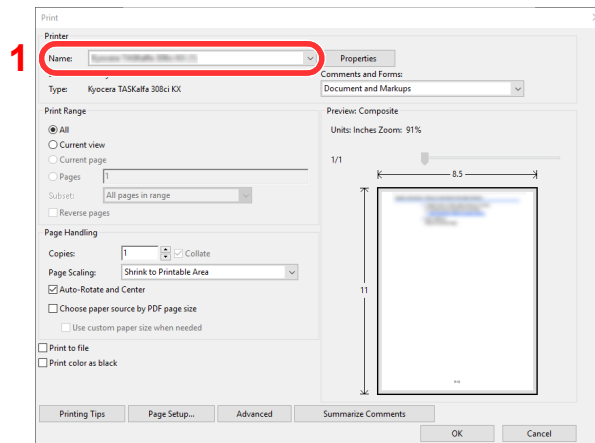


2 Select the [Basic] tab.

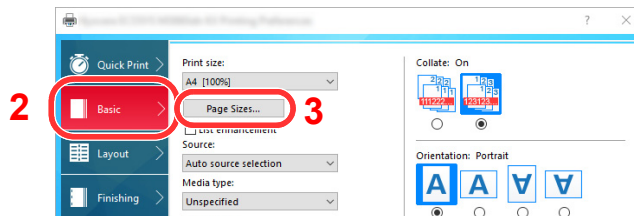

3 Click the [Page Size...] button.


3 Register the paper size.

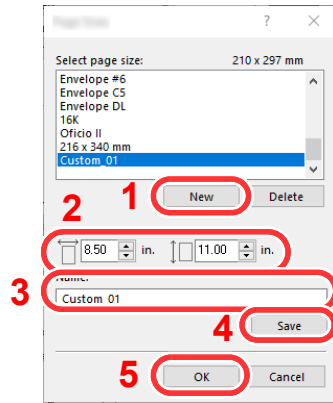

- 1 Click the **[New]** button.
- 2 Enter the length (470.1 mm (18.52") or longer), and width of the custom paper size being registered.
- 3 Enter the name of the paper.
- 4 Click the **[Save]** button.
- 5 Click the **[OK]** button.

4 Configure the print paper size.


- 1 Click "Print size" menu and select the paper size registered in step 3.

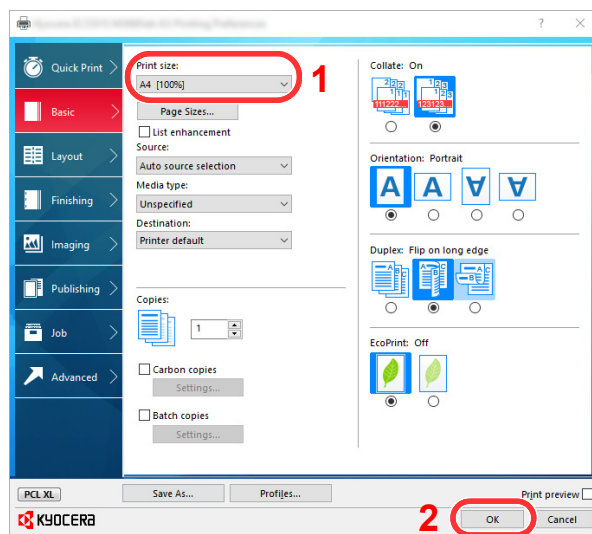


- 2 Click the **[OK]** button.

5 Load paper.

- 1 Open the multi purpose tray and extend the support tray section of the multi purpose tray.

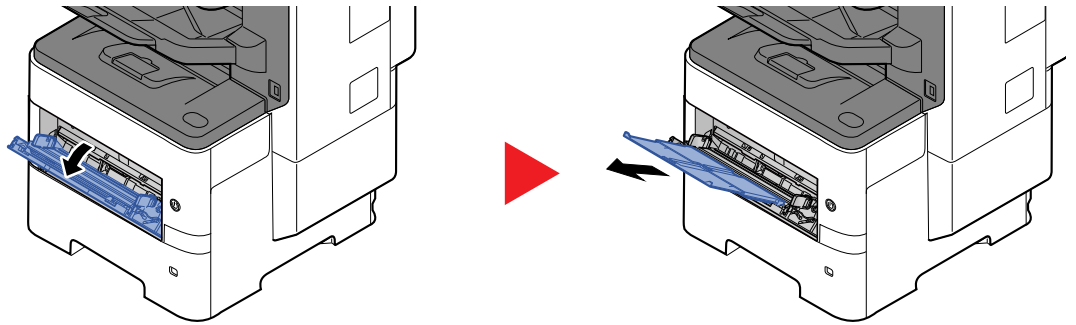


- 2 Load paper.

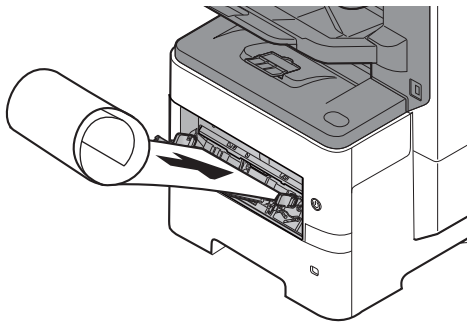

6 Start printing.


Click the [OK] button.

When you execute printing in this case, a message appears on the machine's operation panel. Place the paper in the Multi Purpose tray, continue to support it so that it does not fall, and select [Continue]. To cancel printing, select [Cancel].

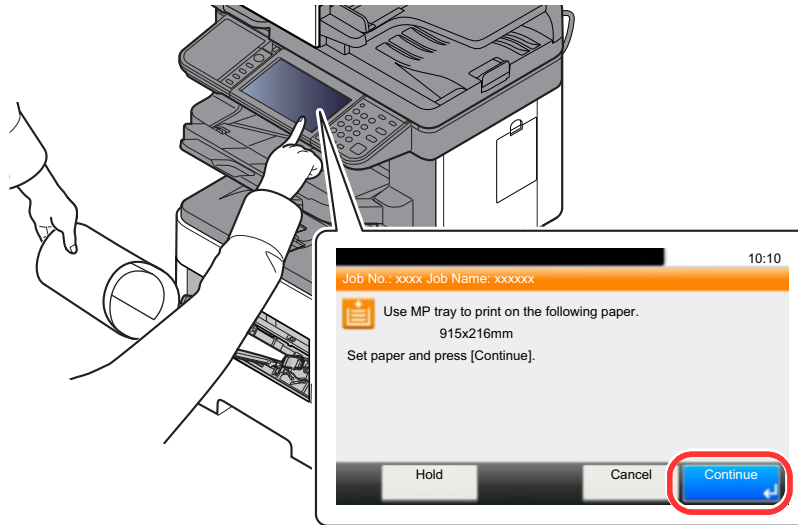

✔ IMPORTANT

After pressing [Continue], support the paper with both hands so that it feeds in correctly.

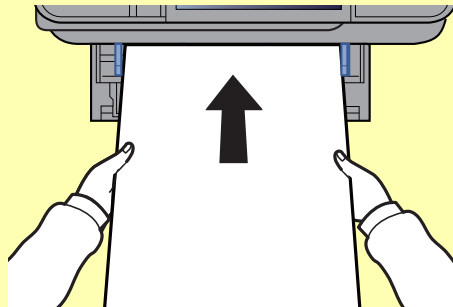

After printing starts, catch the paper when it is output so that it does not fall. When using the inner tray as the output location, do not stand up the stopper.


Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.


➔ [Message Banner Print \(page 8-21\)](#)

Printer Driver Print Settings Screen

The printer driver print settings screen allows you to configure a variety of print-related settings.


➔ **Printer Driver User Guide**

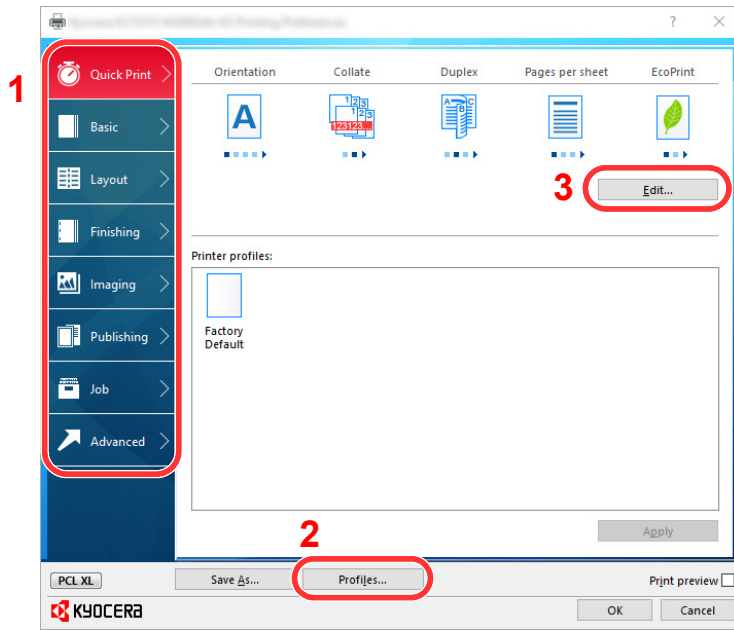

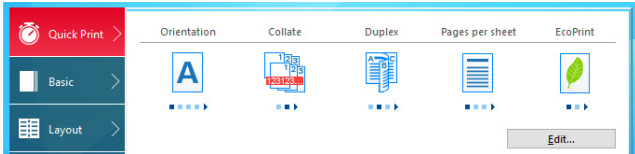No.	Description
1	<p>[Quick Print] tab Provides icons that can be used to easily configure frequently used functions. Each time you click an icon, it changes to an image resembling the print results and applies the settings.</p>  <p>[Basic] tab This tab groups basic functions that are frequently used. You can use it to configure the paper size, and duplex printing.</p> <p>[Layout] tab This tab lets you configure settings for printing various layouts, including booklet printing, combine mode, poster printing, and scaling.</p> <p>[Finishing] tab This tab lets you configure settings related to finishing of printed media, including stapling.</p> <p>[Imaging] tab This tab lets you configure settings related to the quality of the print results.</p> <p>[Publishing] tab This tab lets you create covers and inserts for print jobs and put inserts between sheets of OHP film.</p> <p>[Job] tab This tab lets you configure settings for saving print data from the computer to the machine. Regularly used documents and other data can be saved to the machine for easy printing later. Since saved documents can be printed directly from the machine, this function is also convenient when you wish to print a document that you don't want others to see.</p> <p>[Advanced] tab This tab lets you configure settings for adding text pages or watermarks to print data.</p>
2	<p>[Profiles] Printer driver settings can be saved as a profile. Saved profiles can be recalled at any time, so it's a convenient practice to save frequently used settings.</p>
3	<p>[Reset] Click to revert settings to their initial values.</p>

Printer Driver Help

The printer driver includes Help. To learn about print settings, open the printer driver print settings screen and display Help as explained below.

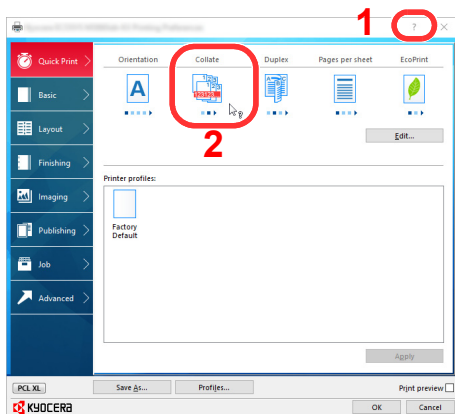

- 1 Click the [?] button in the upper right corner of the screen and then click the item you want to know about.
- 2 Click the item you want to know about.



NOTE

The Help appears, even when you click the item you want to know about and press the [F1] key on your keyboard.

Changing the Default Printer Driver Settings (Windows 8.1)

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to the following:

➔ Printer Driver User Guide

- 1 In charms on Desktop, click [Settings], [Control Panel], and then [Devices and Printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click the [Basic] button on the [General] tab.
- 4 Select the default settings and click the [OK] button.

Canceling Printing from a Computer


To cancel a print job executed using the printer driver before the printer begins printing, do the following:



NOTE

When canceling printing from this machine, refer to the following:

➔ [Canceling Jobs \(page 5-17\)](#)

- 1 Double-click the printer icon () displayed on the taskbar at the bottom right of the Windows desktop to display a dialog box for the printer.
- 2 Click the file for which you wish to cancel printing and select [Cancel] from the "Document" menu.

Printing by AirPrint

AirPrint is a printing function that is included standard in iOS 4.2 and later products, and Mac OS X 10.7 and later products.

This function enables you to connect and print to any AirPrint compatible device without installing a printer driver.

To allow the machine to be found when printing by AirPrint, you can set machine location information in Command Center RX.

➔ [Command Center RX User Guide](#)



Printing by Google Cloud Print

Google Cloud Print is a printing service provided by Google and does not require a printer driver. This service enables a user with a Google account to print from a machine connected to the Internet.

The machine can be configured in the Command Center RX.

➔ [Command Center RX User Guide](#)

NOTE

A Google account is necessary to use Google Cloud Print. Obtain a Google account if you do not have one.

It is also necessary to register the machine with the Google Cloud Print service in advance. The machine can be registered from a PC connected to the same network.

Printing by Mopria

Mopria is a standard on printing function included in Android 4.4 or later products. Mopria Print Service needs to be installed and enabled in advance.

For details on how to use, refer to a Web site of Mopria Alliance.



Printing with Wi-Fi Direct

Wi-Fi Direct is a wireless LAN standard that Wi-Fi Alliance has been established. This is one of the functions of the wireless LAN, without a wireless LAN access point or wireless LAN router, between devices can communicate directly on a peer to peer basis.

The printing procedure by the Wi-Fi Direct is the same as that from the normal handheld devices.

When you use a printer name or Bonjour name on the port settings of the printer property, you can print the job by specifying the name at Wi-Fi Direct connection.

When you use an IP address for the port, specify the IP address of this machine.

Printing Data Saved on the Printer

If you configure settings in the **[Job]** tab of the printer driver and then print, the print job will be saved in the Job Box (memory) and printing can be executed at the machine.

Follow the work flow below when using Job Box.

Specifying the Job Box from a computer and sending the print job. ([page 4-12](#))



Using the operation panel to specify a file within a Box and printing it.

You can print the documents from the following boxes.

- ➔ [Printing Documents from Private Print Box \(page 4-13\)](#)
- ➔ [Printing Document from Stored Job Box \(page 4-15\)](#)
- ➔ [Printing Document from Quick Copy Box \(page 4-17\)](#)
- ➔ [Printing Document from Proof and Hold Box \(page 4-19\)](#)

Specifying the Job Box from a Computer and Storing the Job

Use the procedure below to store data in a Job Box.

- 1 Click **[File]** and select **[Print]** in the application. The Print dialog box displays.
- 2 Select the machine from the "Name" menu.
- 3 Click the **[Properties]** button. The Properties dialog box displays.
- 4 Click the **[Job]** tab and select the **[Job storage (e-MPS)]** check box to set the function.



NOTE

- To use Stored Job Box and Quick Copy Box, an optional hard disk/SSD must be installed in the machine.
- For information on how to use the printer driver software, refer to the following:

➔ **Printer Driver User Guide**

Printing Documents from Private Print Box

In Private Printing, you can specify that a job is not to be printed until you operate the machine. When sending the job from the application software, specify a 4-digit access code in the printer driver. The job is released for printing by entering the access code on the operation panel, ensuring confidentiality of the print job. The data will be deleted upon completion of the print job or after the power switch is turned off.

The following operations are possible:

- ➔ [Printing the Documents \(page 4-13\)](#)
- ➔ [Deleting the Documents \(page 4-14\)](#)

Printing the Documents

Print the documents stored in a Private Print box. The procedure is as follows.

1 Display the screen.

- 1** Select [**Job Box**] in the home screen.
- 2** Select [**Private Print/Stored Job**].
- 3** Select the creator of the document.

2 Print the document.

- 1** Select the document to print > [**Print**]
- 2** Enter the access code.
- 3** Specify the number of copies to print as desired.
- 4** Select [**OK**].

Printing starts.

Upon completion of printing, the Private Print job is automatically deleted.


Deleting the Documents


Delete the documents stored in a Private Print box. The procedure is as follows.

1 Display the screen.

- 1 Select [Job Box] in the home screen.
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

2 Delete the document.

- 1 Select the document to delete > []

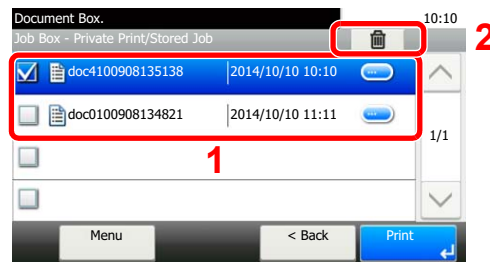

- 2 Enter the access code.
The document is deleted.

Printing Document from Stored Job Box

In Stored Job, the print data sent from the application is saved to the machine. You can set up an access code as necessary. If you set up an access code, enter the access code when printing. Print data will be stored in the Stored Job Box after printing. This will allow printing of the same print data repeatedly.

The following operations are possible:

- ➔ [Printing the Documents \(page 4-15\)](#)
- ➔ [Deleting the Documents \(page 4-16\)](#)

Printing the Documents

Print the documents stored in a Stored Job box. The procedure is as follows.

1 Display the screen.

- 1 Select [**Job Box**] in the home screen.
- 2 Select [**Private Print/Stored Job**].
- 3 Select the creator of the document.

2 Print the document.

- 1 Select the document to print > [**Print**]
- 2 Specify the number of copies to print as desired.
- 3 Select [**OK**].

Printing starts.



NOTE

If the document is protected by an access code, the password entry screen will be displayed. Enter the password using the numeric keys.


Deleting the Documents


Delete the documents stored in a Stored Job box. The procedure is as follows.

1 Display the screen.

- 1 Select [Job Box] in the home screen.
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

2 Print and delete the document.

- 1 Select the document to delete > []

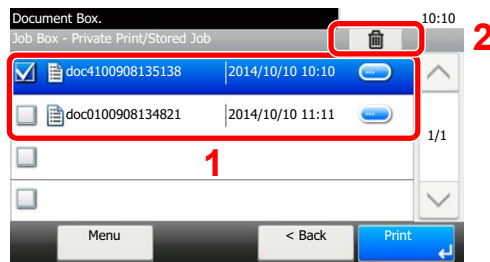

- 2 Select [Yes].

The document is deleted.

NOTE

If the document is protected by an access code, the password entry screen will be displayed. Enter the password using the numeric keys.

Printing Document from Quick Copy Box

Quick Copy feature facilitates additional prints of a document already printed. Activating Quick Copy and printing a document using the printer driver allow the print data to be stored in the Quick Copy Job Box. When additional copies are required, you can reprint the required number of copies from the touch panel. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.

NOTE

- When the number of jobs reaches the limit, the oldest job will be overwritten by the new one.
- To maintain free space on the box, you can set the maximum number of stored jobs.

➔ [Quick Copy Job Retention \(page 8-23\)](#)

The following operations are possible:

➔ [Printing the Documents \(page 4-17\)](#)

➔ [Deleting the Documents \(page 4-18\)](#)

Printing the Documents

You can print the documents stored in the Quick Copy box. The procedure is as follows.

1 Display the screen.

- 1** Select [**Job Box**] in the home screen.
- 2** Select [**Quick Copy/Proof and Hold**].
- 3** Select the creator of the document.

2 Print the document.

- 1** Select the document to print > [**Print**]
- 2** Specify the number of copies to print as desired.
- 3** Select [**OK**].
Printing starts.


Deleting the Documents


You can delete the documents stored in the Quick Copy box. The procedure is as follows.

1 Display the screen.

- 1 Select [Job Box] in the home screen.
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

2 Delete the document.

- 1 Select the document to delete > []

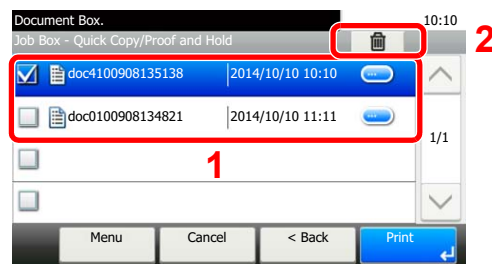

- 2 Select [Yes].

The document is deleted.

Printing Document from Proof and Hold Box

The Proof and Hold feature produces only a single proof print of multiple-print job and holds printing of the remaining copies. Printing a multiple-print job in Proof and Hold using the printer driver allows only a single copy to be printed while maintaining the document data in the Job Box. To continue to print the remaining copies, use the touch panel. You can change the number of copies to print.

The following operations are possible:

- ➔ [Printing the Documents \(page 4-19\)](#)
- ➔ [Deleting the Documents \(page 4-20\)](#)

Printing the Documents

You can print the documents stored in the Proof and Hold box. The procedure is as follows.

1 Display the screen.

- 1** Select [**Job Box**] in the home screen.
- 2** Select [**Quick Copy/Proof and Hold**].
- 3** Select the creator of the document.

2 Print the document.

- 1** Select the document to print > [**Print**]
- 2** Specify the number of copies to print as desired.
- 3** Select [**OK**].
Printing starts.


Deleting the Documents


You can delete the documents stored in the Proof and Hold box. The procedure is as follows.

1 Display the screen.

- 1 Select [Job Box] in the home screen.
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

2 Delete the document.

- 1 Select the document to delete > []

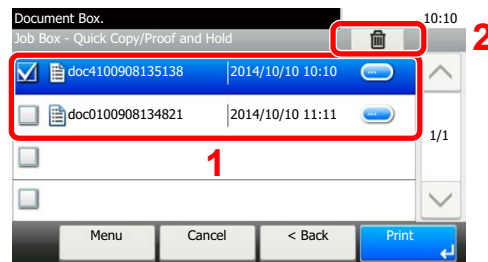

- 2 Select [Yes].

The document is deleted.

Status Monitor

The Status Monitor monitors the printer status and provides an ongoing reporting function.

NOTE

When you activate Status Monitor, check the status below.

- KX DRIVER is installed.
- Either [Enhanced WSD] or [EnhancedWSD(SSL)] are set to [On] in "Network".

➔ [Network \(page 8-28\)](#)

Accessing the Status Monitor

The Status Monitor also starts up when printing is started.

Exiting the Status Monitor

Use either of the methods listed below to exit the Status Monitor.


- Exit manually:
Click the settings icon and select Exit in the menu to exit the Status Monitor.
- Exit automatically:
The Status Monitor automatically shuts down after 7 minutes if it is not being used.

Status Monitor Display

The display of the Status Monitor is as follows.

Quick View State


The status of the printer is displayed using icons. Detailed information is displayed when the Expand button is clicked.

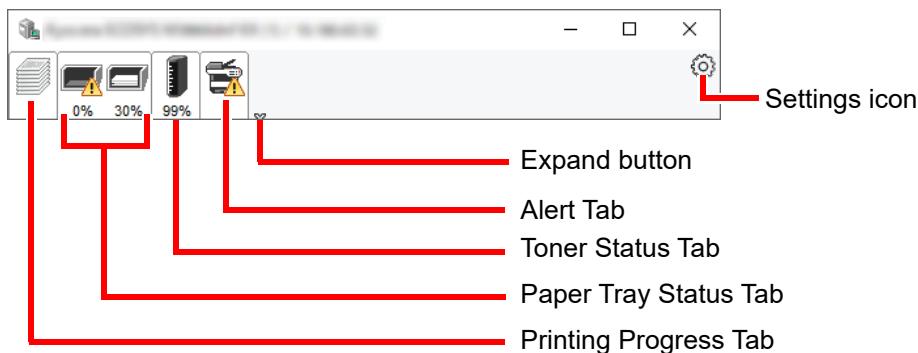

Detailed information is displayed by clicking on each icon tab.

Printing Progress Tab


The status of the print jobs is displayed.

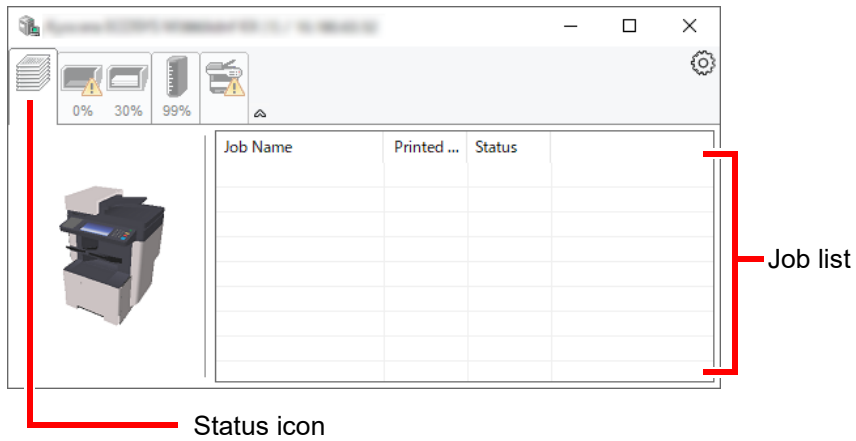

Select a job on the job list and it can be canceled using the menu displayed with a right-click.


Paper Tray Status Tab

Information is displayed about the paper in the printer and about the amount of paper remaining.

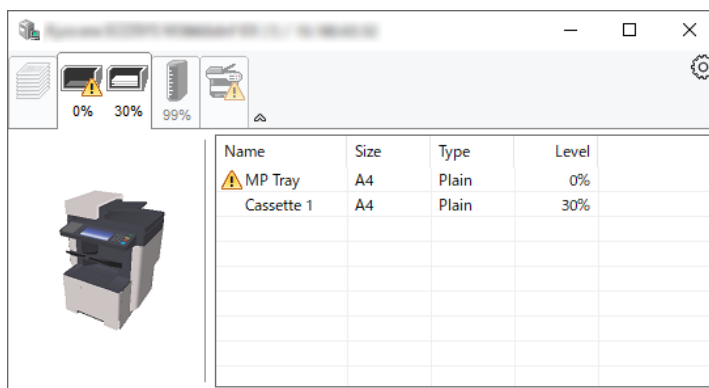


Toner Status Tab

The amount of toner remaining is displayed.

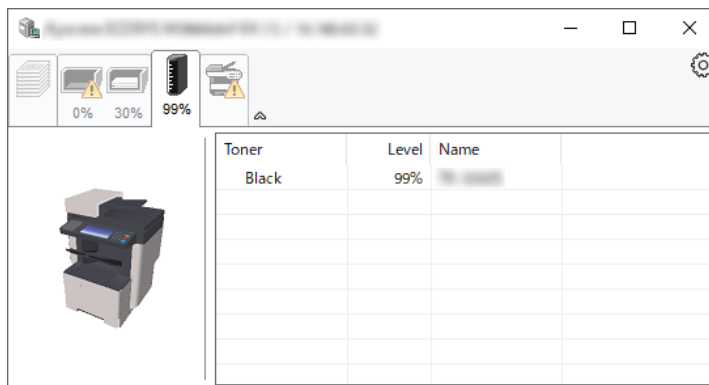


Alert Tab

If an error occurs, a notice is displayed using a 3D image and a message.

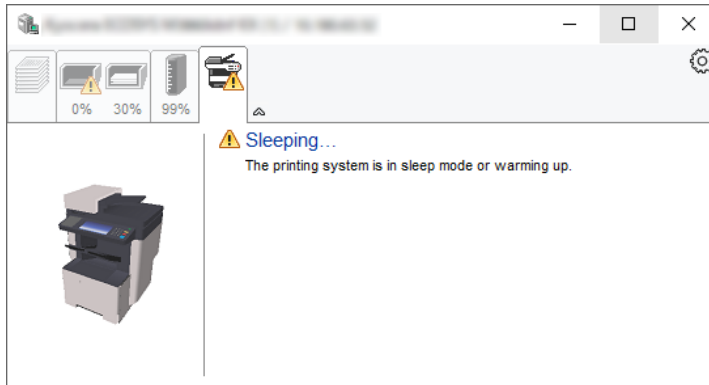

Status Monitor Context Menu


The following menu is displayed when the settings icon is clicked.

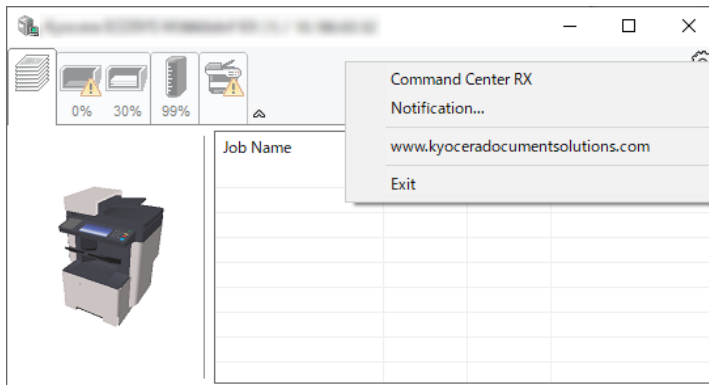

- **Command Center RX**
If the printer is connected to a TCP/IP network and has its own IP address, use a web browser to access the Command Center RX to modify or confirm the network settings. This menu is not displayed when using USB connection.
➔ **Command Center RX User Guide**
- **Notification...**
This sets the display of the Status Monitor.
➔ [Status Monitor Notification Settings \(page 4-24\)](#)
- **www.kyoceradocumentsolutions.com**
Open our website.
- **Exit**
Exits the Status Monitor.

Status Monitor Notification Settings

The Status Monitor settings and event list details are displayed.

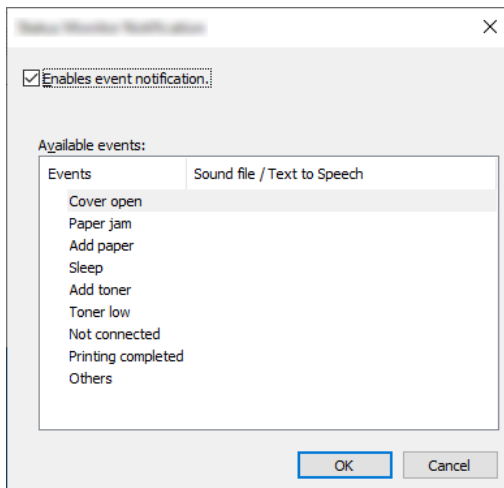

Select whether notification is performed when an error in the event list occurs.


1 Select Enable event notification.

If this setting is set to Off, then the Status Monitor will not start up even when printing is executed.

2 Select an event to use with the text to speech function in Available events.

3 Click Sound file / Text to Speech column.

Click the browse (...) button to notify the event by sound file.

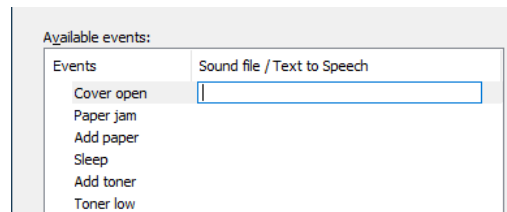

NOTE

The available file format is WAV.

When customizing the message texts to read on the screen aloud, enter the texts in the text box.

5 Operation on the Machine


This chapter explains the following topics:

Loading Originals	5-2
Placing Originals on the Platen	5-2
Loading Originals in the Document Processor	5-3
Favorites	5-6
Registering Favorite	5-7
Recalling Favorite	5-9
Editing and Deleting Favorite	5-10
Application	5-11
Installing Applications	5-11
Using Applications	5-12
Uninstalling Applications	5-13
Registering Shortcuts	5-14
Adding Shortcuts	5-14
Editing and Deleting Shortcuts	5-15
Copying	5-16
Basic Operation	5-16
Canceling Jobs	5-17
Sending	5-18
Basic Operation	5-19
Specifying Destination	5-20
Checking and Editing Destinations	5-25
Confirmation Screen of Destinations	5-26
Recall	5-27
Send to Me (E-mail)	5-27
Sending to Different Types of Destinations (Multi Sending)	5-28
Canceling Sending Jobs	5-29
WSD Scan	5-30
Scanning using TWAIN or WIA	5-32
Scanning with File Management Utility	5-33
Using fax server to send a fax (fax server transmission)	5-34
Configuring Settings before Sending	5-34
Using fax server to send a fax	5-34
How to use the FAX Function	5-36
What is Document Box?	5-37
Basic Operation for Document Box	5-38
Box List Operations	5-38
Document List Operations	5-38
Using a Custom Box	5-39
Creating a New Custom Box	5-39
Editing and Deleting Custom Box	5-41
Saving Scanned Documents to a Custom Box	5-42
Moving Documents in Custom Box	5-43
Copying Documents in Custom Box into Other Boxes	5-43
Copying Documents in Custom Box to USB Drive	5-44
Joining Documents in Custom Box	5-45
Deleting Documents in Custom Box	5-46
Printing Documents in Custom Box	5-46
Sending Documents in a Custom Box	5-47
Sending Documents in Custom Box to E-mail Address of Logged in user.	5-48
Scanning Document Stored in a Custom Box	5-49
Printing Documents Stored in USB Drive	5-50
Saving Documents to USB Drive (Scan to USB)	5-52
Check the USB Drive Information	5-53
Removing USB Drive	5-54
Using the Manual Stapler (ECOSYS M3860idn only)	5-55

Loading Originals

Placing Originals on the Platen

You may place books or magazines on the platen in addition to ordinary sheet originals.

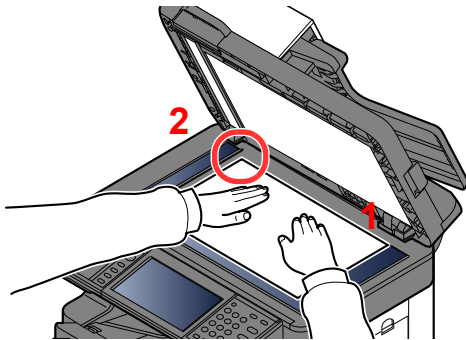


- 1 Put the scanning side facedown.
- 2 Align it flush against the original size indicator plates with the back left corner as the reference point.

NOTE

For details on Original Orientation, refer to the following:

➔ [Original Orientation \(page 6-12\)](#)

When you place envelopes or cardstock on the platen

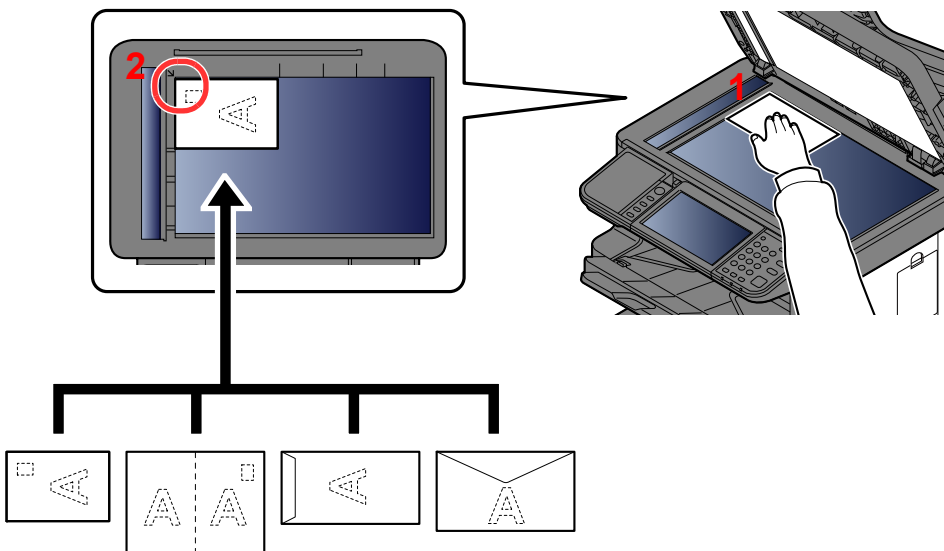

- 1 Put the scanning side facedown.
- 2 Align it flush against the original size indicator plates with the back left corner as the reference point.

NOTE

For the procedure for feeding envelopes or cardstock, refer to the following:

➔ [When you load envelopes or cardstock in the multi purpose tray \(page 3-14\)](#)

CAUTION

Do not leave the document processor open as there is a danger of personal injury.

IMPORTANT

- Do not push the document processor forcefully when you close it. Excessive pressure may crack the platen glass.
- When placing books or magazines on the machine, do so with the document processor in the open position.

Loading Originals in the Document Processor

The document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

Originals Supported by the Document Processor

The document processor supports the following types of originals.

Weight	50 to 120 g/m ² (duplex: 50 to 120 g/m ²)
Sizes	Maximum 216 x 355.6 mm (Long-sized 216 x 915 mm) to Minimum 105 x 148 mm
No. of sheets	100 sheets or less (50 to 80 g/m ²)

Originals Not Supported by the Document Processor

Do not use the document processor for the following types of originals. Otherwise, the originals may be jammed or the document processor may become dirty.


- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam.)
- Originals with adhesive tape or glue
- Originals with cut-out sections
- Curled original
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam.)
- Carbon paper
- Crumpled paper

How to Load Originals

✔ IMPORTANT


- Before loading originals, be sure that there are no originals left on the original eject table. Originals left on the original eject table may cause the new originals to jam.
- Do not make an impact on the document processor top cover, such as aligning the originals on the top cover. It may cause an error in the document processor.

1 Adjust the original width guides.

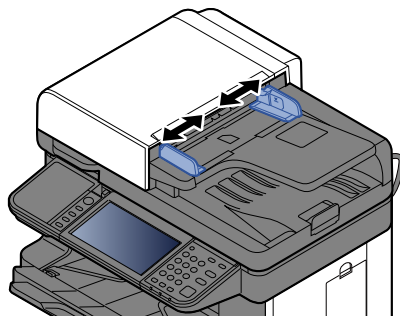

2 Place the originals.

- 1 Put the side to be scanned (or the first side of two-sided originals) face-up. Slide the leading edge into the document processor as far as it will go.

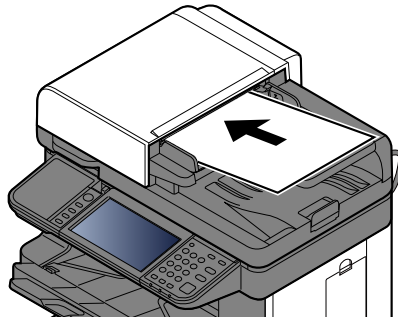

NOTE


For details on Original Orientation, refer to the following:

➔ [Original Orientation \(page 6-12\)](#)



IMPORTANT

Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.

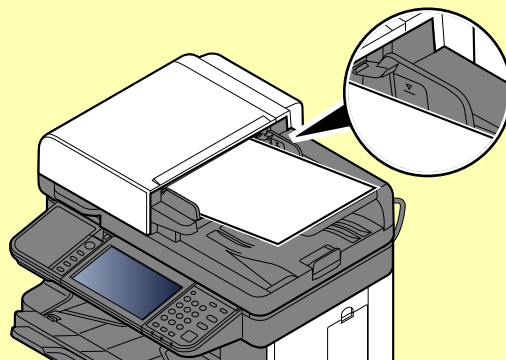


Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.

Originals with punched holes or perforated lines should be placed in such a way that the holes or perforations will be scanned last (not first).

- 2 Open the original stopper to fit the size of the original set.

A4, Letter, Legal

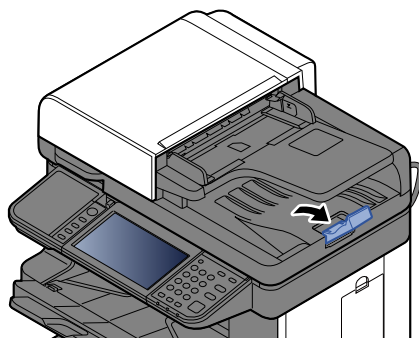

Favorites

Frequently used functions can be registered as favorites so that they can be called up easily.

The following functions are pre-registered on this machine. You can delete these functions as well as register new functions.

Favorites Name	Description	Default Registration
ID Card Copy	Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.	<ul style="list-style-type: none"> • Copying Functions • Program mode • Combine: [2 in 1] ID Card Copy: [On] Continuous Scan: [On] Original Size: [A5-R] Paper Selection: Cassette 1 Zoom: [Auto Zoom]
Paper Saving Copy	Use this when you want to reduce paper use. Page combining and two-sided copying can be set by following the screen.	<ul style="list-style-type: none"> • Copying Functions • Wizard mode • Combine: [2 in 1] Duplex: [1-sided>>2-sided] Paper Selection: Cassette 1 Copies: 1
Scan to PC (Address Entry)	Use this when you want to send the image to either a shared folder on a PC or an FTP server folder. The settings such as the destination and color selection can be set by following the screen.	<ul style="list-style-type: none"> • Sending Functions • Wizard mode • Destination: New PC Folder Color Selection: [Full Color] File Name Entry: Default File Format: [PDF] Continuous Scan: [Off] Scan Resolution: [300×300 dpi]
Scan to PC (Address Book)	Use this when you want to send the image to either a shared folder on a PC registered in the Address Book or to an FTP server folder. The settings such as the destination and color selection can be set by following the screen.	<ul style="list-style-type: none"> • Sending Functions • Wizard mode • Destination: Address Book Color Selection: [Full Color] File Name Entry: Default File Format: [PDF] Continuous Scan: [Off] Scan Resolution: [300×300 dpi]
Scan to E-mail (Address Entry)	Use this when you want to send the image to an E-mail address. The settings such as the destination and color selection can be set by following the screen.	<ul style="list-style-type: none"> • Sending Functions • Wizard mode • Destination: New E-mail Address Color Selection: [Full Color] File Name Entry: Default File Format: [PDF] Continuous Scan: [Off] Scan Resolution: [300×300 dpi] E-mail subject: Default E-mail body: Default

Favorites Name	Description	Default Registration
Scan to E-mail (Address Book)	Use this when you want to send the image to an E-mail address registered in the Address Book. The settings such as the destination and color selection can be set by following the screen.	<ul style="list-style-type: none"> • Sending Functions • Wizard mode • Destination: Address Book Color Selection: [Full Color] File Name Entry: Default File Format: [PDF] Continuous Scan: [Off] Scan Resolution: [300×300 dpi] E-mail subject: Default E-mail body: Default

**NOTE**

Up to 20 settings can be registered as favorites.

Registering Favorite

When registering a favorite, you can choose from two methods for calling it up:

- Wizard mode: Registered settings are called up in order and configured as you check or change each one.
- Program mode: Settings are called up immediately when you select the key to which they are registered.

Sending is explained as an example below.

Wizard Mode

1 Display the screen.

Select [**Favorites**] on the Home screen.

2 Register the favorite.

- 1 [**Menu**] > [**Add**]
- 2 Select the job type.
- 3 Select [**Wizard**].
- 4 Select the recall function > [**Next**]

**NOTE**

When the job type is "Copy", the Destination Recall Method screen will not be displayed.

- 5 Enter the new favorite name > [**Next**]

➔ [Character Entry Method \(page 11-10\)](#)

- 6 Check the settings and change or add information as needed.

Item	Description
Name	Enter the name displayed on the favorite screen (up to 32 characters).
Job Type	The type of the selected job is displayed.
Number^{*1}	Enter the favorite number. If you enter 00, the smallest number available will be automatically assigned.
Owner^{*2}	Displays the owner of the favorite.
Permission^{*2}	Configures permission settings for favorites to determine how they are shared with other users.
Destination^{*3}	Selects the Destination Recall Method.
Functions	Selects the functions to be displayed in the wizard.
Function Type	Selects the method for recalling favorites.

*1 If user login administration is enabled, you can only change the settings by logging in with administrator privileges.

*2 Displayed when user login administration is enabled.

*3 Displayed when the job type is **[Send]** or **[FAX]**.

- 7 Select **[Save]**.

The favorite is registered.

- 8 "Do you want to add a new function to the home screen?" screen appears. To display a registered favorite on the Home screen, select **[Yes]** and specify the position in which you want to display the icon of registered favorite, and select **[Save]**.

Program Mode

When registering favorites in program mode, configure the copy function, send function, fax function, destination, or other setting to register.

1 Display the screen.

- 1 Select **[Send]** on the Home screen.
- 2 Select the sending functions and destinations that you want to register in the program.
- 3 Select **[Favorites]**.

2 Register the favorite.

- 1 **[Menu]** > **[Add]**
- 2 Select the job type.
- 3 Select **[Program]**.
- 4 Enter the new favorite name > **[Next]**
 ➔ [Character Entry Method \(page 11-10\)](#)

- 5 Check the settings and change or add information as needed.

Item	Description
Name	Enter the name displayed on the favorite screen (up to 32 characters).
Job Type	The type of the selected job is displayed.
Number^{*1}	Enter the favorite number. If you enter 00, the smallest number available will be automatically assigned.
Owner^{*2}	Displays the owner of the favorite.
Permission^{*2}	Configures permission settings for favorites to determine how they are shared with other users.
Function Type	Selects the method for recalling favorites.

*1 If user login administration is enabled, you can only change the settings by logging in with administrator privileges.

*2 Displayed when user login administration is enabled.

- 6 Select [**Save**].

The favorite is registered.

- 7 "Do you want to add a new function to the home screen?" screen appears. To display a registered favorite on the Home screen, select [**Yes**] and specify the position in which you want to display the icon of registered favorite, and select [**Save**].

Recalling Favorite

Use the procedure below to recall a registered favorite.

1 Display the screen.

- 1 Select [**Favorites**] on the Home screen, or the key of the registered favorite.

Selecting the key of the registered favorite will recall the favorite. If you selected [**Favorites**], proceed to the next step.

- 2 Select the key for the favorite you want to recall.

2 Execute the favorite.

When using the wizard mode

- 1 The registered screens are displayed in order. Make the desired settings and select [**Next**].

When all the settings are complete, the confirmation screen is displayed.



NOTE

To edit the settings, select [**<Back**] and make changes as desired.

- 2 Place the originals > [**Start**] key

When using the program mode

Place the originals > [**Start**] key

Editing and Deleting Favorite

You can change favorite number and favorite name, or delete favorite.

Use the procedure below to edit or delete a favorite.

1 Display the screen.

Select [**Favorites**] on the Home screen.

2 Edit the favorite.

To edit a favorite

1 [**Menu**] > [**Edit**]

2 Select the favorite you wish to edit.

3 Change the favorite number, favorite name, permission.

➔ [Registering Favorite \(page 5-7\)](#)

4 [**Save**] > [**Yes**]

To delete

1 [**Menu**] > [**Delete**]

2 Select the favorite you wish to delete.

3 Select [**Yes**].

Application

The functionality of the machine can be expanded by installing applications.

Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

For details, consult your sales representative or dealer.

Installing Applications

To use applications, first install the application in the machine and then activate the application.

NOTE

A maximum of 16 applications and 5 licenses can be installed on the machine. To add different applications, uninstall an application that has been installed.

➔ [Uninstalling Applications \(page 5-13\)](#)

The procedure is as follows.

1 Display the screen.

[System Menu/Counter] > [Application] > [Application]

NOTE

If the user authentication screen appears, enter your login user name and login password and select [**Login**]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

2 Install the application.


1 Select [**+**].

2 Insert the USB drive containing the application to be installed into the USB Memory Slot.

NOTE

When the message "USB Drive was recognized. Displaying files. Are you sure?" is displayed, select [**No**].

3 Select the application to be installed > [**Install**]

You can view detailed information on the selected application by selecting [].

4 Select [**Yes**].

Installation of the application begins. Depending on the application being installed, the installation may take some time.


Once the installation ends, the original screen reappears.

NOTE

- To install another application, repeat steps 2-3 and 2-4.
- To remove the USB drive, select [**Remove USB Drive**] and wait until the message "USB Drive can be safely removed." appears. Then remove the USB drive.

3 Activate the application.

- 1 Select the desired application > [Menu] > [Activate]

You can view detailed information on the selected application by selecting [].

- 2 [Official] > Enter the license key > [OK]

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to step 3-3. To use the application as a trial, select [Trial] without entering the license key.

- 3 Select [Yes].



IMPORTANT

If you change the date/time while using the trial version of an application, you will no longer be able to use the application.

Using Applications

Icons of activated application are displayed in the Home screen. Select the application icon in the Home screen.

The application will start up.

Uninstalling Applications

The procedure is as follows.

1 Display the screen.

[System Menu/Counter] key > [Application] > [Application]



NOTE


If the user authentication screen appears, enter your login user name and login password and select [**Login**]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000


2 Deactivate the application.


1 Select the application you want to deactivate > [Menu] > [Deactivate]

You can view detailed information on the selected application by selecting [].

2 Select [Yes].

3 Uninstall the application.

1 Select the application you want to uninstall > []

You can view detailed information on the selected application by selecting [].

2 Select [Yes].

Registering Shortcuts

You can register shortcuts for easy access to the frequently used functions. The settings for the selected function can also be registered. A function name linked to a registered shortcut can be changed as necessary. You can register up to 2 shortcuts for copying functions, sending functions, fax functions, and functions set for document box.

Adding Shortcuts

Shortcut registration is performed in the "Functions" screen of each function. Use the procedure below to register a shortcut.

1 Display the screen.

In the Copy, Send, Document Box, or FAX screen, select as follows.

[Functions] > [Add/Edit Shortcut]

2 Register the shortcuts.

1 Select [Add].

2 Select the key to which you wish to register the shortcut.

The following types of shortcuts are available:

Private Shortcut 1, 2	Private shortcuts are only available for use by the logged in user. They can only be set while using user login administration.
Shared Shortcut 1, 2	Shared shortcuts can be used by all machine users. When using user login administration, shared shortcuts can only be set by users who have logged in as administrators.

NOTE

If you select a shortcut number already registered, the currently registered shortcut can be replaced with a new one. Some shortcuts are preregistered at the factory (example: "ID Card Copy" of copy function).

3 Select the function screen to display with the shortcut.

4 Enter the shortcut name > [Next]

Up to 24 characters can be entered.

➔ [Character Entry Method \(page 11-10\)](#)

5 Select [Save].

The shortcut is registered.

Editing and Deleting Shortcuts

Follow the steps shown below to change a shortcut number/name or delete a shortcut.

1 In the "Functions" screen of each function, select [Add/Edit Shortcut] in the bottom of the screen.

2 Edit the shortcut.

To edit a shortcut

- 1 Select [Edit].
- 2 Select the shortcut type and number you wish to edit.
- 3 Select [Number] or [Name].
- 4 Change the settings > [OK]
- 5 [Save] > [Yes]

To delete

- 1 Select [Delete].
- 2 Select the shortcut you wish to delete.
- 3 Select [Yes].

Copying



Basic Operation

Follow the steps as below for basic copying.

1 Select [Copy] on the Home screen.

2 Place the originals.

Place the originals.

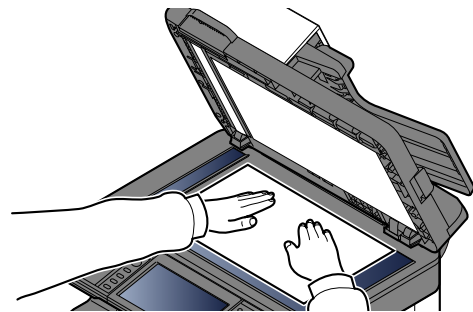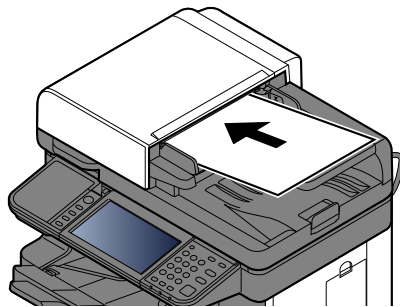

➔ [Loading Originals \(page 5-2\)](#)

3 Select the functions.

To configure the settings for functions, select the function key. By selecting **[Functions]**, other selectable functions will be shown as a list.

➔ [Copy \(page 6-2\)](#)

4 Use the numeric keys to enter the copy quantity.

Specify the desired number up to 999.

5 Press the [Start] key.


Copying begins.



NOTE

This function allows you to reserve the next job during printing. Using this function, the original will be scanned while the machine is printing. When the current print job ends, the reserved copy job is printed. If "Reserve Next Priority" is set to **[Off]**, **[Reserve Next]** will appear. Select **[Reserve Next]** and configure the necessary settings for the copy job.

➔ [Reserve Next Priority \(page 8-21\)](#)

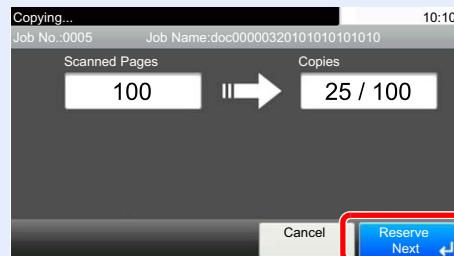

Canceling Jobs

You can also cancel jobs by selecting the **[Stop]** key.

- 1 Select the **[Stop]** key with the copy screen displayed.**
- 2 Cancel a job.**


When there is a job is being scanned

The copy job is canceled.

When there is a job printing or on standby

Canceling job screen appears. The current print job is temporarily interrupted.

Select the job you wish to cancel > **[Delete]** > **[Yes]**

 **NOTE**
If "Reserve Next Priority" is set to **[Off]**, the Copying screen appears in the touch panel. In such case, selecting the **[Stop]** key or **[Cancel]** will cancel the printing job in progress.
➔ [Reserve Next Priority \(page 8-21\)](#)


Sending

This machine can send a scanned image as an attachment of an E-mail message or to a PC linked to the network. In order to do this, it is necessary to register the sender and destination (recipient) address on the network.


A network environment which enables the machine to connect to a mail server is required in order to send E-mail. It is recommended that a Local Area Network (LAN) be used to assist with transmission speed and security issues.

Follow the steps below for basic sending. The following four options are available.

- Send as E-mail (E-mail Addr Entry): Sends a scanned original image as an E-mail attachment. (Refer to [page 5-20](#) and [page 5-22](#).)

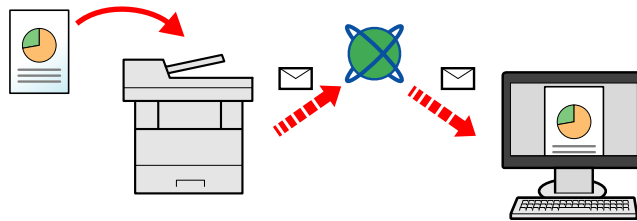

- Send to Folder (SMB): Stores a scanned original image in a shared folder of any PC. (Refer to [page 5-19](#).)
- Send to Folder (FTP): Stores a scanned original image in a folder of an FTP server. (Refer to [page 5-19](#).)

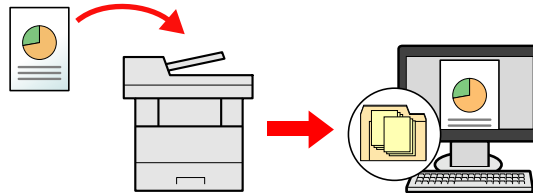

- Image Data Scanning with TWAIN / WIA: Scan the document using a TWAIN or WIA compatible application program. (Refer to [page 5-32](#).)

NOTE



- Different sending options can be specified in combination.
- ➔ [Sending to Different Types of Destinations \(Multi Sending\) \(page 5-28\)](#)
- The fax function can be used on products equipped with fax capability.
- ➔ **FAX Operation Guide**

Basic Operation

1 Select [Send] on the Home screen.

2 Place the originals.

Place the originals.

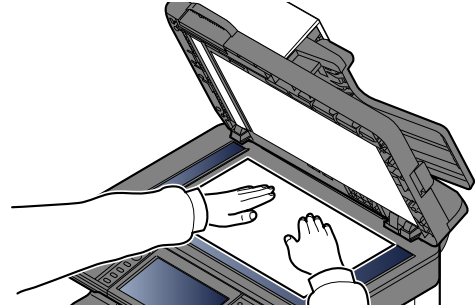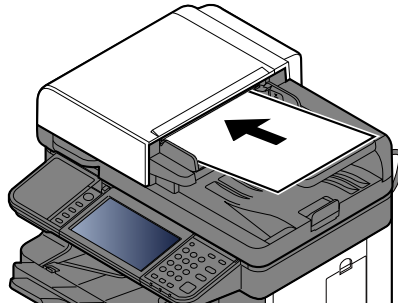

➔ [Loading Originals \(page 5-2\)](#)

3 Specify the destination.

Select the destination to which to send an image.

➔ [Specifying Destination \(page 5-20\)](#)

Choosing a Destination from the External Address Book

For details on the External Address Book, refer to the following:

➔ **Command Center RX User Guide**

Choosing a Destination from the FAX

For more information on using the FAX, refer to the following:

➔ **FAX Operation Guide**

4 Select the functions.

Select [Functions] to display other functions.

➔ [Send \(page 6-4\)](#)

5 Press the [Start] key.

Sending starts.

Specifying Destination

Select the destination using either of the following methods:



[Choosing from the Address Book \(page 5-20\)](#)



Choosing from the External Address Book

For details on the External Address Book, refer to the following:

➔ **Command Center RX User Guide**



[Choosing from the One Touch Key \(page 5-22\)](#)



[Entering an E-mail Address \(page 5-22\)](#)



[Specifying a New PC Folder \(page 5-23\)](#)



Choosing from the FAX

➔ **FAX Operation Guide**

NOTE

- You can set the machine up so that the address book screen appears when you select the [**Send**] key.

➔ [Default Screen \(page 8-22\)](#)

- If you are using the products equipped with the fax function, you can specify the fax destination. Enter the other party number using the numeric keypad.

Choosing from the Address Book

Select a destination registered in the Address Book.

For more information about how to register destinations in the Address Book, refer to the following:

➔ [Registering Destinations in the Address Book \(page 3-34\)](#)

1 In the basic screen for sending, select [Address Book].

NOTE

For details on the External Address Book, refer to the following:

➔ **Command Center RX User Guide**

2 Select the destinations.

Select the checkbox to select the desired destination from the list. The selected destinations are indicated by a checkmark in the check box.

You can also select [**Menu**] to perform a more detailed search.

NOTE

To deselect, select the checkbox again and remove the checkmark.

Destination Search

Destinations registered in the Address Book can be searched.



Keys used		Search type	Subjects searched
1		Advanced search by destination	Advanced search by type of registered destination (Email, Folder (SMB/FTP), FAX or Group).
2	Narrow Down	Advanced search by destination	Advanced search by type of registered destination (Email, Folder (SMB/FTP), FAX or Group).
	Search (Name)	Search by name	Search by registered name.
	Search (No.)	Search by number	Search by registered address number.
	Sort (Name)	Change of display order	Sorts the list by destination name.
	Sort (No.)		Sorts the list by destination address number.
3		Search by name	Search by registered name.



NOTE

You can specify a destination by address number by selecting the [**Quick No. Search**] key.

3 Accept the destination > [OK]

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 5-25\)](#)



NOTE

You can set the default "Sort" settings.

➔ [Sort \(page 8-24\)](#)

Choosing from the One Touch Key

Select the destination using the One Touch Keys.

NOTE

This procedure assumes that One Touch Keys have already been registered.
For more information on adding One Touch keys, refer to the following:

➔ [Adding a Destination on One Touch Key \(One Touch Key\) \(page 3-39\)](#)

- 1 In the basic screen for sending, select [One Touch Key].**
- 2 Select the One Touch Keys where the destination is registered.**

If the One Touch Keys for the desired destination is hidden on the touch panel, select [∨] or [∧] to scroll and view next or previous One Touch Keys.

NOTE

You can specify a One Touch Key by one touch number by selecting the [Quick No. Search] key.

- 3 Accept the destination > [OK]**

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 5-25\)](#)

Entering an E-mail Address

Enter the desired E-mail address.

NOTE

To send an E-mail, configure the environment settings necessary.

➔ [E-mail Settings \(page 2-64\)](#)

- 1 In the basic screen for sending, select [E-mail].**
- 2 Enter destination E-mail address > [OK]**

Up to 256 characters can be entered.

➔ [Character Entry Method \(page 11-10\)](#)

To enter multiple destinations, select [Next Destination] and enter the next destination. Up to 100 E-mail addresses can be specified.

You can register the entered E-mail address in the Address Book by selecting [Menu] > [Add to Address Book]. You can also replace the information for a previously registered destination.

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 5-25\)](#)

Specifying a New PC Folder

Specify either the desired shared folder on a computer or an FTP server as the destination.

NOTE

- For the method for setting a shared folder destination on a PC, refer to the following:
 - ➔ [Preparation for Sending a Document to a Shared Folder in a PC \(page 3-18\)](#)
- For details on how to share a folder, refer to the following:
 - ➔ [Creating a Shared Folder, Making a Note of a Shared Folder \(page 3-20\)](#)
- Be sure that SMB Protocol or FTP is On.
 - ➔ [Protocol Settings \(page 8-32\)](#)

1 In the basic screen for sending, select [Folder].

2 Select the folder type.

If you selected [FTP], go to step 4.

3 Select the folder specification method.

To search for a folder on a PC on the network, select [**Search Folder from Network**] or [**Search Folder by Host Name**].

If you selected [**Search Folder from Network**], you can search all PCs on the network for a destination.

If you selected [**Search Folder by Host Name**], you can enter the "Domain/Workgroup", and "Host Name" to search PCs on the network for the destination.

Up to 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [**Next**]. The login user name and login password entry screen appears.

After you enter the login user name and login password name of the destination PC, the shared folders appear. Select the folder that you want to specify and select [**Next**]. The address of the selected shared folder is set.

Select the folder from the Search Results list.

If you selected [**Enter Folder Path**], go to step 4.

4 Enter the destination information.

Enter the next information. Once you have entered one item, select [**Next**] to advance to the next item.

➔ [Character Entry Method \(page 11-10\)](#)

The table below lists the items to be set.

For send to folder (SMB)

Item	Detail	Max. characters
Host Name	Computer name	Up to 256 characters
Path	Share name For example: scannerdata If saving in a folder in the shared folder: share name\folder name in shared folder	Up to 260 characters
Login User Name	If the computer name and domain name are the same: User Name For example: james.smith If the computer name and domain name are different: Domain name\User name For example: abcdnet\james.smith	Up to 64 characters
Login Password	Windows logon password (Case sensitive.)	Up to 64 characters

For send to folder (FTP)

Item	Data to be entered	Max. characters
Host Name	Host name or IP address of FTP server	Up to 64 characters
Path^{*1}	Path to the receiving folder For example: User\ScanData Otherwise the data will be saved in the home directory.	Up to 128 characters
Login User Name	FTP server login user name	Up to 64 characters
Login Password	FTP server login password (Case sensitive.)	Up to 64 characters

*1 When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

5 Check the status.

- 1 Check the information.
Change the delay as required.

- 2 Check the connection.

[Menu] > [Connection Test]

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To enter multiple destinations, select [Next Destination] and enter the next destination.

You can register the entered information in the Address Book by selecting [Add to Address Book].

6 Select [OK].

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 5-25\)](#)

Checking and Editing Destinations


Check and edit a selected destination.


1 Display the screen.

- 1 Specify the destination.
 - ➔ [Specifying Destination \(page 5-20\)](#)
- 2 Select [**Check**].

2 Check and edit the destination.

To add a new destination, select [**+**].

To display details for the destinations, select []. New E-mail addresses and PC folders can be edited if they have been specified.

To delete the selected destination, select [].



NOTE


- When selecting [**On**] for Entry Check for New Destination, the confirmation screen appears. Enter the same host name and path again, and select [**OK**].
 - ➔ [Entry Check for New Dest. \(page 8-22\)](#)
- When selecting [**On**] for Destination Check before Send, the confirmation screen appears after pressing the [**Start**] key.
 - ➔ [Dest. Check before Send \(page 8-22\)](#)
[Confirmation Screen of Destinations \(page 5-26\)](#)

 
 
Confirmation Screen of Destinations


When selecting [**On**] for Destination Check before Send, the confirmation screen of destinations appears after pressing the [**Start**] key.


➔ [Dest. Check before Send \(page 8-22\)](#)

Follow the steps below to confirm the destinations.

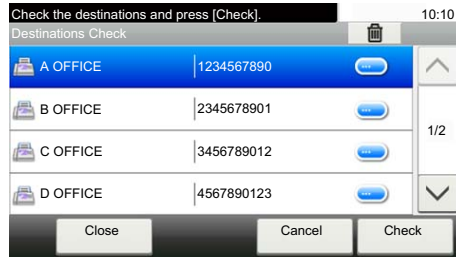

- 1 Select [] or [] to confirm all destination.

Selecting [] shows the detailed information of the selected destination.

To delete the destination, select the destination you want to delete > [] > [**Yes**]

To add the destination, select [**Cancel**] and then return to the destination screen.

- 2 Select [**Check**].

NOTE

Be sure to confirm all destination by displaying them on the touch panel. You cannot select [**Check**] unless you have confirmed all destination.

Recall

Recall is a function allowing you to send the last entered destination once again. When you want to send the image to the same destination, select **[Recall]**, and you can call the destination you sent on the destination list.

- 1 Select **[Recall]**.

The destination you sent is displayed on the destination list.

NOTE

When the last sending included FAX, computers and E-mail destinations, they are also displayed. If necessary, add or delete the destination.

- 2 Press the **[Start]** key.

Sending starts.

NOTE

- When **[On]** is selected in "Dest. Check before Send", a destination confirmation screen is displayed when you press the **[Start]** key.

➔ [Confirmation Screen of Destinations \(page 5-26\)](#)

- Recall information is canceled in the following conditions.

- When you turn the power off
- When you send a next image (new recall information is registered)
- When you log out

Send to Me (E-mail)

When user login is enabled, the document is sent to the E-mail address of the logged in user.

- 1 **Select **[Send to Me (E-mail)]** on the Home screen.**

NOTE

- To use this function, the function icon must be displayed in the home screen.


➔ [Editing the Home Screen \(page 2-19\)](#)

- An E-mail address must be set in user login for the user who logs in.

➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

Sending to Different Types of Destinations (Multi Sending)

You can specify destinations that combine E-mail addresses, folders (SMB or FTP) and fax numbers. This is referred to as Multi Sending. This is useful for sending to different types of destination (E-mail addresses, folders, etc.) in a single operation.

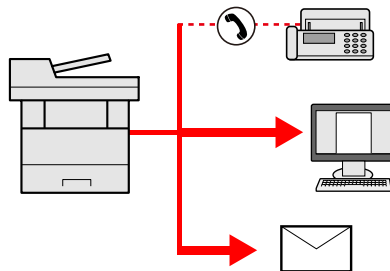

No. of broadcast items

E-mail: Up to 100

Folders (SMB, FTP): Total of 5 SMB and FTP

FAX: Up to 100

Procedures are the same as used in specifying the destinations of respective types. Continue to enter E-mail address or folder path so that they appear in the destination list. Press the **[Start]** key to start transmission to all destinations at one time.



NOTE

If the destinations include a fax, the images sent to all destinations will be black and white.

Canceling Sending Jobs

You can also cancel jobs by selecting the **[Stop]** key.

- 1 Select the **[Stop]** key with the send screen displayed.**
- 2 Cancel a job.**

When there is a job is being scanned

Job Cancel appears.

When there is a job sending or on standby

Canceling job screen appears.

Select the job you wish to cancel > **[Delete]** > **[Yes]**



NOTE

Selecting the **[Stop]** key will not temporarily stop a job that you have already started sending.

WSD Scan

WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.

NOTE

- To use WSD Scan, confirm that the computer used for WSD scanning and the machine is network-connected, and "WSD Scan" is set to **[On]** in the network settings.

➔ [WSD Scan \(page 8-33\)](#)

- For information on operating the computer, refer to the computer's help or the operation guide of your software.

Installing the Driver

Installing Driver Software (for Windows 8, Windows 8.1 and Microsoft Windows Server 2012)

1 Click [Search] in charms, [Control Panel], and then [View devices and printers].

2 Install the driver.

Click **[Add a device]**. Select the machine's icon and then click **[Next]**.

When the machine's icon is displayed in "Printers" on the **[Devices and Printers]** screen, the installation is completed.

Installing Driver Software (for Windows 7)

1 Display [Network] in the Start menu.

Click **[Start]** button on the Windows and then select **[Network]**.

NOTE

When **[Network]** does not appear in the Start menu, perform the following procedure.

- 1** Right-click **[Start]** and click **[Property]** in the menu that appears.
- 2** Select the **[[Start] menu]** tab in the "Task bar and **[Start] menu properties**" screen, and click **[Customize]**.
- 3** When the "Customize **[Start] menu**" screen appears, select the "Network" check box and click **[OK]**.

2 Install the driver.

Right-click the machine's icon and then click **[Install]**.

NOTE

If the "User Account Control" window appears, click **[Continue]**.

If the "Found New Hardware" window appears, click **[Cancel]**.

During the installation, double-click the icon shown on the task bar to display the "Driver Software Installation" screen. When "Your devices are ready to use" is displayed on the **[Driver Software Installation]** screen, the installation is completed.

Installing Driver Software (for Windows 10)

1 Right-click [Start] button on the Windows and select [Control Panel] and then [View devices and printer].

2 Install the driver.


Click [Add a device]. Select the machine's icon and then click [Next].

When the machine's icon is displayed in "Printers" on the [Devices and Printers] screen, the installation is completed.


WSD scan

1 Select [Send] on the Home screen.

2 Place the originals.

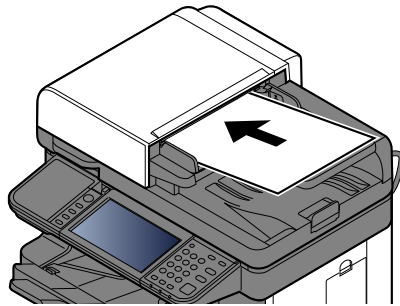

➔ [Loading Originals \(page 5-2\)](#)

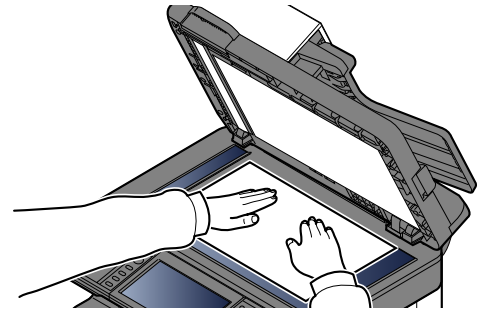

3 Display the screen.

Select [WSD Scan].

4 Scan the originals.

Procedure using this machine

1 [From Operation Panel] > [Next]

2 Select the destination computer > [OK]

Select [Reload] to reload the computer list.

You can view information on the selected computer by selecting [].

3 Set the type of original, file format, etc., as desired.

4 Press the [Start] key.

Sending begins and the software installed on the computer is activated.

Procedure from Your Computer

1 [From Computer] > [Next]

2 Use the software installed on the computer to send the images.

Scanning using TWAIN or WIA

This section explains how to scan an original using TWAIN. The WIA driver is used in the same way.

1 Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.

NOTE

For selecting the machine, see the Operation Guide or Help for each application software.


2 Configure the scan settings.

Select scanning settings in the dialog box that opens.


NOTE

For the settings, refer to Help in the dialog box.

3 Place the originals.

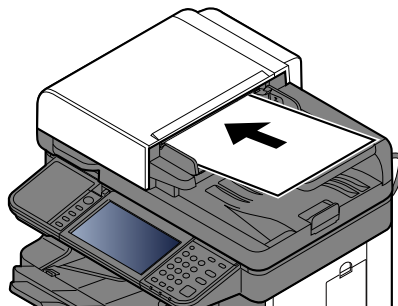

➔ [Loading Originals \(page 5-2\)](#)

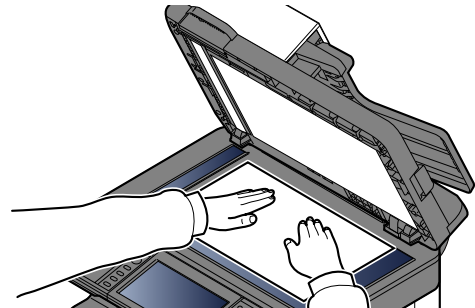

4 Scan the originals.

Click the [Scan] button. The document data is scanned.

Scanning with File Management Utility

File Management Utility is an application that sends a scanned document to a specified network folder or PC. You can create a work flow with FMU for processing of the scanned document, and register the workflow in the machine as a favorite.

NOTE

- To use this function, you must install File Management Utility on your computer and configure settings for the multifunction machine to be used, scanning conditions, and the file save location. To install File Management Utility, refer to the following:

➔ [Installing Software \(page 2-42\)](#)

- For information on using File Management Utility, refer to the following:

➔ [File Management Utility User Guide](#)

1 Make sure that File Management Utility is running on the computer (or server) on which File Management Utility is installed.

2 Place the original.

3 Recall a favorite.

- 1** Select [**Favorites**] on the Home screen, or the key of the registered favorite.

If you selected the key of the favorite registered with FMU, the favorite is activated. If you selected [**Favorites**], proceed to the next step.

- 2** Select the key of the favorite you want to use.

4 Follow the on-screen instructions to enter the necessary information and press [Next].

5 When the scan settings screen appears, press each item and configure the necessary settings.

The features that can be set depend on File Management Utility.

6 Press the [Start] key.

Sending starts.

Using fax server to send a fax (fax server transmission)

You can send a scanned document through a fax server.



NOTE

To use this function, you must have a fax server. For information on your fax server, ask your administrator.

Configuring Settings before Sending



Before sending a fax, the following setting is required.

➔ [FAX Server Settings \(page 8-47\)](#)

Command Center RX User Guide

Using fax server to send a fax

- 1 [Home] key > [Send]**
- 2 Place the originals.**

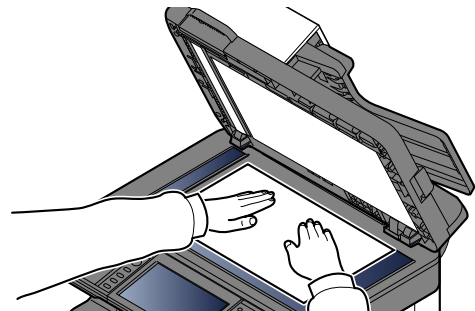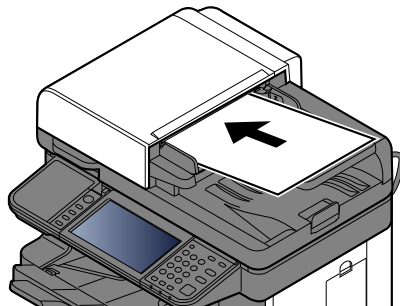

➔ [Loading Originals \(page 5-2\)](#)

- 3 In the basic screen for sending, select [FAX Server].**
- 4 Specifying destination.**

Entering the destination fax number with the numeric keys

- 1 Select [FAX Number Entry].**
- 2 Enter the fax number.**



NOTE

Use the numeric keys to enter a number.

- 3 Select [OK].**

Destinations can be changed later.

➔ [Confirmation Screen of Destinations \(page 5-26\)](#)

Choosing from the Address Book

- 1 Select [**Address Book**].
- 2 Select the destination.
 - ➔ [Choosing from the Address Book \(page 5-20\)](#)
- 3 Select [**OK**].

Destinations can be changed later.

 - ➔ [Confirmation Screen of Destinations \(page 5-26\)](#)

Choosing from the External Address Book

- 1 Select [**Ext. Address Book**].
- 2 Select the destination.
 - ➔ **Command Center RX User Guide**
- 3 Select [**OK**].

Destinations can be changed later.

 - ➔ [Confirmation Screen of Destinations \(page 5-26\)](#)



NOTE

For details on the External Address Book, refer to the following:

- ➔ **Command Center RX User Guide**

5 Select the functions.

Select [**Functions**] to display other functions.

- ➔ [Send \(page 6-4\)](#)

6 Press the [Start] key.

Sending starts.

How to use the FAX Function

On products with a FAX function, it is possible to use the FAX function.

➔ **FAX Operation Guide**

What is Document Box?

Document Box contains four types of component boxes which provide the following functions.

The following types of document boxes are available.

Custom Box ([page 5-39](#))

Custom Box is a component box which you can create within the Document Box and store data for later retrieval. You can create or delete a Custom Box, and manipulate data in various ways as described below:

➔ [Using a Custom Box \(page 5-39\)](#)



NOTE

To use Custom Box, an optional hard disk/SSD must be installed in the machine.

Job Box

This is a box to save jobs executed from a PC.



NOTE

- You can set up the machine so that temporary documents in job boxes are automatically deleted.

➔ [Deletion of Job Retention \(page 8-23\)](#)

- For details on operating the Job Box, refer to the following:

➔ [Printing Data Saved on the Printer \(page 4-12\)](#)

Private Print/Stored Job Box ([page 4-13](#), [page 4-15](#))

In Private Printing, you can specify that a job is not to be printed until you operate the machine. When sending the job from the application software, specify a 4-digit access code in the printer driver. The job is released for printing by entering the access code on the operation panel, ensuring confidentiality of the print job. The data will be deleted upon completion of the print job or after the power switch is turned off.

In Stored Job, the print data sent from the application is saved to the machine. You can set up an access code as necessary. If you set up an access code, enter the access code when printing. Print data will be stored in the Job Box after printing. This will allow printing of the same print data repeatedly.

Quick Copy/Proof and Hold Box ([page 4-17](#), [page 4-19](#))

Quick Copy feature facilitates additional prints of a document already printed. Activating Quick Copy and printing a document using the printer driver allow the print data to be stored in the Job Box. When additional copies are required, you can reprint the required number of copies from the operation panel. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.



NOTE

When you attempt to store documents in excess of the above maximum, the oldest document data will be overwritten by the latest document data.

The Proof and Hold feature produces only a single proof print of multiple-print job and holds printing of the remaining copies. Printing a multiple-print job in Proof and Hold using the printer driver allows only a single copy to be printed while maintaining the document data in the Job Box. To continue to print the remaining copies, use the operation panel. You can change the number of copies to print.

USB Drive Box ([page 5-50](#))

A USB drive stick can be connected to the USB memory slot on the machine to print a saved file. You can print data directly from the USB drive without a PC. Image files scanned using this machine can also be saved to USB drive in the PDF, TIFF, JPEG, XPS, OpenXPS or high compression PDF format (Scan to USB).

Sub Address Box/Polling Box/FAX Memory RX Box

Sub Address Box/Polling Box store the fax data.

➔ **FAX Operation Guide**

Basic Operation for Document Box


This section explains basic operations for document boxes, using examples where tasks are carried out with custom boxes.

NOTE

In the following explanation, it is assumed that user login administration is enabled. For details on User Logon privileges, refer to the following:

➔ [Editing and Deleting Custom Box \(page 5-41\)](#)


Box List Operations

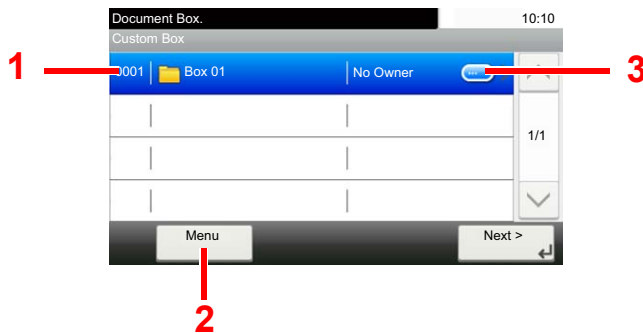

- 1 This opens the selected box.
- 2 You can select **[Menu]** and then perform one of the following operations: search for a Document Box search (box name, box number), change the sorting sequence of display items (box name, box number, owner), register a new box, modify or delete a box.
- 3 This displays detailed information about each box.


Document List Operations

The document list is a list of the documents stored in the custom box. The operations below are available.

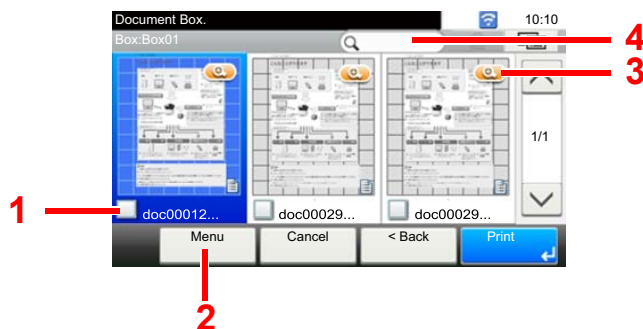

- 1 A check mark indicates an item is selected.
- 2 You can select **[Menu]** and then perform one of the following operations: print, move, search for (by name), edit, or delete a document, select or deselect all, change the sorting sequence of display items (name, box number, owner)
- 3 Shows detailed information about the document.
- 4 Can be used for a document name search.

NOTE

- You can select multiple documents by pressing the respective document checkboxes.
- Select  to change to list display.

Using a Custom Box

Custom Box is a component box which you can create within the Document Box and store data for later retrieval. You can create or delete a Custom Box, and manipulate data in various ways as described below:

- ➔ [Creating a New Custom Box \(page 5-39\)](#)
- [Saving Scanned Documents to a Custom Box \(page 5-42\)](#)
- [Moving Documents in Custom Box \(page 5-43\)](#)
- [Copying Documents in Custom Box into Other Boxes \(page 5-43\)](#)
- [Copying Documents in Custom Box to USB Drive \(page 5-44\)](#)
- [Joining Documents in Custom Box \(page 5-45\)](#)
- [Deleting Documents in Custom Box \(page 5-46\)](#)
- [Printing Documents in Custom Box \(page 5-46\)](#)
- [Sending Documents in a Custom Box \(page 5-47\)](#)
- [Sending Documents in Custom Box to E-mail Address of Logged in user. \(page 5-48\)](#)
- [Scanning Document Stored in a Custom Box \(page 5-49\)](#)



NOTE

The operation on Custom Box you perform from operation panel can also be made using Command Center RX.

- ➔ [Command Center RX User Guide](#)

Creating a New Custom Box



NOTE

- To use Custom Box, an optional hard disk/SSD must be installed in the machine.
- If user login administration is enabled, you can only change the settings by logging in with administrator privileges. The factory default login user name and login password are set as shown below.
Login User Name: 6000
Login Password: 6000
- If user login administration is enabled, log in with administrator privileges to perform the following operations. They cannot be performed with user privileges.
 - Creating a box
 - Deleting a box of which owner is another user.

1 Display the screen.

- 1 Select [**Custom Box**] on the Home screen.
- 2 [**Menu**] > [**Add**]

2 Create the Custom Box.

- 1 Enter the box name > [**Next**]
Up to 32 characters can be entered.
➔ [Character Entry Method \(page 11-10\)](#)
- 2 Check the settings and change or add information as needed.

Item	Description
Box Name	Enter a box name consisting of up to 32 characters. ➔ Character Entry Method (page 11-10)
Box No.	Enter the box number by selecting [+], [-] or number keys. The box number can be from 0001 to 1000. A Custom Box should have a unique number. If you enter 0000, the smallest number available will be automatically assigned.
Owner ^{*1}	Set the owner of the box. Select the owner from the user list that appears.
Permission ^{*2}	Select whether to share the box.
Box Password	User access to the box can be restricted by specifying a password to protect the box. Entering a password is not mandatory. Enter the same password of up to 16 characters in both [Password] and [Confirm Password] . This can be set if [Shared] is selected in Permission.
Usage Restriction	The usage for a box can be restricted. To enable a capacity restriction enter a value for the storage capacity of the Custom Box in megabytes by selecting [-], [+] or number keys. You can enter a limit between 1 and 30,000 (MB).
Auto File Deletion	Automatically deletes stored documents after a set period of time. Select [On] to enable automatic deletion and then use [+] and [-] or the numeric keys to enter the number of days for which documents are stored. You can enter any number between 1 and 31 (day(s)). To disable automatic file deletion, select [Off] .
Free Space	Displays the free space on the box.
Overwrite Setting	Specifies whether or not old stored documents are overwritten when new documents are stored. To overwrite old documents, select [Permit] . To retain old documents, select [Prohibit] .
Delete after Printed	Automatically delete a document from the box once printing is complete. To delete the document, select [On] . To retain the document, select [Off] .

*1 Displayed when the user login administration is enabled.

*2 Not displayed when "Owner" is set to **[No Owner]**.

3 Select **[Save]**.

The Custom Box is created.

Editing and Deleting Custom Box

1 Display the screen.

Select [Custom Box] on the Home screen.

2 Edit the custom box.

To edit

1 [Menu] > [Edit]

2 Select the box you want to edit.



NOTE

- When you have logged in as a user, you can only edit a box whose owner is set to that user.
- When you have logged in as administrator, you can edit all boxes.

When user login administration is enabled, the settings that can be changed varies depending on the privileges of the logged in user.

Privileges	Settings that can be changed
Administrator	Box Name
	Box No.
	Owner
	Permission
	Box Password
	Usage Restriction
	Auto File Deletion
	Overwrite Setting
	Delete after Printed
User	Box Name
	Box Password
	Permission
	Auto File Deletion
	Overwrite Setting
	Delete after Printed

➔ [Creating a New Custom Box \(page 5-39\)](#)

To delete

- 1 [Menu] > [Delete]
- 2 Select the box you want to delete.

NOTE

- When you have logged in as a user, you can only delete a box whose owner is set to that user.
- When you have logged in as administrator, you can edit all boxes.



- 3 Select [Yes].

Saving Scanned Documents to a Custom Box

1 Display the screen.

Select [Custom Box] on the Home screen.

2 Place the originals.

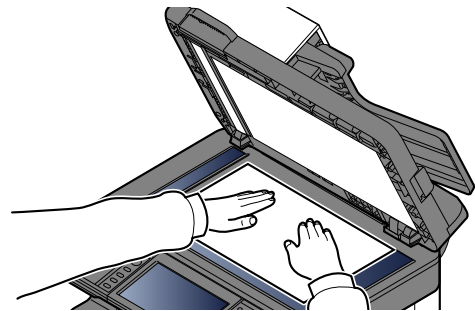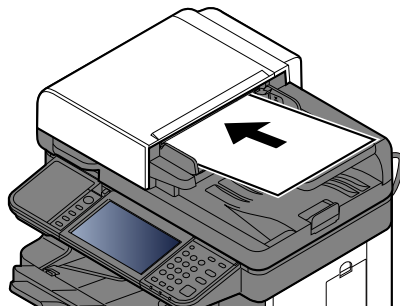

➔ [Loading Originals \(page 5-2\)](#)

3 Store the forms.

- 1 Select the box > [Menu] > [Store File]
- 2 Specify the type of originals, scanning density, etc., as necessary.
For the features that can be set, refer to the following:
➔ [Store File \(page 6-6\)](#)
- 3 Press the [Start] key.
The original is scanned and the data is stored in the specified Custom Box.

Moving Documents in Custom Box

This function allows you to move documents stored in custom boxes into other boxes.

1 Display the screen.

Select [**Custom Box**] on the Home screen > Select the box.



NOTE

If a custom box is protected by a password, enter the correct password.

2 Move the documents.

- 1 Select the document in the list that you want to move by selecting the checkbox.

The document is marked with a checkmark.



NOTE

To cancel a selection, select the checkbox again so that it is no longer ticked.

- 2 [**Menu**] > [**Move/Copy**] > [**Move to Another Custom Box**]

- 3 Select the move destination.

- 4 [**Select Current Folder**] > [**Yes**]

This moves the selected documents.



NOTE

If the box to which the document is being moved is protected by a password, enter the correct password.

Copying Documents in Custom Box into Other Boxes

This function allows you to copy documents stored in custom boxes into other boxes.

1 Display the screen.

Select [**Custom Box**] on the Home screen > Select the box.



NOTE

If a custom box is protected by a password, enter the correct password.

2 Copy the documents.

- 1 Select the document in the list that you want to copy by selecting the checkbox.

The document is marked with a checkmark.



NOTE

To cancel a selection, select the checkbox again so that it is no longer ticked.

- 2 [**Menu**] > [**Move/Copy**] > [**Copy to Another Custom Box**]

- 3 Select the copy destination.

4 [Copy] > [Yes]

The selected document is copied.



NOTE

If the box to which the document is being copied is protected by a password, enter the correct password.

Copying Documents in Custom Box to USB Drive

This function allows you to copy documents stored in custom boxes to USB drive.

1 Display the screen.

Select [**Custom Box**] on the Home screen > Select the box.



NOTE

If a custom box is protected by a password, enter the correct password.

2 Copy the documents.

1 Select the document in the list that you want to copy by selecting the checkbox.

The document is marked with a checkmark.



NOTE

To cancel a selection, select the checkbox again so that it is no longer ticked.

2 [Menu] > [Move/Copy] > [Copy to Memory]

3 Select the copy destination.

4 [Select Current Folder] > [Start] key > [Yes]

The selected document is copied.

Joining Documents in Custom Box

You can join documents within a custom box into one file.

NOTE

You can only join a document to other documents in the same custom box. If necessary, move the documents to be joined beforehand.

1 Display the screen.

Select [**Custom Box**] on the Home screen > Select the box.

NOTE

If a custom box is protected by a password, enter the correct password.

2 Join the document.

- 1 Select the documents in the list that you wish to join by selecting the checkbox.

The document is marked with a checkmark.

You can join up to 100 documents.

NOTE

To cancel a selection, select the checkbox again so that it is no longer ticked.

- 2 Arrange the documents in the order they will be joined. > [**Menu**] > [**Join**] > [**OK**]

Highlight the document you want to move and then use [**Cancel**] and [**Clear**] to move it.

- 3 Enter the name for the joined document > [**Next >**]

Enter up to 64 characters as the document name.

➔ [Character Entry Method \(page 11-10\)](#)

- 4 Select [**Yes**].

The documents are joined.

NOTE

After joining, the original documents are left unchanged. Delete the documents if they are no longer needed.

Deleting Documents in Custom Box

1 Display the screen.

Select [Custom Box] on the Home screen > Select the box.



NOTE

If a custom box is protected by a password, enter the correct password.

2 Delete the document.

1 Select the document in the list that you want to delete by selecting the checkbox.

The document is marked with a checkmark.



NOTE

- You cannot select [] without first selecting a document.
- To cancel a selection, select the checkbox again so that it is no longer ticked.

2 [] > [Yes]

The document is deleted.

Printing Documents in Custom Box

1 Display the screen.

Select [Custom Box] on the Home screen > Select the box containing the document you want to print



NOTE

If a custom box is protected by a password, enter the correct password.

2 Print the document.

1 Select the document you wish to send by checking the checkbox.

The document is marked with a checkmark.



NOTE

To cancel a selection, select the checkbox again so that it is no longer ticked.

2 Select [Print].

3 Set the paper selection, duplex printing, etc., as desired.

For the features that can be set, refer to the following:

➔ [Printing Documents \(page 6-7\)](#)

4 Press the [Start] key.

Printing of the selected document begins.

Sending Documents in a Custom Box

1 Display the screen.

Select [**Custom Box**] on the Home screen > Select the box.



NOTE

If a custom box is protected by a password, enter the correct password.

2 Send Start.

- 1 Select the document in the list that you want to send by selecting its checkbox.

The document is marked with a checkmark.



NOTE

- You cannot select and send multiple documents.
- To cancel a selection, select the checkbox again so that it is no longer ticked.

- 2 [**Menu**] > [**Send**]



NOTE

Depending on the settings, the address book screen may appear.

- 3 Set the destination.

For more information on selecting destinations, refer to the following:

➔ [Specifying Destination \(page 5-20\)](#)

- 4 Specify the file type, resolution, and other settings as desired.

For the features that can be set, refer to the following:

➔ [Sending Documents \(page 6-7\)](#)



NOTE

For information about registering a shortcut or recalling a favorite, refer to the information below.

➔ [Registering Shortcuts \(page 5-14\)](#)

[Favorites \(page 5-6\)](#)

- 5 Press the [**Start**] key.

Sending of the selected document begins.

Sending Documents in Custom Box to E-mail Address of Logged in user.

When user login is enabled, documents in the custom box are sent to the E-mail address of the logged in user.

1 Select [Custom Box] on the Home screen > [Send to Me(E-mail)]



NOTE

When this function is used, functions other than transmission cannot be used.

Before using this function, the following are necessary.

- The function icon must be displayed in the home screen.
 - ➔ [Editing the Home Screen \(page 2-19\)](#)
- An E-mail address must be set in user login for the user who logs in.
 - ➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

Scanning Document Stored in a Custom Box

Follow the steps as below for scanning a document stored in a custom box using the TWAIN driver.

NOTE

Before sending a document, confirm that TWAIN driver is installed on a computer and the settings are configured.

➔ [Setting TWAIN Driver \(page 2-52\)](#)

To read a document stored in a custom box, use the TWAIN driver setting screen to change from "Model" to a model name that has "(Box)" appended.

1 Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.

NOTE

For selecting the machine, see the Operation Guide or Help for each application software.

2 Display lists of documents.

- 1 Select a custom box from "Box List" the stored a document.
If a password has been set for the box, the password entry screen appears. Enter the password and click the [OK] button. When you select a box, the document files in the Custom Box appear in [Document List].
- 2 Set how to display the document data. Click the [Start] button to select each item.

NOTE

For the settings, refer to Help in the dialog box.

- 3 Click the [OK] button.

3 Scan the originals.

- 1 Select the document data to be scanned from [Document List].
Enter the document data name in the Search (Name) to find the data having the same document data name or the document data name with the same beginning.
Click the [Detail] button to display the selected document data. When the document data includes multiple pages, select the checkbox beside the pages you want to scan. The selected pages will be scanned.

NOTE

In this case, the scanned page or the selected document data will not be deleted from the Custom Box.

- 2 Click the [Acquire] button.
This scans the document data to the computer.

Printing Documents Stored in USB Drive

Plugging USB drive directly into the machine enables you to quickly and easily print the files stored in the USB drive without having to use a computer.


The following file types can be printed:

- PDF file (Version 1.7 or older)
- TIFF file (TIFF V6/TTN2 format)
- JPEG file
- XPS file
- OpenXPS file
- Encrypted PDF file

- PDF files you wish to print should have an extension (.pdf).
- Files to be printed should be saved no further down than the top 3 folder levels, including the root folder.
- Use USB drive properly formatted by this machine.
- Plug the USB drive directly into the USB Memory Slot.

1 Plug the USB drive.

- 1 Plug the USB drive into the USB Memory Slot.

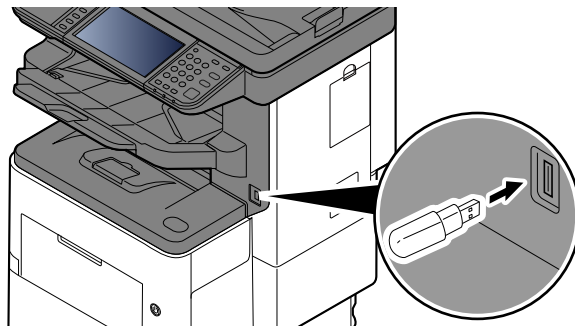

- 2 When the machine reads the USB drive, "USB Drive is recognized. Displaying files. Are you sure?" may appear. Select [**Yes**].

Displays the USB drive screen.

✔ IMPORTANT

Use USB drive properly formatted by this machine. If a USB drive formatted by any other device is used, "The USB drive is not formatted." may appear.

To format the USB drive, refer to the following:

➔ [Device/Communication \(page 7-11\)](#)

💡 NOTE

If the message does not appear, select [**USB Drive**] on the Home screen.

2 Print the document.

- 1 Select the folder containing the file to be printed.

The machine will display documents in the top 3 folder levels, including the root folder.



NOTE

- 1,000 documents can be displayed.
- To return to a higher level folder, select [**Back**].

- 2 Select the file to be printed > [**Print**]
- 3 Change the number of copies, duplex printing, etc. as desired.

For the features that can be selected, refer to the following:

➔ [USB Drive \(Store File, Printing Documents\) \(page 6-8\)](#)

- 4 Press the [**Start**] key.

Printing of the selected file begins.

Saving Documents to USB Drive (Scan to USB)



This function allows you to store scanned image files in USB drive connected to the machine. You can store files in PDF, TIFF, JPEG, XPS, OpenXPS, Word*¹, Excel*¹, PowerPoint*¹ or high-compression PDF format.

*1 This appears when the optional OCR Scan Activation Kit is installed.

NOTE

The maximum number of the storable files is 1,000.


1 Place the originals.

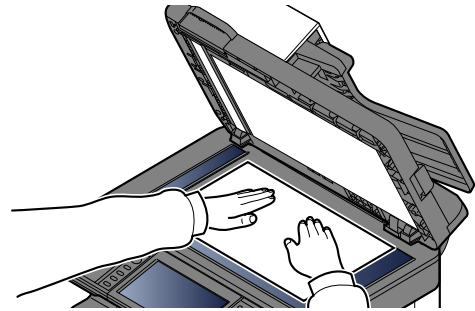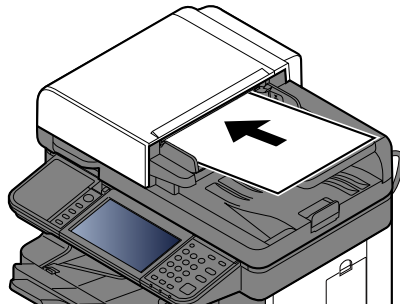

➔ [Loading Originals \(page 5-2\)](#)

2 Plug the USB drive.

1 Plug the USB drive into the USB Memory Slot.

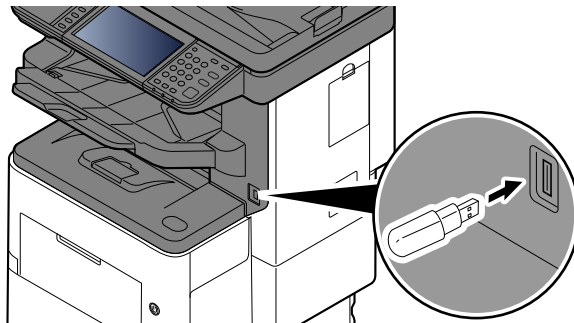

2 When the machine reads the USB drive, "USB Drive is recognized. Displaying files. Are you sure?" may appear. Select [Yes] to display the USB drive screen.

IMPORTANT

- Use USB drive properly formatted by this machine. If a USB drive formatted by any other device is used, "The USB drive is not formatted." may appear. To format the USB drive, refer to the following:

➔ [Device/Communication \(page 7-11\)](#)

- When [Format] is selected, all data in the external media is erased.

NOTE

If the message does not appear, select [USB Drive] on the Home screen.

3 Store the document.

- 1 Select the folder where the file will be stored.

The machine will display the top 3 folder levels, including the root folder.

- 2 Select [+].



- 3 Set the type of original, file format, etc., as desired.

For the features that can be set, refer to the following:

➔ [USB Drive \(Store File, Printing Documents\) \(page 6-8\)](#)

- 4 Press the [Start] key.

The original is scanned and the data is stored in the USB drive.

Check the USB Drive Information

You can check the USB drive information.

In the USB drive screen, select [Menu] > [Memory Information].

Once you confirm the information, select [Close].

Removing USB Drive

Follow the steps below to remove the USB drive.

 **IMPORTANT**

Be sure to follow the proper procedure to avoid damaging the data or USB drive.

1 Display the screen.

Select [USB Drive] on the Home screen.

2 [Menu] > [Remove USB Drive]

Select [OK], and remove the USB drive after "USB Drive can be safely removed." is displayed.

 **NOTE**

USB drive can also be removed after checking the status of the device.

➔ [Device/Communication \(page 7-11\)](#)

Using the Manual Stapler (ECOSYS M3860idn only)

You can staple copied paper manually without any print operation.



NOTE

If the machine is out of staples, add more staples.


➔ [Replacing Staples \(page 10-12\)](#)

Maximum number of sheets available for manual stapling

Paper weight	Number of stapled sheets
80 g/m ²	20 sheets maximum* ¹
90 g/m ² or less	15 sheets maximum* ¹

*¹ Paper stack up to 2 mm thick.

- 1 Straighten the edges of the stack of paper, and with the front side facing up, insert the paper into the manual stapler.**

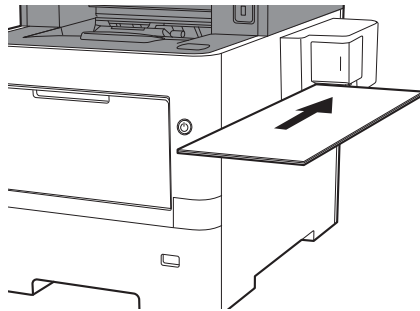

When the paper is inserted all the way in, stapling takes place.



NOTE

Manual stapling cannot be used while the machine is in sleep mode.

To use manual stapling, select the **[Energy Saver]** key.

6 Using Various Functions


This chapter explains the following topics:

Functions Available on the Machine	6-2
Copy	6-2
Send	6-4
Custom Box (Store File, Printing Documents, Sending Documents)	6-6
USB Drive (Store File, Printing Documents)	6-8
Functions	6-10
ID Card Copy	6-10
Original Size	6-10
Paper Selection	6-11
Original Orientation	6-12
Mixed Size Originals	6-13
Collate/Offset	6-13
Staple	6-14
Density	6-15
Original Image	6-16
EcoPrint	6-17
Color Selection	6-17
Sharpness	6-18
Contrast	6-18
Background Density Adj. (Background Density Adjustment)	6-19
Prevent Bleed-through	6-19
Zoom	6-20
Combine	6-22
Duplex	6-24
Continuous Scan	6-26
Job Finish Notice	6-26
File Name Entry	6-27
Priority Override	6-27
Quiet Mode	6-27
Skip Blank Page	6-28
Duplex (2-sided Original)	6-29
Sending Size	6-30
File Format	6-31
File Separation	6-35
Scan Resolution, Resolution	6-35
E-mail Subject/Body	6-35
Long Original	6-36
FTP Encrypted TX	6-36
Delete after Printed	6-36
Delete after Transmitted	6-36
Storing Size	6-37
Encrypted PDF Password	6-37
JPEG/TIFF Print	6-38
XPS Fit to Page	6-38

Functions Available on the Machine

Copy

To configure the settings for functions, select the function key. By selecting [**Functions**], other selectable functions will be shown as a list.

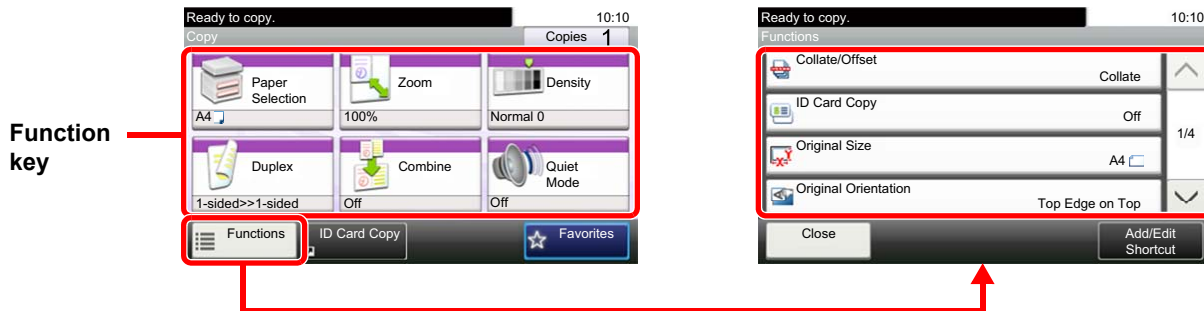

For details on each function, see the table below.

Function key	Description	Reference page
Paper Selection	Select the cassette or multi-purpose tray that contains the required paper size.	page 6-11
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-20
Density	Adjust density.	page 6-15
Duplex	Produces two-sided copies. You can also create single-sided copies from two-sided originals.	page 6-24
Combine	Combines 2 or 4 original sheets into 1 printed page.	page 6-22
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-27

Functions	Description	Reference page
Collate/Offset	Offsets the output by page or set.	page 6-13
ID Card Copy	Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.	page 6-10
Original Size	Specify the original size to be scanned.	page 6-10
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-12
Mixed Size Originals	Scans all sheets in the document processor, even if they are of different sizes.	page 6-13
Paper Output	Specify the output tray.	page 6-14
Staple	Staples the finished documents. The staple position can be selected.	page 6-14
Original Image	Select original image type for best results.	page 6-16
EcoPrint	EcoPrint saves toner when printing.	page 6-17
Sharpness	Adjusts the sharpness of image outlines.	page 6-18
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-18
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-19

Functions	Description	Reference page
Prevent Bleed-through	Hides background colors and image bleed-through when scanning thin original.	page 6-19
Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.	page 6-28
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-26
Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-26
File Name Entry	Adds a file name.	page 6-27
Priority Override	Suspends the current job and gives a new job top priority.	page 6-27

Send

To configure the settings for functions, select **[Functions]**.




For details on each function, see the table below.

Functions	Description	Reference page
Color Selection	Select the color mode setting.	page 6-17
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-27
File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-31
Original Size	Specify the original size to be scanned.	page 6-10
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-12
Mixed Size Originals	Scans all sheets in the document processor, even if they are of different sizes.	page 6-13
Duplex	Select the type and orientation of the binding based on the original.	page 6-29
Sending Size	Select size of image to be sent.	page 6-30
File Separation	Creates several files by dividing scanned original data page by page, and sends the files.	page 6-35
Scan Resolution	Select fineness of scanning resolution.	page 6-35
Density	Adjust density.	page 6-15
Original Image	Select original image type for best results.	page 6-16
Sharpness	Adjusts the sharpness of image outlines.	page 6-18
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-18
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-19
Prevent Bleed-through	Hides background colors and image bleed-through when scanning thin original.	page 6-19
Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.	page 6-28
FAX TX Resolution	Select fineness of images when sending FAX.	Refer to the FAX Operation Guide .
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-20
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-26
File Name Entry	Adds a file name.	page 6-27
E-mail Subject/Body	Adds subject and body when sending a document.	page 6-35

Functions	Description	Reference page
Long Original	Reads long-sized original documents using a document processor.	page 6-36
Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-26
FTP Encrypted TX	Encrypts images when sending via FTP.	page 6-36
FAX Delayed Transmission	Set a send time.	Refer to the FAX Operation Guide .
FAX Direct Transmission	Sends FAX directly without reading original data into memory.	Refer to the FAX Operation Guide .
FAX Polling RX	Automatically makes a machine with a stored document send the document to your machine.	Refer to the FAX Operation Guide .
FAX TX Report	Prints a report when transmission of a document is successful, or when an error occurs and transmission fails.	Refer to the FAX Operation Guide .

Custom Box (Store File, Printing Documents, Sending Documents)

To configure the settings for functions, select the function key. By selecting [**Functions**], other selectable functions will be shown as a list.

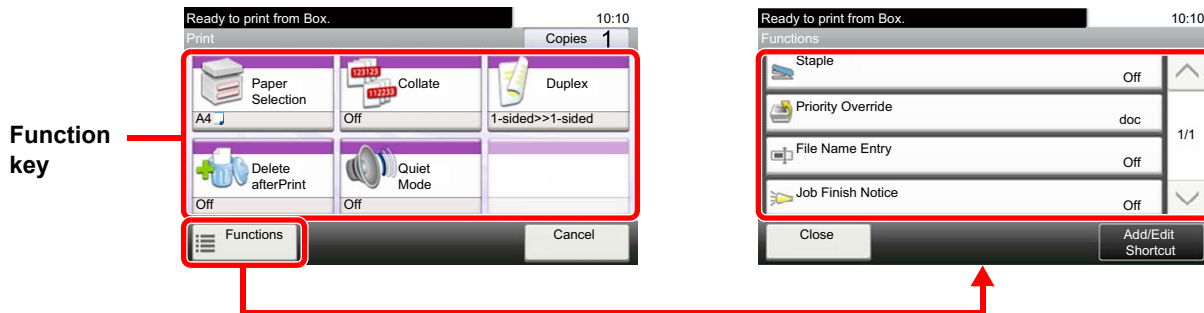

For details on each function, see the table below.

Store File

Function key	Description	Reference page
Duplex	Select the type and orientation of the binding based on the original.	page 6-29
Scan Resolution	Select fineness of scanning resolution.	page 6-35
Density	Adjust density.	page 6-15
File Name Entry	Adds a file name.	page 6-27
Color Selection	Select the color mode setting.	page 6-17
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-27

Functions	Description	Reference page
Original Size	Specify the original size to be scanned.	page 6-10
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-12
Mixed Size Originals	Scans all sheets in the document processor, even if they are of different sizes.	page 6-13
Storing Size	Select size of image to be stored.	page 6-37
Original Image	Select original image type for best results.	page 6-16
Sharpness	Adjusts the sharpness of image outlines.	page 6-18
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-18
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-19
Prevent Bleed-through	Hides background colors and image bleed-through when scanning thin original.	page 6-19
Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.	page 6-28
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-20
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-26
Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-26

Printing Documents

Function key	Description	Reference page
Paper Selection	Select the cassette or multi-purpose tray that contains the required paper size.	page 6-11
Collate/Offset	Offsets the output by page or set.	page 6-13
Duplex	Print a document on both sides of the paper.	page 6-25
Delete after Printed	Automatically deletes a document from the box once printing is complete.	page 6-36
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-27


Functions	Description	Reference page
Paper Output	Specify the output tray.	page 6-14
Staple	Staples the finished documents. The staple position can be selected.	page 6-14
Priority Override	Suspends the current job and gives a new job top priority.	page 6-27
File Name Entry	Adds a file name.	page 6-27
Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-26
EcoPrint	EcoPrint saves toner when printing.	page 6-17

Sending Documents

Functions	Description	Reference page
File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-31
File Separation	Creates several files by dividing scanned original data page by page, and sends the files.	page 6-35
Resolution	Select fineness of scanning resolution.	page 6-35
FAX TX Resolution	Select fineness of images when sending FAX.	Refer to the FAX Operation Guide .
File Name Entry	Adds a file name.	page 6-27
E-mail Subject/Body	Adds subject and body when sending a document.	page 6-35
Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-26
FTP Encrypted TX	Encrypts images when sending via FTP.	page 6-36
FAX Delayed Transmission	Set a send time.	Refer to the FAX Operation Guide .
FAX TX Report	Prints a report when transmission of a document is successful, or when an error occurs and transmission fails.	Refer to the FAX Operation Guide .
Delete after Transmitted	Automatically deletes a document from the box once transmission is complete.	page 6-36

USB Drive (Store File, Printing Documents)

To configure the settings for functions, select the function key. By selecting [Functions], other selectable functions will be shown as a list.

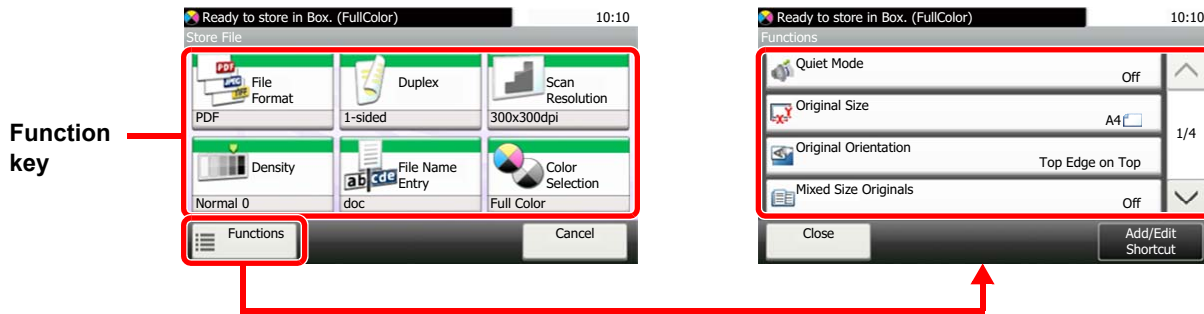

For details on each function, see the table below.

Store File

Function key	Description	Reference page
File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-31
Duplex	Select the type and orientation of the binding based on the original.	page 6-29
Scan Resolution	Select fineness of scanning resolution.	page 6-35
Density	Adjust density.	page 6-15
File Name Entry	Adds a file name.	page 6-27
Color Selection	Select the color mode setting.	page 6-17

Functions	Description	Reference page
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-27
Original Size	Specify the original size to be scanned.	page 6-10
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-12
Mixed Size Originals	Scans all sheets in the document processor, even if they are of different sizes.	page 6-13
Storing Size	Select size of image to be stored.	page 6-37
Original Image	Select original image type for best results.	page 6-16
Sharpness	Adjusts the sharpness of image outlines.	page 6-18
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-18
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-19
Prevent Bleed-through	Hides background colors and image bleed-through when scanning thin original.	page 6-19
Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.	page 6-28
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-20
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-26
Long Original	Reads long-sized original documents using a document processor.	page 6-36

Functions	Description	Reference page
Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-26
File Separation	Creates several files by dividing scanned original data page by page, and sends the files.	page 6-35

Printing Documents

Function key	Description	Reference page
Paper Selection	Select the cassette or multi-purpose tray that contains the required paper size.	page 6-11
Collate/Offset	Offsets the output by page or set.	page 6-13
Duplex	Print a document on both sides of the paper.	page 6-25
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-27

Functions	Description	Reference page
Paper Output	Specify the output tray.	page 6-14
Staple	Staples the finished documents. The staple position can be selected.	page 6-14
EcoPrint	EcoPrint saves toner when printing.	page 6-17
Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-26
File Name Entry	Adds a file name.	page 6-27
Priority Override	Suspends the current job and gives a new job top priority.	page 6-27
Encrypted PDF Password	Enter the preassigned password to print the PDF data.	page 6-37
JPEG/TIFF Print	Select the image size when printing JPEG or TIFF files.	page 6-38
XPS Fit to Page	Reduces or enlarges the image size to fit to the selected paper size when printing XPS file.	page 6-38

Functions

On pages that explain a convenient function, the modes in which that function can be used are indicated by icons.

Printing:   

Sending:  


Storing:  

ID Card Copy

 Copy

Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.

(Value: [Off] / [On])

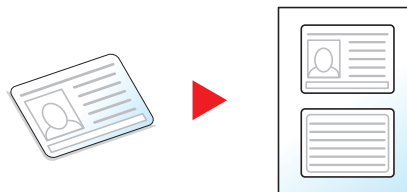

Original Size

 Copy

 Send

 Scan to Box

 Scan to USB

Specify the original size to be scanned.

Select [Metric], [Inch], or [Others] to select the original size.

Item	Value	Description
Inch	Letter, Legal, Statement, Executive, Oficio II	Select from the Inch series standard sizes.
Metric	A4, A5, A6, B5, B6, Folio, 216 × 340 mm	Select from the Metric standard sizes.
Others	16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), OufukuHagaki (Return postcard), Youkei 4, Youkei 2, Custom ^{*1}	Select from special standard sizes and custom sizes.

*1 For instructions on how to specify the custom original size, refer to the following:

➔ [Custom Original Size \(page 8-11\)](#)



NOTE

Be sure to always specify the original size when using custom size original.

Paper Selection

Copy

Print from
BoxPrint from
USB

Select the cassette or multi-purpose tray that contains the required paper size.

Select from [1] (Cassette 1) to [5] (Cassette 5) to use the paper contained in that cassette.

If [**Auto**] is selected, the paper matching the size of the original is selected automatically.



NOTE

- Specify in advance the size and type of the paper loaded in the cassette.

➔ [Cassette/MP Tray Settings \(page 8-8\)](#)

- Cassettes 2 to 5 are displayed when the optional paper feeder is installed.

To select [**MP tray**], select [**Paper Size**] and [**Media Type**], and specify the paper size and the media type. The available paper sizes and media types are shown in the table below.

Item		Value	Description
Paper Size	Inch	Letter, Legal, Statement, Statement (Landscape), Executive, Oficio II	Select from the Inch series standard sizes.
	Metric	A4, A5, A5 (Landscape), A6, B5, B6, Folio, 216 × 340 mm	Select from the Metric standard sizes.
	Others	16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), OufukuHagaki (Return postcard), Youkei 4, Youkei 2, Custom * ¹	Select from special standard sizes and custom sizes.
	Size Entry	Metric X: 70 to 216 mm (in 1 mm increments) Y: 148 to 356 mm (in 1 mm increments)	Enter the size not included in the standard size.* ² When you have selected [Size Entry], use [+]/[-] or the numeric keys to set the sizes of "X" (horizontal) and "Y" (vertical).
Inch X: 2.76 to 8.50" (in 0.01" increments) Y: 5.83 to 14.02" (in 0.01" increments)			
Media type		Plain (60 to 105 g/m ²), Transparency, Rough, Vellum, Labels, Recycled, Preprinted* ³ , Bond, Cardstock, Color, Prepunched* ³ , Letterhead* ³ , Envelope, Thick (106 to 220 g/m ²), High Quality, Custom 1-8* ³	

*¹ For instructions on how to specify the custom paper size, refer to the following:

➔ [Custom Paper Size \(page 8-12\)](#)

*² The input units can be changed in System Menu. For details, refer to the following:

➔ [Measurement \(page 8-18\)](#)

*³ For instructions on how to specify the custom paper types 1 to 8, refer to the following:

➔ [Media Type Setting \(page 8-14\)](#)

To print on preprinted or prepunched paper or on letterhead, refer to the following:

➔ [Special Paper Action \(page 8-13\)](#)



NOTE

- You can conveniently select in advance the size and type of paper that will be used often and set them as default.

➔ [Multi Purpose Tray \(page 8-9\)](#)

- If the specified size of paper is not loaded in the paper source cassette or multi purpose tray, a confirmation screen appears. Load the required paper in the multi purpose tray and select [**Continue**] to start copying.

Original Orientation





Select the orientation of the original document top edge to scan correct direction.

To use any of the following functions, the document's original orientation must be set.

- Duplex
- Combine
- Duplex (2-sided Original)

Select original orientation from [Top Edge on Top], [Top Edge on Left] or [Auto].

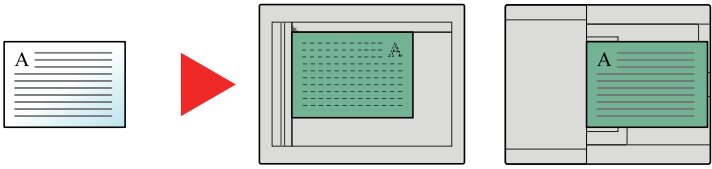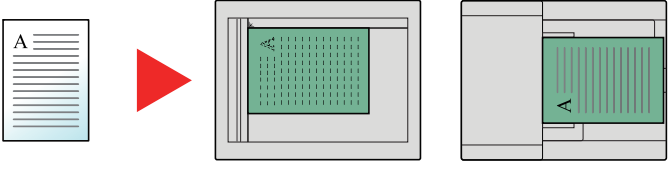Item	Image
Top Edge on Top	 <p style="text-align: center;">Original Original orientation</p>
Top Edge on Left	 <p style="text-align: center;">Original Original orientation</p>
Auto ^{*1}	

*1 Displayed only when the optional OCR Scan Activation Kit is installed.
For Copying, this does not displayed if the optional expansion memory is not installed.

NOTE

The default setting for Original Orientation can be changed.

➔ [Original Orientation \(Copy\) \(page 8-15\)](#)

Mixed Size Originals




Scans all sheets in the document processor, even if they are of different sizes.

(Value: [Off] / [On])

Supported Combinations of Originals

Legal and Letter (Folio and A4)

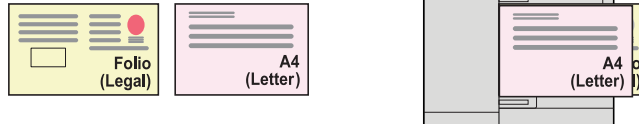

Collate/Offset



Offsets the output by page or set.



NOTE

This function is displayed for the finisher models.

Except for the finisher models*

(Value: [Off] / [On])

* Collate Only

For the finisher models

(Value: [Off] / [Collate Only] / [Offset Each Page] / [Offset Each Set])

Item	Image	Description
Collate Only		Scans multiple originals and delivers complete sets of copies as required according to page number.

Item	Image	Description
Offset Each Page		Printed copies are collated and output as individual pages separately.
Offset Each Set		Printed copies are collated and output as individual set separately.

NOTE

The paper sizes supported in Offset are Legal, Statement, Oficio II, Letter, Executive, Folio, A4, A5, B5, B5(ISO), 16K and 216×340mm.

Paper Output



Specify the output tray.

NOTE

This function is displayed for the finisher models.
The default setting for Paper Output can be changed.

➔ [Paper Output \(page 8-17\)](#)

Item	Description
Inner tray	Outputs to the Inner Tray of the machine.
Finisher Tray	Outputs to the Finisher Tray of the machine.

Staple



Staples the finished documents. The staple position can be selected.









NOTE

This function is displayed for the finisher models.
For details on paper sizes and numbers of sheets that can be stapled, refer to the following:

➔ [Specifications \(page 11-21\)](#)

Item	Value		Description
Staple	Off		
	On	Top Edge on Top	Select the original orientation as either [Top Edge on Top], [Top Edge on Left] or [Auto]. Next, select [OK].
		Top Edge on Left	

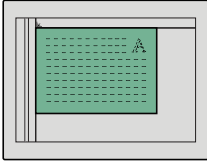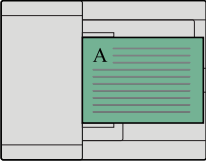Original Orientation and Staple Position

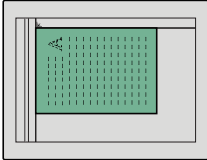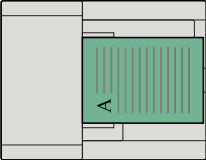Image		Original Orientation	
Original	Print results		
		Top Edge on Top	 
		Top Edge on Left	 

Mixed Size Stapling

Even with mixed paper sizes, if the sizes have the same width, the output can be stapled. The size of sheets that can be stapled together is Letter and Legal. Up to 30 sheets can be stapled.

 **NOTE**

When performing Mixed Size Stapling, refer to the following:

➔ [Mixed Size Originals \(page 6-13\)](#)

Density



Adjust density.

Adjust density selecting [-4] (Lighter) to [+4] (Darker).



Original Image



Select original image type for best results.

Copying/Printing

Item		Description	
Text+Photo ^{*1}		Best for mixed text and photo documents.	
Photo		Best for photos taken with a camera.	
Text		Best for documents that are mostly text.	
Graphic/Map ^{*2}		Best for graphics and maps.	
Others	Original Image	Text+Photo	Select to bring out text and markings made with a highlighter pen. Reproduces the color of the highlighter pen to the extent possible.
		Photo	
		Text	
		Graphic/Map	
	Highlighter		

*1 If gray text is not printed completely using **[Text + Photo]**, selecting **[Text]** may improve the result.

*2 This function is displayed while copying.

Sending/Storing

Item	Description
Text+Photo	Best for mixed text and photo documents.
Photo	Best for photos taken with a camera.
Text	Best for documents that are mostly text.
Light Text/Fine Line	Clearly reproduces faint characters written in pencil, etc., and thin lines on map originals or diagrams.
Text (for OCR) ^{*1}	Scanning produces an image that is suitable for OCR.

*1 This function is only available when "Color Selection" is set to **[Black & White]**. For details, refer to the following:

➔ [Color Selection \(page 6-17\)](#)

EcoPrint


Copy

Print from
BoxPrint from
USB

EcoPrint saves toner when printing.

Use this function for test prints or any other occasion when high quality print is not required.

(Value: [Off] / [On])

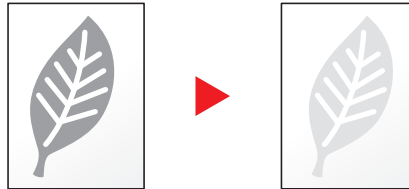

Color Selection

Send

Scan to
BoxScan to
USB

Select the color mode setting.

Item	Description
Auto (Color/Gray)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Grayscale.
Auto (Color/B & W)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Black and White.
Full Color	Scans the document in full color.
Grayscale	Scans the document in grayscale. Produces a smooth, detailed image.
Black & White	Scans the document in black and white.

Sharpness

Copy

Send

Scan to
BoxScan to
USB

Adjusts the sharpness of image outlines.

When copying penciled originals with rough or broken lines, clear copies can be taken by adjusting sharpness toward "Sharpen". When copying images made up of patterned dots such as magazine photos, in which moire^{*1} patterns appear, edge softening and weakening of the moire effect can be obtained by setting the sharpness toward "Blur".


Less Sharp



Original



More Sharp

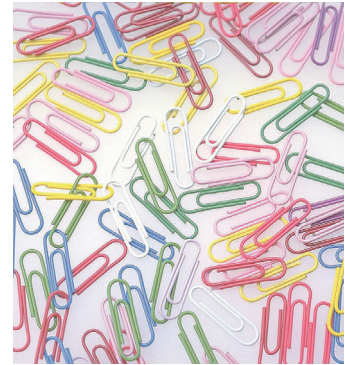

Item	Description
+1 to +3 (Sharpen)	Emphasizes the image outline.
-1 to -3 (Blur)	Blurs the image outline. Can weaken a Moire ^{*1} effect.

*1 Patterns that are created by irregular distribution of halftone dots.

Contrast

Copy

Send

Scan to
BoxScan to
USB

You can adjust the contrast between light and dark areas of the image.

Lower



Original



Higher



Item	Description
+1 to +4 (Higher)	Increases the sharpness of colors.
-1 to -4 (Lower)	Creates smoother colors.

Background Density Adj. (Background Density Adjustment)

Copy

Send

Scan to
BoxScan to
USB

Removes dark background from originals, such as newspapers.

If the ground color is obtrusive, select [**Auto**]. If [**Auto**] does not remove the ground color, select [**Manual**] and adjust the density of the ground color.

Item	Description
Off	Does not adjust the ground color.
Auto	Automatically adjusts the background density based on the original.
Manual	Select [1] to [5] (Lighter - Darker) to adjust the background density manually.

Prevent Bleed-through

Copy

Send

Scan to
BoxScan to
USB

Hides background colors and image bleed-through when scanning thin original.

(Value: [**Off**] / [**On**])



Zoom




Adjust the zoom to reduce or enlarge the image.

Copying

The following zoom options are available.

Auto

Adjusts the image to match the paper size.

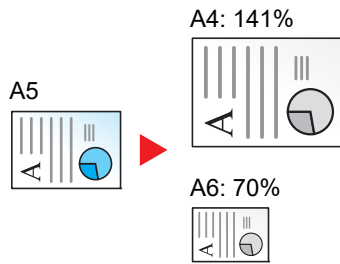

Standard Zoom

Reduces or enlarges at preset magnifications.

Model	Zoom Level (Original Copy)		Model	Zoom Level (Original Copy)	
Metric Models	400% Max.	90% Folio>>A4	Inch Models	400% Max.	78% Legal>>Letter
	200%	70%		200%	64% Letter>>Statement
	141% A5 >> A4	50%		129% Statement>>Letter	50%
	100%	25% Min.		100%	25% Min.


Others

Reduces or enlarges at magnifications other than the Standard Zoom.

Model	Zoom Level (Original Copy)		Model	Zoom Level (Original Copy)	
Metric Models	115% B5 >> A4	78% Legal>>Letter	Inch Models	141% A5 >> A4	86% A4 >> B5
	86% A4 >> B5	64% Letter>>Statement		115% B5 >> A4	70% A4 >> A5
	129% Statement>>Letter			90% Folio>>A4	

Zoom Entry

Manually reduces or enlarges the original image in 1% increments between 25% and 400%. Use the numeric keys or select [+] or [-] to enter the any magnification.

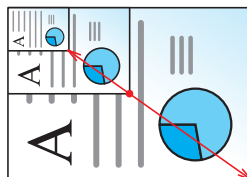

Sending/Storing

Item	Description
100%	Reproduces the original size.
Auto	Reduces or enlarges original to sending/storing size.



NOTE

To reduce or enlarge the image, select the paper size, sending size, or storing size.

- ➔ [Paper Selection \(page 6-11\)](#)
- [Sending Size \(page 6-30\)](#)
- [Storing Size \(page 6-37\)](#)

Combine


 Copy

Combines 2 or 4 original sheets into 1 printed page.

You can select the page layout and the type of boundary lines around the pages.

The following types of the boundary lines are available.



None

Solid Line

Dotted Line

Positioning Mark

Item		Value	Description
Off		—	Disables the function.
2 in 1		—	Copy the original with the default setting. For the default settings, refer to the following: ▶ Function Defaults (page 8-15)
4 in 1		—	
Others	Combine	Off, 2 in 1 (L to R/T to B), 2 in 1 (R to L/B to T), 4 in 1 (Right then Down), 4 in 1 (Left then Down), 4 in 1 (Down then Right), 4 in 1 (Down then Left)	Select the page layout of scanned originals.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the boundary line type.
	Original Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.

Layout image

Item		Image
2 in 1	L to R/T to B	
	R to L/B to T	
4 in 1	Right then Down	
	Left then Down	
	Down then Right	
	Down then Left	

NOTE

- The paper sizes supported in Combine mode are A4, A5, B5, Folio, 216 × 340 mm, Letter, Legal, Statement, Oficio II, and 16K.
- When placing the original on the platen, be sure to copy the originals in page order.

Duplex


Copy

Print from
BoxPrint from
USB


Produces two-sided copies. You can also create single-sided copies from two-sided originals.

The following modes are available.

One-sided to Two-sided

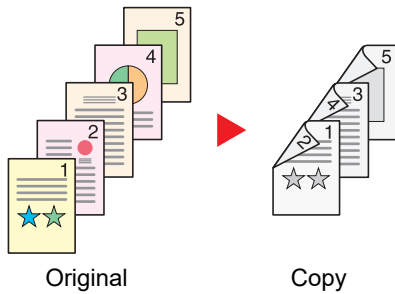


Produces two-sided copies from one-sided originals. In case of an odd number of originals, the back side of the last copy will be blank.

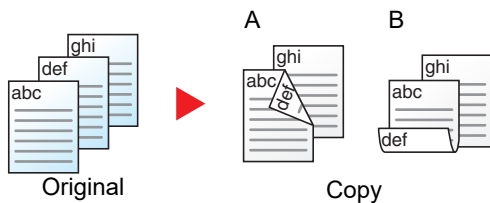

The following binding options are available.

- A Original Left/Right to Binding Left/Right: Images on the second sides are not rotated.
- B Original Left/Right to Binding Top: Images on the second sides are rotated 180 degrees. Copies can be bound on the top edge, facing the same orientation when turning the pages.

Two-sided to One-sided

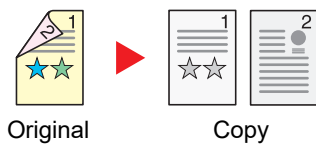


Copies each side of a two-sided original onto two individual sheets.

The following binding options are available.

- Binding Left/Right: Images on the second sides are not rotated.
- Binding Top: Images on the second sides are rotated 180 degrees.

Two-sided to Two-sided

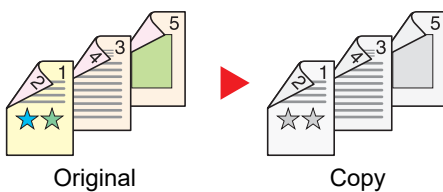

Produces two-sided copies from two-sided originals.

NOTE

The paper sizes supported in Two-sided to Two-sided mode are A4, B5, A5, Legal, Letter, Executive, Statement, Oficio II, 216 × 340 mm, Folio, ISO B5, and 16K.

Copying

Prints 1-sided originals to 2-sided, or 2-sided originals to 1-sided. Select the binding orientation for original and finished documents.

Item		Value	Description
1-sided>>1-sided		—	Disables the function.
1-sided>>2-sided		—	Copy the original with the default setting. For the default settings, refer to the following: ➔ Function Defaults (page 8-15)
2-sided>>1-sided		—	
2-sided>>2-sided		—	
Others	Duplex	1-sided>>1-sided, 1-sided>>2-sided, 2-sided>>1-sided, 2-sided>>2-sided	Select the desired duplex option.
	Binding in Original ^{*1}	Left/Right, Top	Select the binding orientation of originals.
	Binding in Finishing ^{*2}	Left/Right, Top	Select the binding orientation of copies.
	Original Orientation ^{*1, *2}	Top Edge on Top, Top Edge on Left, Auto ^{*3}	Select the orientation of the original document top edge to scan correct direction.

*1 Displayed when [**2-sided>>1-sided**] or [**2-sided>>2-sided**] is selected for "Duplex".

*2 Displayed when [**1-sided>>2-sided**] or [**2-sided>>2-sided**] is selected for "Duplex".

 

*3 This does not appear if the optional OCR Scan Activation Kit is installed but expansion memory is not installed.

When placing the original on the platen, consecutively replace each original and press the **[Start]** key.

After scanning all originals, select **[Finish Scan]** to start copying.

Printing

Print a document on both sides of the paper.

Item	Description
1-sided	Disables the function.
 2-sided	Prints a 2-sided document so that the sheets are aligned properly for binding on the left or right.
 2-sided	Prints a 2-sided document so that the sheets are aligned properly for binding on the top.


Continuous Scan



Scans a large number of originals in separate batches and then produce as one job.

Originals will be scanned continuously until you select [**Finish Scan**].

(Value: [Off] / [On])

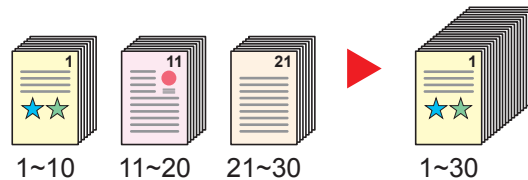

Job Finish Notice



Sends E-mail notice when a job is complete.


 
Users can be notified of the completion of a job while working at a remote desk, saving the time spent waiting beside the machine to finish.

NOTE

PC should be configured in advance so that E-mail can be used.

➔ [Command Center RX \(page 2-58\)](#)

E-mail can be sent to a single destination.

Item	Description
Off	Disables the function.
Job Finished Only, Job Finished + Job Interrupted	<p>Displays the destination list.</p> <p>Add a Destination To add a new destination, select [+].</p> <ul style="list-style-type: none"> • Address Book: Select the notification destination from the address book and select [OK]. • Ext. Address Book^{*1}: Select the notification destination from the external address book. • Address Entry: Enter the e-mail address directly. Enter the address (up to 256 characters) and select [OK]. • My Address^{*2}: Uses the e-mail address of the logged in user. <p>Check the Destination To display details for the destinations, select [].</p> <p>Delete the Destination To delete the selected destination, select [].</p>

*1 For details on the External Address Book, refer to the following:

➔ **Command Center RX User Guide**

*2 Displayed when user login administration is enabled.

File Name Entry



Adds a file name.

Additional information such as job number and date and time can also be set. You can check a job history or job status using the file name, date and time, or job number specified here.

Enter the file name (up to 32 characters), and select **[Next]**.

To add date and time, select **[Date and Time]**. To add job number, select **[Job No.]**. To add both, select **[[Job No.] & [Date and Time]]** or **[[Date and Time] & [Job No.]]**.

Priority Override



Suspends the current job and gives a new job top priority.

The suspended job resumes after the other job is finished.

(**Value:** **[Off]** / **[On]**)



NOTE

- This function is not available if current job was an override.
- Priority override may not be available depending on the status of the current print job and memory usage.

Quiet Mode



Lower print and scan speed for quiet processing.

Select this mode when the running noise is uncomfortable.

It is possible to set the use of Quiet Mode for each function, such as copying and sending.

(**Value:** **[Off]** / **[On]**)



NOTE

- The processing speed will be slower than normal when in Quiet Mode.
- This cannot be used when **[Prohibit]** is set for "Specify for Each Job".

➔ [Specify for Each Job \(page 8-52\)](#)

Skip Blank Page



When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.

Blank pages can be set as pages that include ruled lines and a small number of characters.

The machine detects blank pages, saving unnecessary printing without the need to check for blank pages in the document.

Item		Description
Off		Everything, including blank pages, is scanned.
On	Blank Pages + Ruled Lines	Blank pages and pages that include ruled lines are judged to be blank pages.
	Blank Pages Only	Blank pages only are judged to be blank pages.
	Blank Pages + Some Text	Blank pages and pages that include a small amount of text are judged to be blank pages.



NOTE

The originals with punched holes or originals printed on a colored substrate may not be recognized as blank pages.

Duplex (2-sided Original)




 
Select the type and orientation of the binding based on the original.

Item		Value	Description
1-sided		—	Disables the function.
2-sided		—	Set when using a 2-sided sheet original that will be bound on the left or right.
Others	Duplex	1-sided, 2-sided (Binding Left/Right), 2-sided (Binding Top)	Select the binding orientation of originals.
	Original Orientation *1	Top Edge on Top, Top Edge on Left Auto*2	Select the orientation of the original document top edge to scan correct direction.

*1 Displayed when [2-sided (Binding Left/Right)] or [2-sided (Binding Top)] is selected in "Duplex".

*2 This does not appear if the optional OCR Scan Activation Kit is installed but expansion memory is not installed.

Sample image

Value		Image
2-sided	Binding Left/Right	
	Binding Top	

Sending Size



Select size of image to be sent.

Select [**Same as Original Size**], [**Metric**], [**Inch**], or [**Others**] to select the sending size.

Item	Value	Description
Same as Original Size	—	Automatically sends the same size as the original.
Metric	A4, A5, A6, B5, B6, Folio, 216 × 340 mm	Select from the Metric standard sizes.
Inch	Letter, Legal, Statement, Executive, Oficio II	Select from the Inch series standard sizes.
Others	16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Youkei 4, Youkei 2	Select from special standard sizes and custom sizes.

Relationship between Original Size, Sending Size, and Zoom

[Original Size \(page 6-10\)](#), Sending Size, and [Zoom \(page 6-20\)](#) are related to each other. For details, see the table below.

Original size and sending size are	the same	different
Original Size (page 6-10)	Specify as necessary.	Specify as necessary.
Sending Size	Select [Same as Original Size].	Select the desired size.
Zoom (page 6-20)	Select [100%] (or [Auto]).	Select [Auto].



NOTE

When you specify the sending size that is different from the original size, and select the zoom of [**100%**], you can send the image as the actual size (No Zoom).

File Format




Specify the image file format. Image quality level can also be adjusted.

Select the file format from [PDF], [TIFF], [JPEG], [XPS], [OpenXPS], and [High Comp. PDF].

When the optional OCR Scan Activation Kit is installed, you can also select [Word], [Excel], or [PowerPoint].

When the color mode in scanning has been selected for Grayscale or Full Color, set the image quality.

If you selected [PDF] or [High Comp. PDF], you can specify encryption or PDF/A settings.

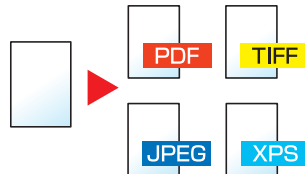

Item		Value	Description
PDF		—	Set the file format selected.
High Comp. PDF		—	The image quality and PDF/A settings will be the default settings. For the default settings, refer to the following: ➔ Function Defaults (page 8-15)
TIFF		—	
JPEG		—	
XPS		—	
OpenXPS		—	
Word* ¹		—	
Excel* ¹		—	
PowerPoint* ¹		—	
Others	File Format	PDF, High Comp. PDF, TIFF, JPEG, XPS, OpenXPS, Word* ¹ , Excel* ¹ , PowerPoint* ¹	Select the image file format.
	Image Quality* ²	Compression Ratio Priority, Standard, Quality Priority	Set the quality level for High Compression PDF.
	Image Quality* ³	1 Low (High Comp.) to 5 High (Low Comp.)	Set the image quality.
	PDF/A* ⁴	Off, PDF/A-1a, PDF/A-1b, PDF/A-2a, PDF/A-2b, PDF/A-2u	Set PDF/A format type.
	Encryption* ⁴	—	You can use PDF encryption functions. ➔ PDF Encryption Functions (page 6-32)
OCR Text Recognition* ^{1, *4, *5}		Off, On	Set the default OCR Text Recognition. ➔ OCR Text Recognition (Option) (page 6-34)
OCR Output Format* ⁵		Text + Graphics, Text + Graphics with Scanned Image, Scanned Image with Searchable Text	Select the output format for Work, Excel, and PowerPoint.

*1 Displayed only when the optional Scan extension kit is installed.

*2 Displayed when [High Comp. PDF] is selected for "File Format".

*3 Displayed when something other than [High Comp. PDF] is selected for "File Format".

*4 Displayed when [PDF] or [High Comp. PDF] is selected for "File Format".

*5 Displayed when [Word], [Excel] or [PowerPoint] is selected for "File Format".

NOTE

If encryption is enabled, PDF/A settings cannot be specified.

PDF Encryption Functions

If you have selected PDF or High Comp. PDF for file format, you can restrict the access level for displaying, printing, and editing PDF's by assigning a secure password.

Select [**Others**], [**PDF**] or [**High Comp. PDF**] in [**File Format**], and select [**Encryption**].

Items that can be set vary depending on the setting selected in [**Compatibility**].

When [**Acrobat 3.0 and later, Encryption Level: Middle(40-bit)**] is selected

Item	Value	Description
Password to Open Document	Off, On	Enter the password to open the PDF file. Select [On], enter a password (up to 256 characters) and then select [Next]. Enter the password again for confirmation, and select [OK].
Password to Edit/Print Document	Off, On	Enter the password to edit the PDF file. Select [On], enter a password (up to 256 characters) and then select [Next]. Enter the password again for confirmation, and select [OK]. When you have entered the password to edit/print document, you can specifically limit the operation.
Printing Allowed	Not Allowed, Allowed	Restricts printing of the PDF file.
Changes Allowed	Not Allowed	Disables the change to the PDF file.
	Commenting	Can only add commenting.
	Page Layout except extracting Pages	Can change the page layout except extracting the pages of the PDF file.
	Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
Copying of Text/Images/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

When [Acrobat 5.0 and later, Encryption Level: High(128-bit)] is selected

Item	Value	Description
Password to Open Document	Off, On	Enter the password to open the PDF file. Select [On], enter a password (up to 256 characters) and then select [Next]. Enter the password again for confirmation, and select [OK].
Password to Edit/Print Document	Off, On	Enter the password to edit the PDF file. Select [On], enter a password (up to 256 characters) and then select [Next]. Enter the password again for confirmation, and select [OK]. When you have entered the password to edit/print document, you can specifically limit the operation.
Printing Allowed	Not Allowed	Disables the printing of PDF file.
	Allowed (Low Resolution only)	Can print the PDF file only in low resolution.
	Allowed	Can print the PDF file in original resolution.
Changes Allowed	Not Allowed	Disables the change to the PDF file.
	Inserting/Deleting/Rotating Pages	Can only insert, delete, and rotate the pages of the PDF file.
	Commenting	Can only add commenting.
	Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
Copying of Text/Images/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

OCR Text Recognition (Option)

When [PDF], [High Comp. PDF], [Word], [Excel], or [PowerPoint] is selected for the file format, you can create Searchable file by running OCR on the scanned document. Select [OCR Text Recognition], and then [On], select the language of the document, and select [OK].

Item	Description
Off	Do not create Searchable file.
On	Create Searchable file. Select the language to extract from the languages that appear on the touch panel.

**NOTE**

- This function can only be used when the optional OCR Scan Activation Kit is installed.
 - ➔ [Scan extension kit\(A\) "OCR Scan Activation Kit" \(page 11-7\)](#)
- This function cannot be set when you send from the Custom Box.
- If the proper language is not selected, file creation may take a long time or the creation may fail. The default language can be changed in System Menu.
 - ➔ [Primary OCR Language*1 \(page 8-17\)](#)
- If you do not set an original in the correct orientation, the text of the document may not be recognized as characters. In addition, it may take some time to create the file. The original orientation is correct.
- The accuracy of the text recognition depends on the original condition. The following condition may result in decreasing the recognition accuracy.
 - Repeatedly copied documents (as copied copy)
 - Received faxes (with low resolution)
 - Originals with the character space too narrow or wide
 - Originals with the lines on the text
 - Originals with the special fonts
 - Binding part of the book
 - A handwritten texts

 
File Separation



Creates several files by dividing scanned original data page by page, and sends the files.

(Value: [Off] / [Each Page])

Select [Each Page] to set File Separation.



NOTE

A three-digit serial number such as "abc_001.pdf, abc_002.pdf..." is attached to the end of the file name.


Scan Resolution, Resolution



Select fineness of scanning resolution.

(Value: [Use File Settings]^{*1} / [600 × 600dpi] / [400 × 400dpi Ultra] / [300 × 300dpi] / [200 × 400dpi Super] / [200 × 200dpi Fine] / [200 × 100dpi Normal])

*1 Displayed when sending from the Custom Box.

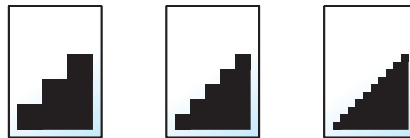

NOTE


The larger the number, the better the image resolution. However, better resolution also means larger file sizes and longer send times.

E-mail Subject/Body



Adds subject and body when sending a document.

Select [Subject] / [Body] to enter the E-mail subject/body.

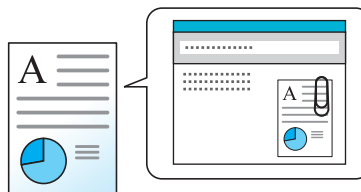

NOTE

The subject can include up to 60 characters, and the body can include up to 500 characters.

Long Original



Reads long-sized original documents using a document processor.

(Value: [Off] / [On])

NOTE

- Long originals are sent in black and white or Grayscale.
- Only a single side of a long original cannot Originals of up to 915 mm / 36-1/32" long can be scanned.
- You can select resolution 300×300 dpi or less.

FTP Encrypted TX



Encrypts images when sending via FTP.

Encryption secures the document transmission.

(Value: [Off] / [On])

NOTE

Click [Security Settings], and then [Network Security] in the Command Center RX. Be sure that "SSL" of Secure Protocol Settings is "On" and one or more effective encryption are selected in Client side settings.

➔ [Command Center RX User Guide](#)

Delete after Printed



Automatically deletes a document from the box once printing is complete.

(Value: [Off] / [On])

Delete after Transmitted



Automatically deletes a document from the box once transmission is complete.

(Value: [Off] / [On])

Storing Size

Scan to
BoxScan to
USB

Select size of image to be stored.

Select [**Same as Original Size**], [**Metric**], [**Inch**], or [**Others**] to select the storing size.

Item	Value	Description
Same as Original Size	—	Store an image the same size as the original.
Metric	A4, A5, A6, B5, B6, Folio, 216 × 340 mm	Select from the Metric standard sizes.
Inch	Letter, Legal, Statement, Executive, Oficio II	Select from the Inch series standard sizes.
Others	16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Youkei 4, Youkei 2	Select from special standard sizes and custom sizes.

Relationship between Original Size, Storing Size, and Zoom

[Original Size \(page 6-10\)](#), Storing Size, and [Zoom \(page 6-20\)](#) are related to each other. For details, see the table below.

Original Size and the size you wish to store as are	the same	different
Original Size (page 6-10)	Specify as necessary.	Specify as necessary.
Storing Size	Select [Same as Original Size].	Select the desired size.
Zoom (page 6-20)	Select [100%] (or [Auto]).	Select [Auto].



NOTE

When you select Storing Size that is different from Original Size, and select the Zoom [**100%**], you can store the image as the actual size (No Zoom).

Encrypted PDF Password

Print from
USB

Enter the preassigned password to print the PDF data.

Enter the Password, and select [**OK**].



NOTE

For details on entering the password, refer to the following:


➔ [Character Entry Method \(page 11-10\)](#)

JPEG/TIFF Print



Select the image size when printing JPEG or TIFF files.

(Value: [Paper Size] / [Image Resolution] / [Print Resolution])

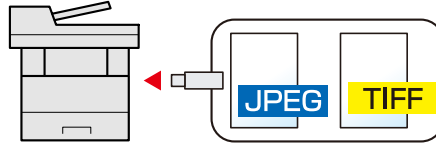


Item	Description
Paper Size	Fits the image size to the selected paper size.
Image Resolution	Prints at resolution of the actual image.
Print Resolution	Fits the image size to the print resolution.

XPS Fit to Page



Reduces or enlarges the image size to fit to the selected paper size when printing XPS file.

(Value: [Off] / [On])

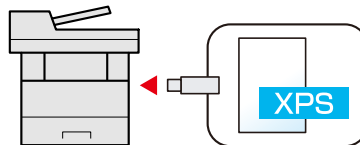

7 Status/Job Cancel

This chapter explains the following topics:

Checking Job Status	7-2
Details of the Status Screens	7-3
Checking Detailed Information of Jobs	7-7
Checking Job History	7-8
Checking the Detailed Information of Histories	7-9
Sending the Log History	7-9
Job Operation	7-10
Pause and Resumption of Jobs	7-10
Canceling of Jobs	7-10
Device/Communication	7-11
Checking the Remaining Amount of Toner and Paper (Paper/Supplies)	7-13

Checking Job Status

Check the status of jobs being processed or waiting to be printed.

Available Status Screens

The processing and waiting statuses of jobs are displayed as a list on the touch panel in four different screens - Printing Jobs, Sending Jobs, Storing Jobs, and Scheduled Jobs.

The following job statuses are available.

Status Display	Job status to be displayed
Print Job Status	<ul style="list-style-type: none"> • Copy • Printer • FAX reception • E-mail reception • Printing from Document Box • Printing data from USB drive • Application • Job Report/List
Send Job Status	<ul style="list-style-type: none"> • FAX transmission • E-mail • Folder transmission • Application • Multiple destination
Store Job Status	<ul style="list-style-type: none"> • Scan • FAX • Printer
Scheduled Job	<ul style="list-style-type: none"> • Sending Job FAX using Delayed transmission

Displaying Status Screens

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select the job you want to check.

Select either of [Print Job Status], [Send Job Status], [Store Job Status] or [Scheduled Job] to check the status.

- ➔ [Print Job Status Screen \(page 7-3\)](#)
- [Send Job Status Screen \(page 7-4\)](#)
- [Store Job Status Screen \(page 7-5\)](#)
- [Scheduled Job Status Screen \(page 7-6\)](#)

Details of the Status Screens

NOTE


You can show the job statuses of all users, or only the statuses of your own jobs.








 

➔ [Display Status/Log \(page 8-20\)](#)

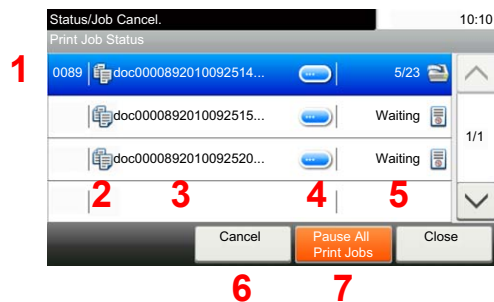This setting can also be changed from Command Center RX.


➔ **Command Center RX User Guide**







Print Job Status Screen

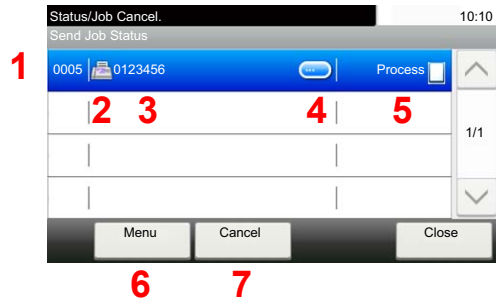


No.	Item	Description
1	Job No.	Acceptance No. of job
2	Type	Icons that indicate the job type  Copy job  Printer job  Job from Document Box  FAX reception  E-mail reception  Data from USB drive  Application  Report/List
3	Job Name	Job Name or file name
4	[]	Select this key for the job for which you wish to display detailed information. ➔ Checking Detailed Information of Jobs (page 7-7)
5	Status	Status of job (Number of copies printed)/(Total number of copies to be printed): Printing Processing: The status before starting to print. Waiting: Print Waiting Pause: Pausing print job or error Canceling: Canceling the job
6	[Cancel]	Select the job you want to cancel from the list, and select this key.
7	[Pause All Print Jobs]	Pauses all the printing jobs. By selecting this key again, the printing jobs will be resumed.





Send Job Status Screen

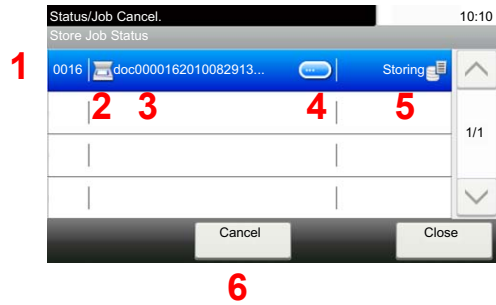


No.	Item	Description
1	Job No.	Acceptance No. of job
2	Type	Icons that indicate the job type  Sending Job FAX  Sending Job E-mail  Sending Job Folder (SMB/FTP)  Sending Job Application  Multi Sending
3	Job Name	Job Name or file name
4	[]	Select this key for the job for which you wish to display detailed information. ▶ Checking Detailed Information of Jobs (page 7-7)
5	Status	Status of job Processing: The status before starting sending such as during scanning originals Sending: Sending Waiting: Waiting Sending Canceling: Canceling the job Pause: Pausing the job
6	[Menu]	Selecting this key displays [Priority Override]. This function allows you to give a particular fax job priority. Select the fax job you wish to send immediately > [Menu] > [Priority Override]
7	[Cancel]	Select the job you want to cancel from the list, and select this key.



Store Job Status Screen



No.	Item	Description
1	Job No.	Acceptance No. of job
2	Type	Icons that indicate the job type  Storing Job Scan  Storing Job Printer  Storing Job FAX
3	Job Name	Job name or file name is displayed.
4	[]	Select this key for the job for which you wish to display detailed information. ▶ Checking Detailed Information of Jobs (page 7-7)
5	Status	Status of job Processing: The status before starting to save such as during scanning originals Storing: Storing Data Canceling: Canceling the job Pause: Pausing the job
6	[Cancel]	Select the job you want to cancel from the list, and select this key.

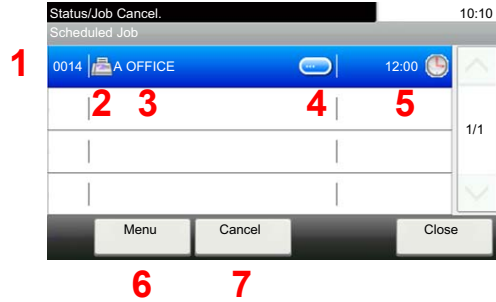Scheduled Job Status Screen



No.	Item	Description
1	Job No.	Acceptance No. of job
2	Type	Icons that indicate the job type  Storing Job FAX
3	Destination	Destination (Either destination name, FAX number, or No. of broadcast items)
4	[]	Select this key for the job for which you wish to display detailed information. ▶ Checking Detailed Information of Jobs (page 7-7)
5	Start Time	Time to start the scheduled job
6	[Menu]	Selecting this key displays [Start Now]. Select the job you wish to send immediately > [Menu] > [Start Now]
7	[Cancel]	Select the job you want to cancel from the list, and select this key.

Checking Detailed Information of Jobs

Check the detailed information of each job.


NOTE


When you have logged in as a user, you can only check your own jobs. When you have logged in as administrator, you can check all jobs.

1 Display the screen.



➔ [Details of the Status Screens \(page 7-3\)](#)

2 Check the information.

1 Select [] for the job for which you wish to display detailed information.

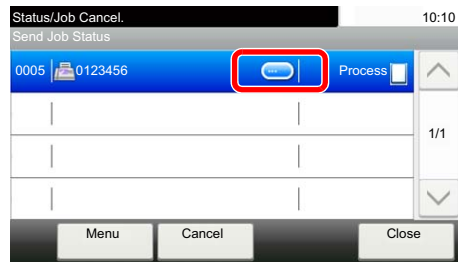

  Detailed information of the selected job is displayed.

Use [] or [] to see the next or previous page of information. More detailed information can be checked if a white item is selected.

In Sending Jobs, you can check the destination by selecting [**Status/Destination**].

2 To exit from the detailed information, select [**End**].

Checking Job History

Check the history of completed jobs.

 **NOTE**

- Job history is also available by Command Center RX or KYOCERA Net Viewer from the computer.

➔ **Command Center RX User Guide**

➔ **KYOCERA Net Viewer User Guide**

- You can show the job log of all users, or only your own job log.

➔ [Display Status/Log \(page 8-20\)](#)

- This setting can also be changed from Command Center RX.

➔ **Command Center RX User Guide**

Available Job History Screens

The job histories are displayed separately in four screens - Printing Jobs, Sending Jobs, Storing Jobs, and FAX Jobs. The following job histories are available.

Screen	Job histories to be displayed
Print Job Log	<ul style="list-style-type: none"> • Copy • Printer • FAX reception • E-mail reception • Printing from Document Box • Job Report/List • Printing data from USB drive • Application
Send Job Log	<ul style="list-style-type: none"> • FAX • E-mail • Folder • Application • Multiple destination
Store Job Log	<ul style="list-style-type: none"> • Scan • FAX • Printer
FAX Job Log	➔ FAX Operation Guide

Displaying Job History Screen

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select the job you want to check.


Checking the Detailed Information of Histories

Check the detailed information of each history.

1 Display the screen.

2 Check the information.

1 Select [] for the job for which you wish to check details.

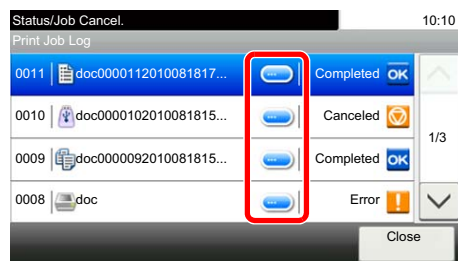

Detailed information of the selected job is displayed.

NOTE

To check the information of the next/previous page, select [∨] or [∧].

2 To exit from the detailed information, select [Close].

Sending the Log History

You can send the log history by E-mail. You can either send it manually as needed or have it sent automatically whenever a set number of jobs is reached.

➔ [Send Log History \(page 8-7\)](#)

Job Operation

Pause and Resumption of Jobs

Pause/resume all printing jobs in printing/waiting.

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select [Pause All Print Jobs] on the printing jobs status screen.

Printing is paused.

When resuming the printing of jobs that have been paused, select [Resume All Print Jobs].

Canceling of Jobs

A job in printing/waiting status can be canceled.

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select the job to be canceled from the list, and select [Cancel].

3 Select [Yes] in the confirmation screen.

Device/Communication

Configure the devices/lines installed or connected to this machine or check their status.

1 Display the screen.

1 Select the [**Status/Job Cancel**] key.

2 Select the device you wish to check.

The screen to check the status or configure the devices is displayed.

2 Check the status.

The items you can check are described below.

"Scanner"

The status of an original scanning or the error information (paper jam, opened cover, etc.) is displayed.

"Printer"

Error information such as paper jam, out of toner, or out of paper, and status such as waiting or printing are displayed.

"FAX Memory RX Box"

This displays information (document name, file size, etc.) about a document in the FAX Memory RX Box.

➔ **FAX Operation Guide**

"FAX"

- The information such as sending/receiving and dialing is displayed.
- Select [**Line Off**] to cancel a fax in sending/receiving.

➔ **FAX Operation Guide**

"USB Drive"

- The usage, capacity and free space of the external media connected to this machine are displayed.
- Select [**Menu**] > [**Format**] to format external media.



IMPORTANT

When [Format] is selected, all data in the external media is erased.

- Select [**Remove**] to safely remove the external media.

"USB Keyboard"

The status of the optional USB Keyboard is displayed.

"Bluetooth Keyboard"

The status of the optional Bluetooth Keyboard is displayed.

"Network Connection Status"

The network connection status appears.

"Option Network Connection Status"

The connection status of an optional network interface kit appears.

"Wi-Fi Direct"

Shows the connection status of Wi-Fi Direct.

"Wireless Network"

The connection status of the Wireless Network Interface Kit is displayed.

"Wi-Fi"

Shows the connection status of Wi-Fi.

"SSD"

The status of the optional SSD is displayed.

"Hard Disk"

The status of the hard disk is displayed.

Checking the Remaining Amount of Toner and Paper (Paper/Supplies)

Check the remaining amount of toner, and paper on the touch panel.

1 Display the screen.

- 1 Select the [Status/Job Cancel] key.
- 2 Select the device you wish to check.

2 Check the status.

The items you can check are described below.

"Toner Status"

The amount of toner remaining is shown in levels. And you can check the status of waste toner box.

"Paper Status"

You can check the size, orientation, type, and remaining amount of paper in each paper source. The amount of paper remaining is shown in levels.

"Staple"

You can check the status of staples.

8 Setup and Registration (System Menu)

This chapter explains the following topics:

System Menu	8-2
Operation Method	8-2
System Menu Settings	8-3
Language	8-5
Report	8-5
User Property	8-7
Cassette/MP Tray Settings	8-8
Common Settings	8-10
Home	8-21
Copy	8-21
Send	8-22
Document Box	8-23
FAX	8-23
Application	8-23
Internet	8-24
Address Book/One Touch	8-24
User Login/Job Accounting	8-25
Printer	8-25
System/Network	8-28
Date/Timer/Energy Saver	8-49
Adjustment/Maintenance	8-52

System Menu

Configure settings related to overall machine operation.


Operation Method

System Menu is operated as follows:

1 Display the screen.

Select the [System Menu/Counter] key.


2 Select a function.

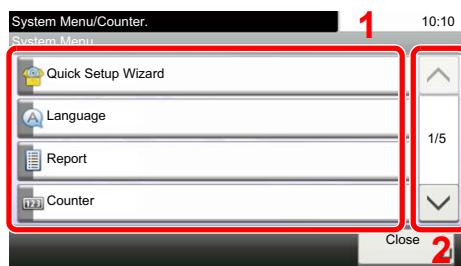

- 1 Displays the System Menu items.
- 2 Scrolls up and down when the list of values cannot be displayed in its entirety on a single screen.
- 3 Displays setting items. Select the key of a function to display the setting screen.
- 4 Returns to the previous screen.



3 Configure the settings.

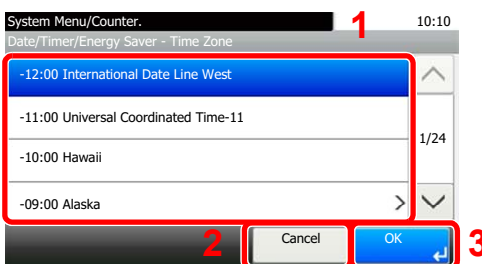

- 1 Selecting a value it to be accepted.
- 2 Returns to the original screen without making any changes.
- 3 Accepts the settings and exits.



NOTE

- In order to change settings that require administrator privileges, you must log in with administrator privileges. The factory default login user name and login password are set as shown below.
Login User Name: 6000
Login Password: 6000
- If function default settings have been changed, the [Reset] key can be selected in each function screen to immediately change the settings.

Refer to [System Menu Settings](#) on the following page and configure as needed.

System Menu Settings

This section explains the functions that can be configured in System Menu. To configure the settings, select the item in System Menu and select the setting item. For details on each function, see the table below.

Item	Description	Reference Page
Quick Setup Wizard	The Quick Setup Wizard configures Fax, Network and Energy Saver settings.	page 2-40
Language	Select the language displayed on the touch panel.	page 8-5
Report Print	Configure settings for printing reports and histories.	page 8-5
Admin Report Settings		Refer to the FAX Operation Guide .
Result Report Settings		page 8-7
Sending Log History		page 8-7
Counter	This counts the number of pages printed or scanned.	page 2-55
User Property	Allows you to view information about logged in users and edit some of that information.	page 8-7
Cassette 1 (to 5)	Select type of paper in Cassette 1 (to 5).	page 8-8
Multi Purpose Tray	Select type of paper in multi purpose tray.	page 8-9
Default Screen	Select the screen appearing right after start-up (default screen).	page 8-10
Sound	Set options for buzzer sound during the machine operations.	page 8-10
Original Settings	Configures settings for originals.	page 8-11
Paper Settings	Configures settings for paper.	page 8-12
Function Defaults	Defaults are the values automatically set after the warm-up is completed or the [Reset] key is selected. Set the defaults for available settings such as copying and sending. Setting the frequently-used values as defaults makes subsequent jobs easier.	page 8-15
Paper Output	Select the output tray respectively for copy jobs, print jobs from Document Box, computers, and FAX RX data.	page 8-17
Preset Limit	Restrict the number of copies that can be made at one time.	page 8-17
Error Handling	Select whether to cancel or continue the job when error has occurred.	page 8-18
Measurement	Select inch or metric for the unit for paper dimensions.	page 8-18
Low Toner Alert	Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low.	page 8-19
Keyboard Layout	Change the layout of the touch panel keyboard used to enter characters.	page 8-19
Optional Keyboard Type	Select the type of Optional keyboard that you want to use.	page 8-19
Offset Documents by Job	Select whether to offset documents by Job.	page 8-19
Offset One Page Documents	Set whether one-page documents are sorted.	page 8-19
Display Status/Log	Set the display method of the Status/Log.	page 8-20
Remote Printing	Configure settings for remote printing.	page 8-20
Direct Printing from Web	Set whether to allow Direct Printing from Command Center RX.	page 8-20
Function Key Assignment	Configure settings for function key on the operation panel.	page 8-20

Item	Description	Reference Page
Show Power Off Message	Select whether the confirmation message is displayed, when Power Switch is pressed.	page 8-21
Message Banner Print	Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.	page 8-21
Home	Configure settings for Home screen.	page 8-21
Copy	Configures settings for copying functions.	page 8-21
Send	Configures settings for sending functions.	page 8-22
Document Box	Configures settings related to the Custom Box, Job Box, Sub Address Box and Polling Box. ➔ FAX Operation Guide	page 8-23
FAX	Configures settings for fax functions. ➔ FAX Operation Guide	—
Application	Configure settings for Application.	page 8-23
Internet	Set the proxy for connection to the Internet from an application.	page 8-24
Address Book/One Touch	Configures Address Book and One Touch Key settings. Address Book: ➔ Adding a Destination (Address Book) (page 3-34) One Touch Key: ➔ Adding a Destination on One Touch Key (One Touch Key) (page 3-39)	page 8-24
User Login/Job Accounting	Configures settings related to machine management. User Login: ➔ Overview of User Login Administration (page 9-2) Job Accounting: ➔ Overview of Job Accounting (page 9-33)	—
Printer	Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.	page 8-25
Network	Configures network settings.	page 8-28
Optional Network	Configure settings for the optional Network Interface Kit or Wireless Network Interface Kit.	page 8-40
Primary Network (Client)	Select the network interface to be used for the send function that this machine functions as a client, the network authentication and connecting to external address book.	page 8-42
Interface Block Setting	This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.	page 8-43
Bluetooth Settings	Set the Bluetooth keyboard.	page 8-43
Security Level	The Security Level setting is primarily a menu option used by service personnel for maintenance work. There is no need for customers to use this menu.	—
Restart	Restart the CPU without turning the power switch off. Use this to deal with any unstable operation by the machine. (Same as the computer restart.)	page 8-44
RAM Disk Setting	A RAM disk can be created and its size can be set.	page 8-44

Item	Description	Reference Page
Optional Memory	When optional memory is installed, select the memory allocation scheme based on the application in which you are using the equipment.	page 8-44
Data Security	Configure settings for data stored in the optional SSD and hard disk and machine's memory.	page 8-45
OCR Dictionary Installation	Install the OCR Dictionary.	page 8-46
Remote Services Settings	When the trouble occurs on this product, it is possible to explain the operational procedure and the troubleshooting method through the internet from our sales office by accessing the operation panel screen of this product while operating the screen.	page 8-47
Optional Function	You can use the optional applications installed on this machine.	page 8-47
FAX Server Settings	Configure settings for FAX Server.	page 8-47
Remote Operation	Configure settings for remote operation.	page 8-48
Date/Timer/Energy Saver	Configures settings related to the date and time.	page 8-49
Adjustment/Maintenance	Adjust printing quality and conduct machine maintenance.	page 8-52

Language

[System Menu/Counter] key > [Language]

Item	Description
Language	Select the language displayed on the touch panel.


Report




Print reports to check the machine settings and status.

Default settings for printing the result reports can also be configured.

Report Print

[System Menu/Counter] key > [Report] > [Report Print]

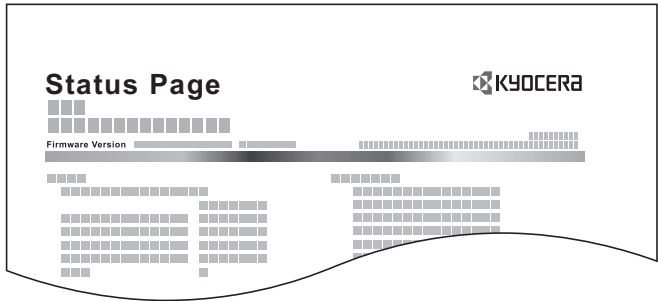Item	Description
Status Page	<p>Prints the status page, allowing you to check the information including current settings, available memory space, and optional equipment installed.</p> 

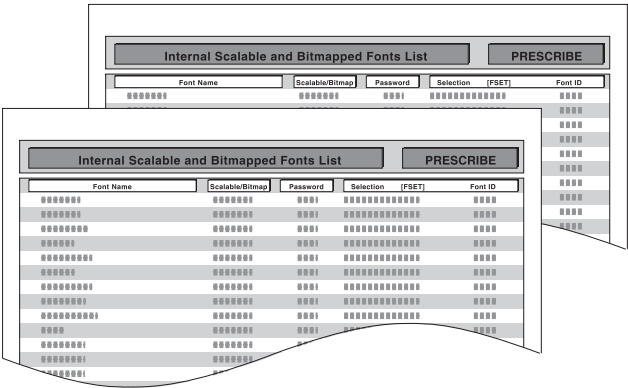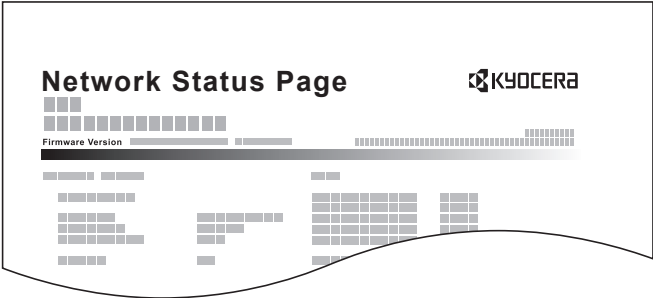Item	Description
Font List	<p>Prints the font list, allowing you to check the font samples installed in the machine.</p> 
Network Status	<p>Prints the network status, allowing you to check the information including network interface firmware version, network address and protocol.</p> 
Service Status	<p>Prints the service status. More detailed information is available than on the Status Page. Service personnel usually print the service status pages for maintenance purpose.</p>
Accounting Report	<p>Prints the accounting report, allowing you to check the accounts that have been registered on the machine.</p>
Sub Address Box List	<p>Prints the report on the FAX function.</p>
FAX List (Index)	<p>➔ FAX Operation Guide</p>
FAX List (No.)	
One Touch List (All)	
One Touch List (FAX)	
Outgoing FAX Report	
Incoming FAX Report	
Optional Network Status	<p>Prints the optional network status, allowing you to check the information including optional network interface firmware version, network address and protocol.</p> <p> NOTE This function is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.</p>
Data Sanitization Report	<p>Prints the data sanitization report.</p>

Admin Report Settings

[System Menu/Counter] key > [Report] > [Admin Report Settings]

Configure settings for fax functions.

➔ **FAX Operation Guide**

Result Report Settings


[System Menu/Counter] key > [Report] > [Result Report Settings]

Item	Description
Send Result Report	Automatically print a report of transmission result when a transmission is complete.
E-mail/Folder	Automatically print a report of transmission result when E-mail or SMB/FTP transmission is complete. Value: Off, On, Error Only
FAX	➔ FAX Operation Guide
Attach Image of Network FAX	➔ FAX Operation Guide
Canceled before Sending*1	Print a send result report if the job is canceled before being sent. Value: Off, On
Recipient Format*1	Select the Recipient Format for the send result report. Value: Name or Destination, Name and Destination
RX Result Report	➔ FAX Operation Guide
Job Finish Notice Setting	Attaches sent images to job finish notices. Value: Do Not Attach Image, Attach Image

*1 When "E-mail/Folder" and "FAX" are set to [Off], this function will not be displayed.

Sending Log History

[System Menu/Counter] key > [Report] > [Sending Log History]

Item	Description
Send Log History	You can also send the log history to the specified destinations manually.
Auto Sending	This function automatically sends the log history to the specified destinations whenever a set number of jobs has been logged. Value: Off, On  NOTE If [On] is selected, specify the number of job histories. The setting range is 1 to 16.
Destination	Set the destination to which log histories are sent. Only E-mail address can be set.
Job Log Subject	Set the subject automatically entered when sending log histories by E-mail. Value: Up to 60 characters
SSFC Log Subject	Enter the subject of the printed job history with IC card authentication. Value: Up to 60 characters
Personal Information	Select whether to include personal information in the job log. Value: Include, Exclude

User Property

[System Menu/Counter] key > [User Property]

Allows you to view information about logged in users and edit some of that information.

➔ [Enabling User Login Administration \(page 9-3\)](#)

Cassette/MP Tray Settings

Select paper size and media type for Cassettes and multi purpose tray.

Cassette 1 (to 5)

[System Menu/Counter] key > [Cassette/MP Tray Settings] > [Cassette 1 (to 5)]

Select paper size and media type for Cassettes 1 to 5.

Selection Item		Selectable Size/Type
Paper Size ^{*1}	Metric	Select from the Metric standard sizes. Values Cassette 1: A4, A5, A5 (Landscape), A6, B5, B6, Folio, 216 × 340 mm Cassettes 2 to 5: A4, A5, B6, B5, Folio, 216 × 340 mm
	Inch	Select from the Inch series standard sizes. Values Cassette 1: Letter, Legal, Statement, Statement (Landscape), Executive, Oficio II Cassettes 2 to 5: Letter, Legal, Statement, Executive, Oficio II
	Others	Select from special standard sizes and custom sizes. Values Cassette 1: 16K, ISO B5, Envelope DL, Envelope C5, Oufukuhagaki (Return postcard), Custom ^{*2} Cassettes 2 to 5: 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Oufukuhagaki (Return postcard), Youkei 4, Youkei 2, Custom ^{*2}
Media type ^{*3}		Select the media type. Values Cassette 1: Plain (60 - 105 g/m ²), Rough, Recycled, Preprinted ^{*4} , Bond, Color, Prepunched ^{*4} , Letterhead ^{*4} , High Quality, Custom 1 - 8 Cassettes 2 to 5: Plain (60 - 105 g/m ²), Rough, Recycled, Preprinted ^{*4} , Bond, Color, Prepunched ^{*4} , Letterhead ^{*4} , Envelope, High Quality, Custom 1 - 8

*1 Only set this when the size dial on the cassette is set to "Other".

*2 The custom paper sizes are set for each cassette.

➔ [Custom Paper Size \(page 8-12\)](#)

*3 To change to a media type other than "Plain".

➔ [Media Type Setting \(page 8-14\)](#)

When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.

*4 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-13\)](#)

Multi Purpose Tray

[System Menu/Counter] key > [Cassette/MP Tray Settings] > [Multi Purpose Tray]

Select paper size and media type for the multi purpose tray.

Item		Description
Paper Size	Metric	Select from the Metric standard sizes. Values: A4, A5, A5 (Landscape), A6, B5, B6, Folio, 216 × 340 mm
	Inch	Select from the Inch series standard sizes. Values: Letter, Legal, Statement, Statement (Landscape), Executive, Oficio II
	Others	Select from special standard sizes and custom sizes. Values: 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), OufukuHagaki (Return postcard), Youkei 4, Youkei 2, Custom *1
Media Type *2		Select the media type. Values: Plain (60 to 105 g/m ²), Rough, Transparency, Vellum, Labels, Recycled, Preprinted *3, Bond, Cardstock, Color, Prepunched *3, Letterhead *3, Envelope, Thick (106 to 220 g/m ²), High Quality, Custom 1 - 8

*1 For instructions on how to specify the custom paper size.

➔ [Custom Paper Size \(page 8-12\)](#)

*2 To change to a media type other than "Plain".

➔ [Media Type Setting \(page 8-14\)](#)

*3 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-13\)](#)

Common Settings

Configures overall machine operation.

Default Screen

[System Menu/Counter] key > [Common Settings] > [Default Screen]

Item	Description
Default Screen	Select the screen appearing right after start-up (default screen). Value: Home, Copy, Send, FAX, Custom Box, Job Box, USB Drive, Sub Address Box, Polling Box, FAX Memory RX Box, Favorites, Status, Application Name ^{*1}

*1 The running application will be displayed.

➔ [Application \(page 5-11\)](#)

Sound






[System Menu/Counter] key > [Common Settings] > [Sound]

Item	Description
Buzzer	Set options for buzzer sound during the machine operations.
Key Confirmation	Emit a sound when the operation panel and touch panel keys are selected. Value: Off, On
Job Finish	Emit a sound when a print job is normally completed. Value: Off, On, FAX Reception Only
Ready	Emit a sound when the warm-up is completed. Value: Off, On
Warning	Emit a sound when errors occur. Value: Off, On
Optional Keyboard	Emit a sound to confirm keypresses with a sound. Value: Off, On
FAX Speaker Volume	➔ FAX Operation Guide
FAX Monitor Volume	➔ FAX Operation Guide

Original Settings

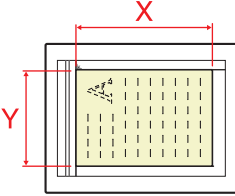[System Menu/Counter] key > [Common Settings] > [Original Settings]



Configure settings for originals.

Item	Description						
Custom Original Size	<p>Set up frequently-used custom original size. The custom size option is displayed on the screen to select original size.</p> <p>Value</p> <p>Metric X: 50 to 356 mm (in 1 mm increments) Y: 50 to 216 mm (in 1 mm increments)</p> <p>Inch X: 1.97 to 14.02" (in 0.01" increments) Y: 1.97 to 8.50" (in 0.01" increments) X=Length, Y=Width</p> <div style="text-align: center;"> <p>Horizontal</p>  </div>						
Auto Detect Original Size (DP)	<p>Select whether to automatically detect originals of the document processor.</p> <table border="1" data-bbox="169 1048 1501 1435"> <tr> <td data-bbox="169 1048 469 1133"> Auto Detect </td> <td data-bbox="469 1048 1501 1133"> <p>Select whether to enable automatic detection of original size. Value: Off, On</p> </td> </tr> <tr> <td data-bbox="169 1133 469 1218"> System of Units </td> <td data-bbox="469 1133 1501 1218"> <p>Select metric or inch for the unit of original size detection. Value: Metric, Inch</p> </td> </tr> <tr> <td data-bbox="169 1218 469 1435"> Legal/OficioII/ 216 x 340 mm </td> <td data-bbox="469 1218 1501 1435"> <p>As Legal, OficioII and 216 x 340 mm are similar in size, select either one of them for automatic detection. Value: Legal, Oficio II, 216 x 340 mm</p> <p> NOTE When [System of Units] is set to [Metric], this function will not be displayed.</p> </td> </tr> </table>	Auto Detect	<p>Select whether to enable automatic detection of original size. Value: Off, On</p>	System of Units	<p>Select metric or inch for the unit of original size detection. Value: Metric, Inch</p>	Legal/OficioII/ 216 x 340 mm	<p>As Legal, OficioII and 216 x 340 mm are similar in size, select either one of them for automatic detection. Value: Legal, Oficio II, 216 x 340 mm</p> <p> NOTE When [System of Units] is set to [Metric], this function will not be displayed.</p>
Auto Detect	<p>Select whether to enable automatic detection of original size. Value: Off, On</p>						
System of Units	<p>Select metric or inch for the unit of original size detection. Value: Metric, Inch</p>						
Legal/OficioII/ 216 x 340 mm	<p>As Legal, OficioII and 216 x 340 mm are similar in size, select either one of them for automatic detection. Value: Legal, Oficio II, 216 x 340 mm</p> <p> NOTE When [System of Units] is set to [Metric], this function will not be displayed.</p>						
Default Original Size	<p>Set the default original size.</p> <p>Value</p> <p>Metric: A4, A5, A6, B5, B6, Folio, 216 × 340 mm Inch: Letter, Legal, Statement, Executive, Oficio II Others: 16K</p>						
Default Original Size (Platen)	<p>Select a default size for the originals placed on the platen. If [Off] is selected, a confirmation will be displayed before each job is processed.</p> <p>Value</p> <p>Off</p> <p>Metric: A4, A5, A6, B5, B6, Folio, 216 × 340 mm Inch: Letter, Legal, Statement, Executive, Oficio II Others: 16K</p> <p> NOTE When [Auto Detect] is set to [Off], this function will not be displayed.</p>						


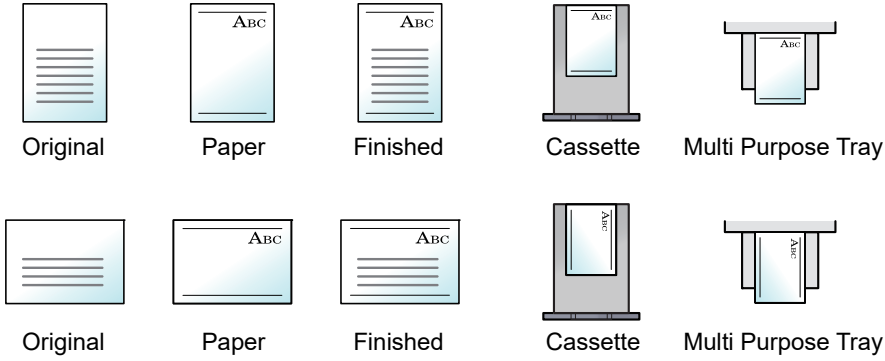

Paper Settings

[System Menu/Counter] key > [Common Settings] > [Paper Settings]

Configure settings for paper.

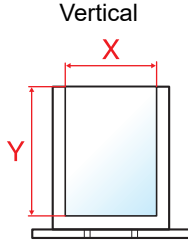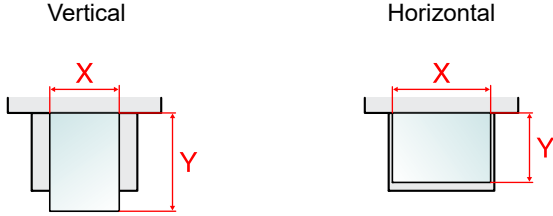Item	Description
<p>Custom Paper Size</p> <p>Cassette 1 Size^{*1}</p>	<p>Set up frequently-used custom paper size.</p> <p>One custom paper size is set for each paper supply source. The custom size option is displayed on the screen to select paper size.</p> <p>Register the custom paper size to be used in Cassette 1.</p> <p>Value</p> <p>Metric X: 105 to 216 mm (in 1 mm increments) Y: 148 to 356 mm (in 1 mm increments)</p> <p>Inch X: 4.13 to 8.50" (in 0.01" increments) Y: 5.83 to 14.02" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> 
<p>Cassette 2 (to 5) Size^{*1}</p>	<p>Register the custom paper size to be used in Cassettes 2 to 5.</p> <p>Value</p> <p>Metric X: 92 to 216 mm (in 1 mm increments) Y: 162 to 356 mm (in 1 mm increments)</p> <p>Inch X: 3.62 to 8.50" (in 0.01" increments) Y: 6.38 to 14.02" (in 0.01" increments)</p>
<p>MP Tray Size</p>	<p>Register the custom paper size to be used in the multi purpose tray.</p> <p>Value</p> <p>Metric X: 70 to 216 mm (in 1 mm increments) Y: 148 to 356 mm (in 1 mm increments)</p> <p>Inch X: 2.76 to 8.50" (in 0.01" increments) Y: 5.83 to 14.02" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> 

*1 Only set this when the size dial on the cassette is set to "Other".

Item	Description
Media Type Settings	Select weight for each media type. For Custom 1-8, settings for duplex printing and media type name can be changed. ➔ Media Type Setting (page 8-14)
Default Paper Source	Select the default paper source from Cassette 1 - 5 and multi purpose tray. Value: Cassette 1 to 5, Multipurpose Tray  NOTE [Cassette 2] to [Cassette 5] are displayed when optional paper feeder is installed.
Paper Selection	Set the default paper selection. Value Auto: Automatically select the cassette containing paper in the same size as originals. Default Paper Source: Select paper source set by "Default Paper Source".
Media for Auto (B&W)	Select a default media type for auto paper selection when [Auto] is selected of Paper Selection. If [Plain] is selected, the paper source with plain paper loaded in the specific size is selected. Select [All Media Types] for the paper source with any kind of paper loaded in the specific size. Value: All Media Types, Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8
Special Paper Action	When printing on Prepunched, Preprint, and Letterhead, punch-holes might not be aligned or the print direction might be upside-down depending on how originals are set and the combination of copying functions. In such a case, select [Adjust Print Direction] to adjust the print direction. When paper orientation is not important, select [Speed Priority]. If [Adjust Print Direction] is selected, load paper according to the steps below. Example: copying on Letterhead  Value: Adjust Print Direction, Speed Priority
Show Paper Setup Message	Set whether to display the confirmation screen for the paper setting when a new paper is set for each cassette. Value: Off, On  NOTE [Cassette 2] to [Cassette 5] are displayed when the optional paper feeder is installed.
Cassette 1 (to 5)	
Multipurpose Tray	

Media Type Setting

The following media type and paper weight combinations are available.

Paper Weight	Weight (g/m ²)	Paper Weight	Weight (g/m ²)
Light	52 g/m ² to 59 g/m ²	Heavy 1	106 g/m ² to 135 g/m ²
Normal 1	60 g/m ² to 74 g/m ²	Heavy 2	136 g/m ² to 163 g/m ²
Normal 2	75 g/m ² to 90 g/m ²	Heavy 3	164 g/m ² to 220 g/m ²
Normal 3	91 g/m ² to 105 g/m ²	Extra Heavy	Transparencies

Each media type's default weight is indicated.

Media Type	Default	Media Type	Default
Plain	Normal 2	Cardstock	Heavy 3
Transparency	Extra Heavy	Color	Normal 2
Rough	Normal 2	Prepunched	Normal 2
Vellum	Light	Letterhead	Normal 2
Labels	Heavy 1	Envelope ^{*1}	Heavy 3
Recycled	Normal 2	Thick	Heavy 3
Preprinted	Normal 2	High Quality	Normal 2
Bond	Normal 3	Custom 1 - 8	Normal 2

*1 The processing speed will be slower than normal.


For Custom 1-8, settings for duplex printing and media type name can be changed.

Item		Description
Duplex Print	Permit	Duplex printing allowed.
	Prohibit	Duplex printing not allowed.
Name		Change names for Custom 1-8. Names should be not more than 16 characters. Selecting media type at multi purpose tray, the name after change will be displayed. ▶ Character Entry Method (page 11-10)

Function Defaults

[System Menu/Counter] key > [Common Settings] > [Function Defaults]

Item	Description
File Format	<p>Select the default type of the files to be sent.</p> <p>Value: PDF, High Comp. PDF, TIFF, JPEG, XPS, OpenXPS, Word, Excel, PowerPoint</p> <p> NOTE</p> <p>[Word], [Excel], and [PowerPoint] appear when the optional OCR Scan Activation Kit is installed.</p>
Original Orientation (Copy)	<p>Set the original orientation defaults.</p> <p>Value: Top Edge on Top, Top Edge on Left, Auto</p> <p> NOTE</p> <p>[Auto] does not appear if the optional OCR Scan Activation Kit is installed but expansion memory is not installed.</p>
Original Orientation (Send/Store)	<p>Set the original orientation defaults.</p> <p>Value: Top Edge on Top, Top Edge on Left, Auto</p> <p> NOTE</p> <p>[Auto] appears when the optional OCR Scan Activation Kit is installed.</p>
Collate/Offset	<p>Set the defaults for Collate.</p> <p>Value: Except for the finisher models: Off, On</p> <p>For the finisher models: Off, Collate Only, Offset Each Page, Offset Each Set</p>
File Separation	<p>Select the default file separation setting.</p> <p>Value: Off, Each Page</p>
Scan Resolution	<p>Select the default scanning resolution.</p> <p>Value: 600×600dpi, 400×400dpi Ultra Fine, 300×300dpi, 200×400dpi Super Fine, 200×200dpi Fine, 200×100dpi Normal</p>
Color Selection	<p>Select the default color mode for scanning documents.</p> <p>Value: Auto (Color/Gray), Auto (Color/B & W), Full Color, Grayscale, Black & White</p>
Original Image (Copy)	<p>Set the default original document type for copying.</p> <p>Value: Text+Photo, Photo, Text, Graphic/Map</p>
Original Image (Send/Store)	<p>Set the default original document type for sending/storing.</p> <p>Value: Text+Photo, Photo, Text, Text (for OCR), Light Text/Line</p> <p> NOTE</p> <p>[Text (for OCR)] is only available when "Color Selection" is set to [Auto (Color/B & W)] or [Black & White].</p>
Background Density Adj. (Copy)	<p>Set the default Backgrnd Density (Copy).</p> <p>Value: Off, Auto, Manual (Darker 5)</p>
Background Density Adj. (Send/Store)	<p>Set the default Backgrnd Density (Send/Store).</p> <p>Value: Off, Auto, Manual (Darker 5)</p>
EcoPrint	<p>Select the EcoPrint default.</p> <p>Value: Off, On</p>
Prevent Bleed-through (Copy)	<p>Set the default value for preventing bleed-through (Copy).</p> <p>Value: Off, On</p>

Item	Description
Prevent Bleed-through (Send/Store)	Set the default Prevent Bleed (Send/Store). Value: Off, On
Skip Blank Page (Copy)	Set the default Skip Blank Page (Copy) settings. Value: Off, On
Skip Blank Page (Send/Store)	Set the default Skip Blank Page (Send/Store) settings. Value: Off, On
FAX TX Resolution	➔ FAX Operation Guide
Zoom	Select the enlarged/reduced default when paper size/sending size changed after the originals set. Value: 100%, Auto
Continuous Scan (Copy)	Set the continuous scan (Copy) defaults. Value: Off, On
Continuous Scan (FAX)	➔ FAX Operation Guide
Continuous Scan (Send/Store)	Set the continuous scan (Send/Store) defaults. Value: Off, On
File Name Entry	Set an automatically entered name (default) for jobs. Additional information such as Date and Time and Job No. can also be set. Value File Name: Up to 32 characters can be entered. Additional Info: None, Date and Time, Job No., [Job No.] & [Date and Time], [Date and Time] & [Job No.]
E-mail Subject/Body	Set the subject and body automatically entered (default subject and body) when sending the scanned originals by E-mail. Value Subject: Up to 256 characters can be entered. Body: Up to 500 characters can be entered.
FTP Encrypted TX	Set the default value for document encryption during transmission. Value: Off, On  NOTE This setting is displayed when the secure protocol "SSL" setting is [On].
JPEG/TIFF Print	Select the image size (resolution) when printing JPEG or TIFF file. Value: Paper Size, Image Resolution, Print Resolution
XPS Fit to Page	Set the default value for the XPS fit to page function. Value: Off, On

Item	Description
Detail Settings	—
Image Quality	Set the default value for the image quality adjustment range when selecting the file format with which to send and store images. Value: 1 Low (High Comp.), 2, 3, 4, 5 High (Low Comp.)
PDF/A	Set the default value for PDF/A when selecting the file format with which to send and store images. Value: Off, PDF/A-1a, PDF/A-1b, PDF/A-2a, PDF/A-2b, PDF/A-2u
High Comp. PDF Image	Select the default quality setting for high compressed PDF files. Value: Compression Ratio Priority, Standard, Quality Priority
OCR Text Recognition^{*1}	Set the default OCR Text Recognition. Value: Off, On
Primary OCR Language^{*1}	Set the default language of the text to be extracted. ([English] is selected as a default.) Select the language to extract from the options displayed on the touch panel.
OCR Output Format^{*1}	Set the default OCR Output Format. Value: Text + Graphics, Text + Graphics with Scanned Image, Scanned Image with Searchable Text
Detect Items to Skip (Copy)	Select the default Detect Items to Skip (Copy) settings. Value: Blank Pages + Ruled Lines, Blank Pages Only, Blank Pages + Some Text
Detect Items to Skip (Send/Store)	Select the default Detect Items to Skip (Send/Store) settings. Value: Blank Pages + Ruled Lines, Blank Pages Only, Blank Pages + Some Text

*1 This appears when the optional OCR Scan Activation Kit is installed.

Paper Output

[System Menu/Counter] key > [Common Settings] > [Paper Output]



NOTE

This function is displayed for the finisher models.

Item	Description
Paper Output	Select the output tray respectively for copy jobs, print jobs from Document Box, computers, and FAX RX data. Value: Inner Tray: Outputs to the Inner Tray of the machine Finisher Tray: Outputs to the Finisher Tray of the machine.

Preset Limit



[System Menu/Counter] key > [Common Settings] > [Preset Limit]

Item	Description
Preset Limit	Restrict the number of copies that can be made at one time. Value: 1 to 999 copies.

Error Handling

[System Menu/Counter] key > [Common Settings] > [Error Handling]

Select whether to cancel or continue the job when error has occurred.

Item	Description
Duplexing Error	Select what to do when duplex printing is not possible for the selected paper size and media type. Value 1-sided: Printed in 1-sided Display Error: Message to cancel printing is displayed.
Finishing Error	Set alternative actions when finishing (Staple/Punch/Offset/Fold/Auto Image Rotation) is not available for the selected paper size or media type. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.
No Staple Error	Set what to do when staples run out during printing. Value Ignore: Printing continues without stapling. Display Error: Message to cancel printing is displayed.  NOTE This function is displayed for the finisher models.
Paper Jam before Staple	The page from which printing is resumed when a paper jam occurs during a job with stapling can be selected. Value Resume at Top of Page: Resume printing from the first page of the document. Resume at Jammed Page: Resume printing from the page where the jam occurred.  NOTE This function is displayed for the finisher models.
Paper Mismatch Error	Select what to do when the selected paper size or type does not match paper size or type loaded in the specified paper source while printing from the computer by specifying the cassette or multi-purpose tray. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.
Wrong Size Paper Loaded	Set what to do when it is detected that the cassette paper size setting does not match the actual paper size that is fed. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.
Multi Originals Fed	Set the action that is executed when two or more original sheets feed at once in the automatic document feeder. Value Ignore: Scanning the originals is continued. Display Error: Message to cancel scanning is displayed.


Measurement

[System Menu/Counter] key > [Common Settings] > [Measurement]

Item	Description
Measurement	Select inch or metric for the unit for paper dimensions. Value: mm, inch

Low Toner Alert

[System Menu/Counter] key > [Common Settings] > [Low Toner Alert]

Item	Description
Low Toner Alert	<p>Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>Selecting [Off] alerts you low toner when the amount of remaining toner becomes 5%. If [On] is selected, set the amount of remaining toner to alert. The setting range is 5 to 100% (in 1% increments).</p>

Keyboard Layout

[System Menu/Counter] key > [Common Settings] > [Keyboard Layout]

Item	Description
Keyboard Layout	<p>Change the layout of the touch panel keyboard used to enter characters.</p> <p>Value: QWERTY, QWERTZ, AZERTY</p>


Optional Keyboard Type

[System Menu/Counter] key > [Common Settings] > [Optional Keyboard Type]

Item	Description
Optional Keyboard Type	<p>Select the type of Optional keyboard that you want to use.</p> <p>Value: US-English, US-English with Euro, French, German, UK-English</p>


Offset Documents by Job

[System Menu/Counter] key > [Common Settings] > [Offset Documents by Job]

Item	Description
Offset Documents by Job	<p>Select whether to offset documents by Job.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>This function is displayed when an optional Inner Finisher is installed.</p>

Offset One Page Documents

[System Menu/Counter] key > [Common Settings] > [Offset One Page Documents]

Item	Description
Offset One Page Documents	<p>Set whether one-page documents are sorted.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>This function is displayed when an optional Inner Finisher is installed.</p>


Display Status/Log

[System Menu/Counter] key > [Common Settings] > [Display Status/Log]

Item	Description
Display Status/Log	Set the display method of the Status/Log.
Display Jobs Detail Status	Value: Show All, My Jobs Only, Hide All
Display Jobs Log	Value: Show All, My Jobs Only, Hide All
Display FAX Log	Value: Show All, Hide All

Remote Printing

[System Menu/Counter] key > [Common Settings] > [Remote Printing]

Item	Description
Remote Printing	<p>Select whether to prohibit printing that is performed without operating the machine. When [Prohibit] is selected, a document that has been stored in the document box from the printer driver can be printed from the machine. This prevents another person from seeing that document.</p> <p>Value: Permit, Prohibit</p> <p> NOTE</p> <p>If [Prohibit] is selected, printing and storing using Quick Copy and Proof and Hold functions are disabled. Printing a received FAX is not prohibited.</p>

Direct Printing from Web


[System Menu/Counter] key > [Common Settings] > [Direct Printing from Web]

Item	Description
Direct Printing from Web	<p>Set whether to allow Direct Printing from Command Center RX.</p> <p>Value: Not Allowed, Allowed</p> <p>➔ Command Center RX User Guide</p>

Function Key Assignment

[System Menu/Counter] key > [Common Settings] > [Function Key Assignment]

Assigns a function to each function key.

Item	Description
Function Key 1	<p>Value: None, Copy, Send, FAX Server^{*1}, FAX, Custom Box^{*2}, Send to Me (E-mail)^{*3}, Send to Me from Box (E-mail)^{*4}, Job Box, USB Drive, Sub Address Box, Polling Box, FAX Memory RX Box, Favorite^{*4}, Application^{*5}</p> <p> NOTE</p> <p>You can select the function to display by selecting [Menu] > [Narrow Down] or from the pull-down menu, by selecting [All], [Application], [Favorites], [Others] to display the function.</p>
Function Key 2	
Function Key 3	

*1 Displayed when the external server (FAX server) is set.

*2 Displayed when the product is equipped with an optional large capacity storage device (hard disk/SSD).

*3 Displayed when user login administration is enabled.

*4 The registered Favorite name is displayed.

*5 The registered application name is displayed.

Show Power Off Message

[System Menu/Counter] key > [Common Settings] > [Show Power Off Message]

Item	Description
Show Power Off Message	Set the mode whether display a confirmation message in power supply off. Value: Off, On

Message Banner Print

[System Menu/Counter] key > [Common Settings] > [Message Banner Print]

Item	Description
Message Banner Print	Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets. Value: Off, On

Home

[System Menu/Counter] key > [Home]

Configure settings for Home screen.

➔ [Editing the Home Screen \(page 2-19\)](#)

Copy

[System Menu/Counter] key > [Copy]


Configures settings for copying functions.

Item	Description
Auto Paper Selection	If [Auto] is selected for Paper Selection, set the paper size selection method when the zoom changes. Value Most Suitable Size: Select paper based on the current zoom and the size of the original. Same as Original Size: Select paper that matches the size of the original, regardless the zoom.
Auto % Priority	When a paper source of different size from the original is selected, select whether automatic zoom (reduce/zoom) is performed. Value: Off, On
Reserve Next Priority	Specify whether the default screen appears when a subsequent copy job is reserved while printing is in progress. To have the default screen appear, select [On]. Value: Off, On

Send

[System Menu/Counter] key > [Send]

Configures settings for sending functions.

Item	Description
Dest. Check before Send	When performing sending jobs, display the confirmation screen of destinations after pressing the [Start] key.* ¹ Value: Off, On
Entry Check for New Dest.	When adding new destination, display the entry check screen to check the entered destination.* ¹ Value: Off, On
Send and Forward	Set whether to send the original to another destination and store it when sending images.
Forward	Set the rule to send the original. Value: Off, On  NOTE When selecting [On], select rules to forward from [FAX], [E-mail], [Folder (SMB)] and [Folder (FTP)].
Destination	Set the destination to which the original is forwarded. One destination can be set. You can check and edit the set address. Follow the steps below to register the destination. <ul style="list-style-type: none"> • Address Book • Ext. Address Book • Address Entry (E-mail) • Address Entry (folder) ➔ Specifying Destination (page 5-20)
Color TIFF Compression	Select the compression method for TIFF images handled on this machine. Value: TIFF V6, TTN2
Default Screen	Use this procedure to set the default screen displayed when you select the [Send] key. Value: Destination, Address Book, Ext. Address Book, One Touch
New Destination Entry	Select whether to permit direct entry of destination.* ¹ Value: Permit, Prohibit
Recall Destination	Select whether to permit usage of [Recall] on the Send screen.* ¹ Value: Permit, Prohibit
Broadcast	Set whether to enable broadcast. Value: Permit, Prohibit
OCR Text Recognition Action * ²	Configure settings for OCR Text Recognition Action. Value: Speed Priority, Quality Priority




*¹ Also applies when sending the fax.

*² This appears when the optional OCR Scan Activation Kit is installed.

Document Box

[System Menu/Counter] key > [Document Box]

Configures settings related to the Custom Box, Job Box, Sub Address Box and Polling Box.

Item	Description
Custom Box	Configure settings for Custom Box.
Add/Edit	➔ Using a Custom Box (page 5-39)
Default Setting	Auto File Deletion Time Set the time to automatically delete stored documents.
Sub Address Box	➔ FAX Operation Guide
Job Box	Configure settings for Job Box.
Quick Copy Job Retention	To maintain free space on the box, you can set the maximum number of stored jobs. Value: number between 0 and 300  NOTE When 0 is set, Quick Copy cannot be used.
Deletion of Job Retention	This setting specifies that documents, such as Private Printing, Quick Copying, or Proof and Hold Printing, saved temporarily in the job box are automatically deleted after they have been saved for a set time. Value: Off, 1 hour, 4 hours, 1 day, 1 week  NOTE This function is valid for documents saved after the function is set. Regardless of this function setting, temporary documents are deleted when the main power switch is turned off.
Storage Media	Select which storage media to use. Value: SSD, Hard Disk, SD Card  NOTE This setting is not displayed if the optional SSD, HDD or SD card is not installed.
Polling Box	➔ FAX Operation Guide
FAX Memory RX Box	

FAX

[System Menu/Counter] key > [FAX]

Configure settings for FAX.

➔ **FAX Operation Guide**

Application

[System Menu/Counter] key > [Application]

Configure settings for Application.

Item	Description
Application	You can install, activate, deactivate, and uninstall applications. ➔ Application (page 5-11)

Internet

[System Menu/Counter] key > [Internet]

Set the proxy for connection to the Internet from an application.

Item	Description
Proxy	Specify the proxy settings. Value: Off, On
Use Same Proxy	Set whether or not the same proxy server is used for all protocols. If the same proxy server is not used, select [Off]. Value: Off, On
HTTP Proxy Server	Set a proxy server (HTTP). Value: (Enter the proxy address and port number.)
HTTPS Proxy Server	Set a proxy server (HTTPS). This setup is available when [Use Same Proxy] is [Off]. Value: (Enter the proxy address and port number.)
No Proxy Domains	Set domains for which no proxy is used. Value: (Enter the domain name.)

Address Book/One Touch

Address Book

[System Menu/Counter] key > [Address Book/One Touch] > [Address Book]

Configure settings for address book.

➔ [Adding a Destination \(Address Book\) \(page 3-34\)](#)

One Touch Key

[System Menu/Counter] key > [Address Book/One Touch] > [One Touch Key]

Configure settings for One Touch Key.

➔ [Adding a Destination on One Touch Key \(One Touch Key\) \(page 3-39\)](#)

Address Book Defaults

[System Menu/Counter] key > [Address Book/One Touch] > [Address Book Defaults]

Item	Description
Sort	Select the default sort setting of the address for the address book. Value: No., Name
Address Book	Specify the default sort setting of the external address book.

Edit Restriction

[System Menu/Counter] key > [Address Book/One Touch] > [Edit Restriction]

Item	Description
Address Book	Restrict editing of the address book. If you selected [Administrator Only] , you can only edit the Address Book by logging in with administrator privileges. Value: Off, Administrator Only
One Touch Key	Restrict editing of the One Touch Key. If you selected [Administrator Only] , you can only edit the One Touch Key by logging in with administrator privileges. Value: Off, Administrator Only

Print list

[System Menu/Counter] key > [Address Book/One Touch] > [Print list]

➔ FAX Operation Guide

User Login/Job Accounting

[System Menu/Counter] key > [User Login/Job Accounting]

Configure settings related to machine management.

➔ [Overview of User Login Administration \(page 9-2\)](#)


[Overview of Job Accounting \(page 9-33\)](#)


[Unknown ID Job \(page 9-48\)](#)



Printer

[System Menu/Counter] key > [Printer]

Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.

Item	Description
Emulation	Select the emulation for operating this machine by commands oriented to other types of printers. Value: Line Printer, IBM Proprinter, EPSON LQ-850, PCL6, KPDL, KPDL (Auto)  NOTE When you have selected [KPDL (Auto)] , set "Alt Emulation", too. When you have selected [KPDL] or [KPDL (Auto)] , set "KPDL Error Report", too.
Alt Emulation	When you have selected [KPDL (Auto)] as emulation mode, you can switch between KPDL and another emulation mode (alternative emulation) automatically according to the data to print. Value: Line Printer, IBM Proprinter, EPSON LQ-850, PCL6
KPDL Error Report	When an error has occurred during printing in KPDL emulation mode, set whether or not the error report is output. Value: Off, On
EcoPrint	EcoPrint conserves toner when printing. This is recommended for test copies where faded printing is not a problem. Value: Off, On

Item	Description
Override A4/Letter	<p>Select whether to treat A4 size and Letter, which are similar in size, as the same size when printing.</p> <p>Value</p> <p>Off: A4 and Letter are not regarded as the same in size.</p> <p>On: A4 and Letter are regarded as the same in size. The machine will use whichever size is in the paper source.</p>
Duplex	<p>Select binding orientation for duplex mode.</p> <p>Value: 1-sided, 2-sided Bind LongEdge, 2-sided Bind ShortEdge</p>
Paper Output	<p>Select either the inner tray or the optional Rear Tray for the output stack.</p> <p>Value: Inner Tray Face Down, Rear Tray Face Up</p>
Copies	<p>Set the default number of copies, from 1 to 999.</p> <p>Value: 1 to 999 copies</p>
Orientation	<p>Set the default orientation, [Portrait] or [Landscape].</p> <p>Value: Portrait, Landscape</p>
Wide A4	<p>Turn this to on to increase the maximum number of characters that can be printed in a line for an A4 page (78 characters at 10 pitch) and Letter size page (80 characters at 10 pitch). This setting is only effective in PCL6 emulation.</p> <p>Value: Off, On</p>
Form Feed TimeOut	<p>Receiving print data from the computer, the machine may sometimes wait if there is no information signaling that the last page does not have any more data to be printed. When the preset timeout passes, the machine automatically prints paper. The options are between 5 and 495 seconds.</p> <p>Value: 5 to 495 seconds (in 5 second increments)</p>
LF Action	<p>Set the line feed action when the machine receives the line feed code (character code 0AH).</p> <p>Value: LF Only, LF and CR, Ignore LF</p>
CR Action	<p>Set the character return action when the machine receives the character return code (character code 0DH).</p> <p>Value: CR Only, LF and CR, Ignore CR</p>
Job Name	<p>Set whether the job name set in the printer driver is displayed.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>When selecting [On], select the job name to be displayed from [Job Name], [[Job No.] & [Job Name]], or [[Job Name] & [Job No.]].</p>
User Name	<p>Set whether the user name set in the printer driver is displayed.</p> <p>Value: Off, On</p>
MP Tray Priority	<p>If paper is set in the MP Tray then it is possible for priority to be given to that MP tray in the paper feed.</p> <p>Value</p> <p>Off: The printer driver settings are followed.</p> <p>Auto Feed: If Auto is selected in the printer driver and there is paper in the MP tray then the paper feed will be from the MP tray.</p> <p>Always: If there is paper in the MP tray then the paper feed will be from the MP tray regardless of what is set in the printer driver.</p>

Item	Description
Paper Feed Mode	<p>While printing from the computer, select how to feed paper when the paper source and type are specified.</p> <p>Value</p> <p>Auto: Search the paper source that matches the selected paper size and type.</p> <p>Fixed: Print on paper loaded in the specified paper source.</p>
Auto cassette Change	<p>Select the following actions when the paper runs out in the paper source while printing.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>When selecting [Off], the machine displays "Add the following paper in cassette #." (# is a cassette number) or "Add the following paper in the multi purpose tray.", and stops printing. Load the paper according to the paper source displayed to resume printing.</p> <p>To print from the other paper cassette, select [Paper Selection]. Select the desired paper source.</p> <p>When selecting [On], the machine continues printing automatically when the other cassette contains the same paper as the currently-used cassette.</p>
Resolution	<p>Set the resolution used for printing.</p> <p>Value: 300 dpi, 600 dpi, Fine1200, Fast1200</p> <p> NOTE</p> <p>Settings that are received from the printer driver have priority over the operation panel settings.</p>
KIR	<p>Select the default KIR (smoothing) setting.</p> <p>Value: Off, On</p>
Printing Job Terminator	<p>Set the condition to be regarded as the job end if the print job has not been processed to the end due to the usage environment or for other reasons.</p> <p>Value:</p> <p>EOJ (End of Job): Up to the detection of a command indicating the end of job data is regarded as one job.</p> <p>End of Network Session: Data contained in one session of network connection is regarded as one job.</p> <p>UEL (Universal Exit Language): Up to detection of UEL at the end of the job is regarded as one job.</p>

System/Network


Configures machine system settings.

Network

[System Menu/Counter] key > [System/Network] > [Network]

Configures network settings.

Host Name

Item	Description
Host Name	Check the host name of the machine. Host name can be changed from Command Center RX.  Changing Device Information (page 2-62)





Wi-Fi Direct Settings

Set Wi-Fi Direct.



NOTE

This function is displayed when the optional Wireless Network Interface Kit is installed.

Item	Description
Wi-Fi Direct	Select whether to use Wi-Fi Direct. Value: Off, On
Device Name	Specify the device name.  NOTE <ul style="list-style-type: none"> Up to 32 characters can be entered. This function is displayed when [Wi-Fi Direct] is set to [On].
IP Address	Check the IP address of the machine.  TCP/IP Setting (page 8-30)  NOTE This function is displayed when [Wi-Fi Direct] is set to [On].
Auto Disconnect	Automatically disconnect devices connected through Wi-Fi Direct. Value: Off, On  NOTE <ul style="list-style-type: none"> If you select [ON], set the waiting time for automatic disconnection. This function is displayed when [Wi-Fi Direct] is set to [On].

Wi-Fi Settings




Set Wi-Fi.







NOTE

This function is displayed when the optional Wireless Network Interface Kit is installed.





Item	Description
Wi-Fi	Select whether to use Wi-Fi. Value: Off, On

Item	Description																				
Setup	-																				
Connection Status	Check the wireless LAN status.																				
Quick Setup	<p>If the machine will connect to an access point that supports the automatic wireless network setup, connection settings can be configured by Quick Setup.</p> <p> NOTE When [Reload] is selected, the list is reloaded. If you are connecting to an access point that has WEP enabled, select [WEP Key Index] and select the WEP key index.</p>																				
Available Network	Displays access points to which the machine can connect.																				
WEP Key Index	<p>Select the key index of the access point.</p> <p>Value: 0 to 3</p>																				
Push Button Method	<p>If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.</p> <p> NOTE The push button method supports only the WPS.</p>																				
PIN Code Method (Device)	Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.																				
Custom Setup	The detailed settings for wireless LAN can be changed.																				
Network Name (SSID)	<p>Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.</p> <p> NOTE Up to 32 characters can be entered.</p>																				
Network Authentication	<p>Select network authentication type.</p> <p>Value: Open, WPA2/WPA-PSK, WPA2-PSK, WPA2/WPA-EAP, WPA2-EAP</p>																				
Encryption	<p>Select encryption method. The setting values vary depending on the Network Authentication setting.</p> <table border="1"> <thead> <tr> <th>Network Authentication</th> <th colspan="2">Encryption</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Open</td> <td>Disable</td> <td>—</td> </tr> <tr> <td>WEP</td> <td>WEP Key: Up to 26 characters WEP Key Index: 0 to 3</td> </tr> <tr> <td>WPA2/WPA-PSK</td> <td colspan="2">Data Encryption: AES, Auto Preshared Key: Up to 64 characters</td> </tr> <tr> <td>WPA2-PSK</td> <td colspan="2">Data Encryption: AES, Auto Preshared Key: Up to 64 characters</td> </tr> <tr> <td>WPA2/WPA-EAP</td> <td colspan="2">Data Encryption: AES, Auto</td> </tr> <tr> <td>WPA2-EAP</td> <td colspan="2">Data Encryption: AES, Auto</td> </tr> </tbody> </table>	Network Authentication	Encryption		Open	Disable	—	WEP	WEP Key: Up to 26 characters WEP Key Index: 0 to 3	WPA2/WPA-PSK	Data Encryption: AES, Auto Preshared Key: Up to 64 characters		WPA2-PSK	Data Encryption: AES, Auto Preshared Key: Up to 64 characters		WPA2/WPA-EAP	Data Encryption: AES, Auto		WPA2-EAP	Data Encryption: AES, Auto	
Network Authentication	Encryption																				
Open	Disable	—																			
	WEP	WEP Key: Up to 26 characters WEP Key Index: 0 to 3																			
WPA2/WPA-PSK	Data Encryption: AES, Auto Preshared Key: Up to 64 characters																				
WPA2-PSK	Data Encryption: AES, Auto Preshared Key: Up to 64 characters																				
WPA2/WPA-EAP	Data Encryption: AES, Auto																				
WPA2-EAP	Data Encryption: AES, Auto																				

Item	Description
TCP/IP Setting	-
TCP/IP	Select whether to use TCP/IP Protocol. Value: Off, On
IPv4 Settings	Set up TCP/IP (IPv4) to connect to the network. This setting is available when [TCP/IP] is set to [On] .
DHCP	Select whether to use the DHCP (IPv4) server. Value: Off, On
Auto-IP	Select whether to use Auto-IP. Value: Off, On
IP Address	Set the IP address. Value: ###.###.###.###  NOTE When DHCP is set to [On] , this function will be grayed out and the value cannot be entered.
Subnet Mask	Set the IP subnet mask. Value: ###.###.###.###  NOTE When DHCP is set to [On] , this function will be grayed out and the value cannot be entered.
Default Gateway	Set the IP gateway address. Value: ###.###.###.###  NOTE When DHCP is set to [On] , this function will be grayed out and the value cannot be entered.

 **IMPORTANT**

- When setting the Auto-IP, enter "0.0.0.0" in [IP Address].
- After changing the setting, restart the network or turn the machine OFF and then ON.


Item	Description
IPv6	Set up TCP/IP (IPv6) to connect to the network. This setting is available when [TCP/IP] is [On].
IPv6	Select whether to use IPv6. Value: Off, On  NOTE Selecting [On] displays IP address in [IP Address (Link Local)] after restarting the network.
Manual Setting	Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6). Value IP Address (Manual): 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:). Prefix Length: 0 to 128 Default Gateway: 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. To enter "Default Gateway", set [RA (Stateless)] to [Off].
RA (Stateless)	Select whether to use RA (Stateless). Value: Off, On  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address (Stateless)] after restarting the network.
DHCP	Select whether to use the DHCP (IPv6) server. Value: Off, On  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address (Stateful)] after restarting the network.
Restart Network	Restarts the network.

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

Wired Network Settings


Configure wired network settings.

Item	Description
TCP/IP Settings	For details on setting value.  TCP/IP Setting (page 8-30)
LAN Interface	Specify the settings for the LAN interface to be used. Value: Auto, 10Base-Half, 10Base-Full, 100Base-Half, 100Base-Full, 1000BASE-T

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

Bonjour

Item	Description
Protocol Setting	Select whether to use Bonjour. Value: Off, On
Available Network (Wi-Fi Direct)*¹	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*¹	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.

*1 Displayed only when the wireless network function is available on the machine.

IP Filter (IPv4)

Item	Description
IP Filter (IPv4)	Make this setting when you use IP Filter (IPv4). Value: Off, On

IP Filter (IPv6)


Item	Description
IP Filter (IPv6)	Make this setting when you use IP Filter (IPv6). Value: Off, On





IPSec





Item	Description
IPSec	Make this setting when you use IPSec. Value: Off, On







Protocol Settings









Configure protocol settings.





Item	Description
NetBEUI	-
Protocol Setting	Selects whether to receive documents using NetBEUI.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.







Item	Description
LPD	-
Protocol Setting	Selects whether to receive documents using LPD.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
SMTP (E-mail TX)	Select whether to send E-mail using SMTP. Value: Off, On
POP3 (E-mail RX)	Select whether to receive E-mail using POP3. Value: Off, On
FTP Client (Transmission)	Select whether to send documents using FTP. When selecting [On], set the FTP Port Number. The default port number is 21. Value: Off, On (Port Number: 1-65535)
FTP Server (Reception)	-
Protocol Setting	Select whether to receive documents using FTP.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
SMB Client (Transmission):	Select whether to send documents using SMB. When selecting [On], set the SMB default Port Number. The default port number is 445. Value: Off, On (Port Number: 1-65535)
WSD Scan	-
Protocol Setting	Select whether to use WSD Scan.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
WSD Print	-
Protocol Setting	Set whether to use our proprietary web services. WIA driver, TWAIN driver and Network FAX driver use this Enhanced WSD web service.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.



Item	Description
LDAP	Select whether to use LDAP. Value: Off, On
SNMP	-
Protocol Setting	Select whether to communicate using SNMP.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
SNMPv3	-
Protocol Setting	Select whether to communicate using SNMPv3.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
HTTP	-
Protocol Setting	Select whether to communicate using HTTP.* ¹ Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
HTTPS	-
Protocol Setting	Select whether to communicate using HTTPS.* ^{1, *3} Value: Off, On
Available Network (Wi-Fi Direct)*²	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)*²	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.

Item	Description
IPP	-
Protocol Setting	Selects whether to receive documents using IPP. To use the IPP protocol, select [Not Secure (IPP&IPPS)] on IPP Security under Security Settings from the Command Center RX. ^{*1} Value: Off, On
Port Number	Set the IPP default Port Number. The default port number is 631. Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On] .
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
IPP over SSL	-
Protocol Setting	Select whether or not to use IPP over SSL. ^{*1, *3} Value: Off, On  NOTE When selecting [On] , it also requires a certificate for SSL. the default certificate is the self-certificate of the machine. ➔ Command Center RX User Guide
Port Number	Set the IPP over SSL default Port Number. The default port number is 443. ^{*1} Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On] .
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
RAW Port	-
Protocol Setting	Select whether to receive documents using RAW Port. ^{*1} Value: Off, On
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.

Item	Description
ThinPrint	-
Protocol Setting	Select whether to use ThinPrint. ^{*1, *3} Value: Off, On  NOTE This function is displayed only when the optional ThinPrint Option is activated.
Port Number	Set the ThinPrint default Port Number. The default port number is 4000. Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On].
ThinPrint over SSL	To use the ThinPrint over SSL protocol, set [ThinPrint Over SSL] to [On]. ^{*1, *3} Value: Off, On  NOTE <ul style="list-style-type: none"> This function is displayed when [Protocol Setting] is set to [On]. When selecting [On], it also requires a certificate for SSL. The default certificate is the self-certificate of the machine. <p>➔ Command Center RX User Guide</p>
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
Enhanced WSD	-
Protocol Setting	Set whether to use our proprietary web services. ^{*1} Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX driver.
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
Enhanced WSD over SSL	-
Protocol Setting	Set whether to use our proprietary web services over SSL. ^{*1, *3} Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN and Network FAX drivers.
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.

Item	Description
eSCL	-
Protocol Setting	Selects whether to receive scanned documents using eSCL. ^{*1} Value: Off, On
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
eSCL over SSL	-
Protocol Setting	Selects whether to receive scanned documents using eSCL over SSL. ^{*1, *3} Value: Off, On
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
REST	-
Protocol Setting	Select whether to use REST. ^{*1} Value: Off, On
Port Number	Set the REST default Port Number. The default port number is 9080. ^{*1} Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On].
Available Network (Wi-Fi Direct)^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi)^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.

Item	Description
REST over SSL	-
Protocol Setting	Select whether or not to use REST over SSL. ^{*1, *3} Value: Off, On
Port Number	Set the REST over SSL default Port Number. The default port number is 9081. ^{*1} Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On].
Available Network (Wi-Fi Direct) ^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi) ^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
VNC (RFB) over SSL	-
Protocol Setting	Select whether or not to use REST over SSL. ^{*1, *3} Value: Off, On
Port Number	Set the REST over SSL default Port Number. The default port number is 9081. ^{*1} Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On].
Available Network (Wi-Fi Direct) ^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi) ^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.
VNC (RFB)	-
Protocol Setting	Select whether or not to use REST over SSL. ^{*1, *3} Value: Off, On
Port Number	Set the REST over SSL default Port Number. The default port number is 9081. ^{*1} Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On].
Available Network (Wi-Fi Direct) ^{*2}	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi) ^{*2}	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.

Item	Description
Enhanced VNC (RFB) over SSL	-
Protocol Setting	Select whether or not to use REST over SSL. *1, *3 Value: Off, On
Port Number	Set the REST over SSL default Port Number. The default port number is 9081. *1 Value: 1-32767  NOTE This function is displayed when [Protocol Setting] is set to [On].
Available Network (Wi-Fi Direct) *2	Set whether to enable this function for each network. Value: Disable, Enable
Available Network (Wi-Fi) *2	 NOTE
Available Network (Wired Network)	This function is displayed when [Protocol Setting] is [On] and the optional Wireless Network Interface Kit is installed.

*1 The setting will be changed after restarting the device or network.

*2 Displayed only when the wireless network function is available on the machine.

*3 Set "SSL" to [**On**] in Security Settings.

➔ [Security Settings \(page 8-39\)](#)




IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

Security Settings

Item	Description
SSL	Select whether or not to use SSL. Value: Off, On
IPP Security	Select the IPP security level. This setup is available when SSL is [On]. Value: IPP/IPP over SSL, IPPoverSSL only
HTTP Security	Select the HTTP security level. This setup is available when SSL is [On]. Value: HTTP/HTTPS, HTTPS Only
SMTP Security	Select the communication protocol according to the type of security employed by the SMTP server. This setup is available when SSL is [On]. Value: Off, SSL/TLS, STARTTLS
POP3 Security (User 1)	Select the communication protocol according to the type of security employed by the POP3 server. This setup is available when POP3 is [On]. Value: Off, SSL/TLS, STARTTLS
POP3 Security (User 2)	
POP3 Security (User 3)	

Ping

Item	Description
Ping	Checks if communication with the destination by entering the host name or IP address of the destination is possible.  NOTE If [Primary Network (Client)] is set to [Optional Network], this item is not displayed.

Restart Network

Item	Description
Restart Network	Restarts the network.

Proxy

Item	Description
Proxy	Specify the proxy settings. Value: Off, On
Use Same Proxy	Set whether or not the same proxy server is used for all protocols. If the same proxy server is not used, select [Off]. Value: Off, On
HTTP Proxy Server	Set a proxy server (HTTP). Value: (Enter the proxy address and port number.)
HTTPS Proxy Server	Set a proxy server (HTTPS). This setup is available when [Use Same Proxy] is [Off]. Value: (Enter the proxy address and port number.)
No Proxy Domains	Set domains for which no proxy is used. Value: (Enter the domain name.)

Optional Network

[System Menu/Counter] key > [System/Network] > [Optional Network]




Setup

Configure settings for the optional Wireless Network Interface Kit.

**NOTE**

This function is displayed when the Wireless Network Interface Kit (IB-51) is installed.

Item	Description
Connection Status	You can check the wireless LAN status.
Quick Setup	If the machine will connect to an access point that supports the automatic wireless network setup, connection settings can be configured by Quick Setup.
Available Network	Select access points to which the machine can be connected, enter the Preshared Key and start a connection.
Push Button Method	If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point. NOTE The push button method supports only the WPS.
PIN Code Method (Device)	Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.
PIN Code Method (Terminal)	Starts connection using the PIN code of the access point. Enter the PIN code of the access point.

Item	Description
Custom Setup	The detailed settings for wireless LAN can be changed.
Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.  NOTE Up to 32 characters can be entered.
Connection Mode	Set the connection mode. Value: Ad Hoc, Infrastructure  NOTE Ad Hoc: Directly communicates with the device without going through an access point. This method cannot be used to connect to two or more devices. Infrastructure: Performs communication through an access point.
Channel	Set channel. Use [-] / [+] or the numeric keys to enter a number. Value: 1 to 11
Network Authentication	Select network authentication type. To select other options, open the device home page from a computer. Value: Open, Shared, WPA-PSK ^{*1} , WPA2-PSK ^{*1}
Encryption	Select encryption method. If the option other than [Disable] is selected, enter the WEP key or the Preshared key. The setting values vary depending on the Network Authentication setting. Select [Data Encryption]. When Network Authentication is set to [Open] or [Shared]: Value: Disable, WEP When Network Authentication is set to [WPA-PSK] or [WPA2-PSK]: Value: TKIP ^{*2} , AES, Auto ^{*2} , Preshared Key  NOTE <ul style="list-style-type: none"> • If [WEP] is selected, enter the WEP key. Up to 26 characters can be entered. • If [TKIP], [AES] or [Auto] is selected, enter the Preshared key. Enter the value in 8 to 63 characters.

*1 Not displayed if you selected [Ad Hoc] for "Connection Mode".

*2 Not displayed if you selected [WPA2-PSK] for "Network Authentication".



Basic

Configure settings for the optional Network Interface Kit.

NOTE

This menu is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.


Item	Description
Host Name	Check the host name of the machine. Host name can be changed from Command Center RX. ➔ Changing Device Information (page 2-62)
TCP/IP Settings	For details on setting value. ➔ TCP/IP Setting (page 8-30) ➔ Bonjour (page 8-32) ➔ IPSec (page 8-32)


Item	Description
LAN Interface	Select the LAN Interface type.* ¹ Value: Auto, 10Base-Half, 10Base-Full, 100Base-Half, 100Base-Full, 1000BASE-T  NOTE This function is displayed when the optional Network Interface Kit is installed.
MAC Address Filter	Select whether to use MAC Address Filter.  Operation Guide for the optional Network Interface Kit Value: Off, On
Restart Network	Restarts the network card of the device.

*1 The setting will be changed after restarting the device or network.

Primary Network (Client)

[System Menu/Counter] key > [System/Network] > [Primary Network (Client)]


 **NOTE**
This function is displayed when the optional Network Interface Kit (IB-50) or Wireless Network Interface Kit (IB-51 or IB-36) is installed.

Item	Description
Primary Network (Client)	Select the network interface to be used for the send function that this machine functions as a client, the network authentication and connecting to external address book. Value: Wi-Fi, Wired Network, Optional Network  NOTE <ul style="list-style-type: none"> • [Wi-Fi] is displayed when the Wireless Network Interface Kit (IB-36) is installed. • [Optional Network] is displayed when the optional Network Interface Kit (IB-50) or Wireless Network Interface Kit (IB-51) is installed. • You can set and use "[Wired Network] or [Wi-Fi]", and "[Optional Network] (IB-50 or IB-51)" individually for the e-mail send connection.

Interface Block Setting

[System Menu/Counter] key > [System/Network] > [Interface Block Setting]

This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.

Item	Description
USB Host	This locks and protects the USB port (USB host). Value: Unblock, Block
USB Device	This locks and protects the USB interface connector (USB Device). Value: Unblock, Block
USB Drive	This locks and protects the USB memory slot. Value: Unblock, Block  NOTE This function is available when USB Host is set to [Unblock].
Optional Interface	This locks and protects the optional interface slots. Value: Unblock, Block

IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

Bluetooth Settings

[System Menu/Counter] key > [System/Network] > [Bluetooth Settings]

NOTE

This function is displayed when the Bluetooth adapter is installed.

Item	Description
Bluetooth	Use Bluetooth keyboard. Value: Off, On
Search Device	Select a keyboard.

Security Level

[System Menu/Counter] key > [System/Network] > [Security Level]

Item	Description
Security Level	Specify the security level. Value Low: This mode is used during maintenance. Do not use normally. High: This is the security setting we recommend. Use this setting normally. Very High: In addition to [High] setting, this setting disables the machine settings to be changed from external command.

Restart

[System Menu/Counter] key > [System/Network] > [Restart]

Item	Description
Restart	Restart the CPU without turning the power switch off. Use this to deal with any unstable operation by the machine. (Same as the computer restart.)

RAM Disk Setting

[System Menu/Counter] key > [System/Network] > [RAM Disk Setting]



NOTE

This function will not be displayed when the optional hard disk/SSD is installed.

Item	Description
RAM Disk Setting	<p>A RAM disk can be created and its size can be set. Creating a RAM disk makes it possible to print from a Job Box.</p> <p>Value</p> <p>RAM Disk Setting: Off, On</p> <p>RAM Disk Size: The setting range varies depending on the amount of memory installed and the option memory usage setting.</p>



IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

Optional Memory

[System Menu/Counter] key > [System/Network] > [Optional Memory]

Item	Description
Optional Memory	<p>When optional memory is installed, select the memory allocation scheme based on the application in which you are using the equipment.</p> <p>Value: Printer Priority, Normal, Copy Priority</p>









IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.



Data Security

[System Menu/Counter] key > [System/Network] > [Data Security]

Configure settings for data stored in the optional SSD and hard disk and machine's memory.


Item	Description
SSD Initialization Hard Disk Initialization	This changes security function settings.  NOTE <ul style="list-style-type: none"> This function is displayed when the optional hard disk/SSD is installed and the Data Encryption/Overwrite is activated. Display changes according to the large storage capacity installed on this machine. When an SSD is installed: SSD Initialization When a hard disk is installed: Hard Disk Initialization Input of the security password is required to change security function settings. The initial setting for the Security Password is "000000".
Data Overwrite Method*1	The method used to overwrite data can be changed. Refer to the following for details.  Data Encryption/Overwrite Operation Guide Value Once Overwrite: The 1-time overwrite method overwrites unneeded data areas (in the case of overwriting) or all the data areas (in the case of system initialization) with specific numbers to prevent data restoration. 3-time Overwrite (A): The 3-time overwrite method complies with DoD 5220.22-M, and overwrites unneeded data areas (in the case of overwriting) or all the data areas (in the case of system initialization) with specific numbers, their complements, and random numbers to prevent data restoration. Data restoration is not possible even through a sophisticated restoration technique.  NOTE This method may take more time than Once Overwrite method to process a larger amount of data.
Security Password	You can customize the security password so that only the administrator can use the security kit. Enter a password that uses 6 to 16 alphanumeric characters and symbols. You will need to enter the password again for confirmation.  IMPORTANT Avoid any easy-to-guess numbers for the security password (e.g. 11111111 or 12345678).
System Initialization	This can be used to delete all the data stored in the hard disk/SSD. Overwrite all the data stored in the hard disk/SSD when disposing of the machine.  IMPORTANT If you accidentally turn the power switch off during initialization, the hard disk/SSD might possibly crash or initialization might fail.  NOTE If you accidentally turn off power during initialization, turn it back on. Initialization will restart automatically.

*1 This function is displayed when the hard disk is installed.

Item	Description
Data Sanitization	<p>Return the following information registered in the machine to the factory defaults.</p> <ul style="list-style-type: none"> • Address Book • Favorites • System settings • Fax transmission and reception / forwarding data • Transmission histories • Data saved in Custom Box • Optional applications <p> IMPORTANT Data saved in an application or SD card cannot be erased. To erase data on an SD card, you must format the SD card.</p> <p> NOTE</p> <ul style="list-style-type: none"> • Once in progress, the processing cannot canceled. • Before performing this function, disconnect modular, network, and other cables. • Before performing this function, set all interface block settings to [Unblock]. ➔ Interface Block Setting (page 8-43) • Do not turn off the main power switch while sanitizing the data. If the main power is turned off during data erasing, erasing will be executed automatically when the power is restored, however, complete erasure cannot be guaranteed.
Run Immediately	Data Sanitization will be performed.
Reserve a Sanitization Time	<p>Completely erase address and image data saved in the device at the scheduled time.</p> <p>Value: Off, On</p> <p>If [On] is selected, set the date and time that sanitization is to be performed. The setting range is Year (2000 to 2037), Month (1 to 12), Day (1 to 31), Hour (00 to 23).</p>
Device Use After Sanitization	<p>The device use restriction after the data sanitization is completed.</p> <p>The device cannot be used if [Prohibit] is selected.</p> <p>Value: Permit, Prohibit</p>


OCR Dictionary Installation

[System Menu/Counter] key > [System/Network] > [OCR Dictionary Installation]

Item	Description
OCR Dictionary Installation	<p>Install the OCR Dictionary.</p> <p> NOTE</p> <ul style="list-style-type: none"> • For information on dictionary data, consult your Service Representative. • To install the OCR dictionary, a hard disk/SSD or SD/SDHC memory card must be inserted. • If both a hard disk/SSD and an SD/SDHC memory card are inserted, the OCR dictionary will be installed on the hard disk/SSD. • If you will use an SD/SDHC memory card, a 32 GB SD/SDHC memory card is recommended.

Optional Function

[System Menu/Counter] key > [System/Network] > [Optional Function]

Item	Description
Optional Function	You can use the optional applications installed on this machine.  Optional Applications (page 11-8)

Remote Services Settings

[System Menu/Counter] key > [System/Network] > [Remote Services Settings]

When the trouble occurs on this product, it is possible to explain the operational procedure and the troubleshooting method through the internet from our sales office by accessing the operation panel screen of this product while operating the screen.





NOTE

When using the remote service settings, it is necessary to make a contract with our company. Please contact our sales office or our authorized dealer (purchase source) for the details.

FAX Server Settings


[System Menu/Counter] key > [System/Network] > [FAX Server Settings]

Configure settings for FAX Server.

Item	Description
FAX Server	Select whether or not to use FAX Server. Value: Off, On
Address Settings	Set the prefix, suffix, and domain name to be assigned to the address.  NOTE <ul style="list-style-type: none"> This appears when [On] is set in fax server. For the fax server information, ask your fax server administrator.
File Format	Select the default type of the files to be sent. Value: PDF, TIFF, XPS  NOTE This appears when [On] is set in fax server.
Address Book Defaults	Set the expansion address book to be used.  NOTE <ul style="list-style-type: none"> This appears when [On] is set in fax server. This does not appear when extension address book is not enabled, .  Command Center RX User Guide

Remote Operation






[System Menu/Counter] key > [System/Network] > [Remote Operation]



Item	Description
Remote Operation	<p>Configure settings for remote operation.</p> <p>Value: Off, On</p> <p>If [On] is selected, set the Use Restrictions.</p> <p>[Off]: Users without administrator privileges can also execute remote operation.</p> <p>[Use Password]: Enter the password, then re-enter it to confirm.</p> <p>[Administrator Only]: Only administrator can execute remote operation.</p> <p> NOTE</p> <p>When selecting [Administrator Only], the remote operation using VNC software is unavailable.</p>

Date/Timer/Energy Saver




[System Menu/Counter] key > [Date/Timer/Energy Saver]

Configures settings related to the date and time.

Item	Description
Date/Time	<p>Set the date and time for the location where you use the machine. If you perform Send as E-mail, the date and time set here will be displayed on the header.</p> <p>Value: Year (2000 to 2037), Month (1 to 12), Day (1 to 31), Hour (00 to 23), Minute (00 to 59), Second (00 to 59)</p> <p>➔ Setting Date and Time (page 2-29)</p> <p> NOTE</p> <p>If you change the date/time while using the trial version of an application, you will no longer be able to use the application.</p>
Date Format	<p>Select the display format of year, month, and date. The year is displayed in Western notation.</p> <p>Value: Month/Day/Year, Day/Month/Year, Year/Month/Day</p>
Time Zone	<p>Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.</p>
Auto Panel Reset	<p>If no jobs are run for a certain period of time, automatically reset settings and return to the default setting. Select to use Auto Panel Reset or not.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>The time allowed to elapse before the panel is reset is set with the following:</p> <p>➔ Panel Reset Timer (page 8-49)</p>
Panel Reset Timer	<p>If you select [On] for Auto Panel Reset, set the amount of time to wait before Auto Panel Reset.</p> <p>Value: 5 to 495 seconds (in 5 second increments)</p> <p> NOTE</p> <p>This function is displayed when [Auto Panel Reset] is set to [On].</p>
Low Power Timer	<p>Set amount of time before entering the Low Power mode.</p> <p>Value</p> <p>1 to 120 minutes (1 minute increments)</p> <p>➔ Low Power Mode (page 2-38)</p>
Sleep Level (models except for Europe)	<p>Select the sleep level.</p> <p>Set the Energy Saver mode to reduce power consumption even more than Quick Recovery mode.</p> <p>Value: Quick Recovery, Energy Saver</p> <p> NOTE</p> <p>This function will not be displayed when the optional Network Interface Kit is installed.</p>
Sleep Rules	<p>Select whether to use the Energy Saver mode for the following functions individually:</p> <ul style="list-style-type: none"> • Card Reader*¹ • Application <p>Value: Off, On</p> <p> NOTE</p> <p>When the machine has entered sleep mode with Energy Saver setting, the ID card cannot be recognized.</p>

Item	Description
Sleep Rules (models for Europe)	Select whether to use the Sleep mode for the following functions individually: <ul style="list-style-type: none"> • Card Reader*¹ • Application Value: Off, On  NOTE If the sleep condition is not turned off, the ID card cannot be recognized.
Sleep Timer	Set amount of time before entering Sleep. Value 1 to 120 minutes (1 minute increments)
Energy Saver Recovery Level	Select the method of recovery from energy saver. Value: Full Recovery: This mode enables the use of all functions immediately. However, this mode saves less energy. Normal Recovery: In this mode, you can select the method from the following: enabling the use of all functions immediately or enabling the use of desired functions only. If you want to use all functions immediately, select the [Energy Saver] key to execute recovery. Power Saving Recovery: This mode enables the use of desired functions only. This mode saves energy most effectively.
Weekly Timer Settings	Configure settings for switching the machine to OFF and waking it automatically at a specified time for each day of the week.
Weekly Timer	Select whether to use Weekly Timer. Value: Off, On
Schedule	Specify the time for each day of the week at which the machine turns OFF.
Retry Times	Set the number of retries for turning OFF this machine. Value: Limited Retries, Unlimited Retries  NOTE If [Limited Retries] is selected, set the number of retry. The setting range is 0 to 10. Retry is not performed when "0" is set. If [Unlimited Retries] is selected, retry is performed until the machine turns OFF.
Retry Interval	Set the retry interval. Use [-] / [+] to enter a number. Value: 10 to 60 seconds (increments of 10 seconds)

*1 Displayed when the optional Card Authentication Kit is activated.

Item	Description
Power Off Rule (models for Europe)	<p>Select whether or not the machine enters Power Off mode for the following function. Select [On] to set the Power Off mode.</p> <ul style="list-style-type: none"> • Network • FAX • USB Cable • USB Host • RAM Disk • NIC^{*1} • Remote Diagnostics • Application <p>Value: Off, On</p> <p> NOTE</p> <p>Even when any of the functions is set to [On], if [FAX] is set to [Off], the machine does not enter Power Off Mode.</p> <p>Even when [Network] or [USB Cable] is set to [Off], if the machine does not communicate with the other devices, the machine will enter Power Off Mode.</p>
Power Off Timer (models for Europe)	<p>Select whether to turn off the power automatically after a period of inactivity.</p> <p>Value: 1 hour, 2 hours, 3 hours, 4 hours, 5 hours, 6 hours, 9 hours, 12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week</p>
Auto Error Clear	<p>If an error occurs during processing, processing stops to wait for the next step to be taken by the user. In the Auto Error Clear mode, automatically clear the error after a set amount of time elapses.</p> <p>Value: Off, On</p>
Error Clear Timer	<p>If you select [On] for Auto Error Clear, set the amount of time to wait before automatically clearing errors.</p> <p>Value: 5 to 495 seconds (in 5 second increments)</p> <p> NOTE</p> <p>This function is displayed when [Auto Error Clear] is set to [On].</p>
Unusable Time	<p>➔ FAX Operation Guide.</p>
Ping Timeout	<p>Set the time until timeout occurs when [Ping] is executed in "System/Network".</p> <p>Value: 1 to 30 seconds (in 1 second increments)</p> <p> NOTE</p> <p>If [Primary Network (Client)] is set to [Optional Network], this item is not displayed.</p>



*1 Displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.

Adjustment/Maintenance

[System Menu/Counter] key > [Adjustment/Maintenance]

Adjust printing quality and conduct machine maintenance.

Item	Description
Quiet Mode Settings	Lower print and scan speed for quiet processing.
Quiet Mode	Set the Quiet Mode. Select this mode when the running noise is uncomfortable. Value: Off, On
Specify for Each Job	It is possible to set the use of Quiet Mode for each job, such as copying and sending. Set whether or not to permit the setting for each job. Value: Permit, Prohibit
Density Adjustment	Adjust density.
Copy	Adjust copy density. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Send/Box	Adjust scan density when sending or storing the data in Document Box. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Sharpness Adjustment	Adjust the sharpness of the image outline.
Copy	Sharpen or blur overall image outlines during copying. Adjustment can be made in 7 levels. Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)
Send/Box	Sharpen or blur overall image outlines when sending or storing them in the Document Box. Adjustment can be made in 7 levels. Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)
Contrast	You can increase or decrease the overall contrast.
Copy	Increases or decreases the overall contrast of copies. Value: -3 (Lower), -2, -1, 0 (Normal), +1, +2, +3 (Higher)
Send/Box	Increases or decreases the overall contrast when documents are sent or saved in a document box. Value: -3 (Lower), -2, -1, 0 (Normal), +1, +2, +3 (Higher)
Background Density Adj.	Darkens or lightens overall background density adjustment.
Copy (Auto)	Darkens or lightens overall background density adjustment during copying. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Send/Box (Auto)	Darkens or lightens overall background density when sending images or storing them in the Document Box. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Toner Save Level (EcoPrint)	Select the default Toner Save Level (EcoPrint).
Copy	Select the default Toner Save Level (EcoPrint) at the time of copying. Value: 1 to 5 Raising the level reduces toner consumption, but image quality falls.
Printer	Select the default Toner Save Level (EcoPrint) at the time of use of the printer. Value: 1 to 5 Raising the level reduces toner consumption, but image quality falls.
Print Density	Adjust print density. Adjustment can be made in 5 levels. Value: 1 to 5

Item	Description
Auto Color Correction	<p>This setting allows you to adjust the detection level used by the machine to determine whether the original is color or black and white during Auto Color Mode. Setting a lower value will result in more originals being identified as color, while a larger value will tend to increase the number of originals being identified as black and white.</p> <p>Value: 1 (Color), 2, 3, 4, 5 (B & W)</p>
Correcting Black Line	<p>Correct fine lines (streaks caused by contamination), which may appear on the image, when the document processor is used.</p> <p>Value: Off, On</p>
Display Brightness	<p>Set the brightness of the touch panel.</p> <p>Value: 1 (Darker), 2, 3, 4, 5 (Lighter)</p>
Drum Refresh 1	<p>Remove image blur from the printout. It takes about 80 seconds. The time required may vary depending on the operating environment.</p> <p>➔ Drum Refresh 1 (page 10-30)</p> <p> NOTE</p> <p>Drum Refresh 1 cannot be performed while printing. Execute Drum Refresh 1 after the printing is done.</p>
Drum Refresh 2	<p>Remove white dots from the printout. It takes about 80 seconds. To use [Drum Refresh 2], load A4 or Letter size paper into the Multipurpose tray.</p> <p>When you run [Drum Refresh 2], the machine sometimes makes a vibrating sound for about 80 seconds until drum refreshing is completed. The toner soiling on the ejected paper is normal and does not indicate a fault.</p> <p>➔ Drum Refresh 2 (page 10-30)</p> <p> NOTE</p> <p>Drum Refresh 2 cannot be performed while printing. Execute Drum Refresh 2 after the printing is done.</p>
Auto Drum Refresh	<p>This machine automatically performs Auto Drum Refresh to keep the best image quality by monitoring its peripheral temperature and humidity. Auto Drum Refresh is performed when the machine is powered on or recovered from Energy Saver mode.</p> <p>Although you can select the time to perform Auto Drum Refresh, normally set it to [Normal]. If [Off] or [Short] is selected, the best image quality may not be kept.</p> <p>Value</p> <p>Off: The Auto Drum Refresh will not be performed.</p> <p>Short: Perform Auto Drum Refresh as Short.</p> <p>Normal: Perform Auto Drum Refresh as Standard.</p> <p>Long: Perform Auto Drum Refresh as Long.</p>
Service Setting	<p>Settings for machine maintenance and inspection. This menu is primarily used by service technicians to perform maintenance.</p>

9 User Authentication and Accounting (User Login, Job Accounting)


This chapter explains the following topics:

Overview of User Login Administration	9-2
Enabling User Login Administration	9-3
Setting User Login Administration	9-4
Authentication Security	9-4
Adding a User (Local User List)	9-6
Changing User Properties	9-9
User Login Administration for Printing	9-13
To Manage the Users to Scan Using TWAIN	9-15
To Manage the Users to Scan Using WIA	9-16
To Manage the Users that Send Faxes from a PC	9-17
Local Authorization	9-18
Group Authorization Settings	9-19
Guest Authorization Set.	9-22
Obtain NW User Property	9-25
Simple Login Settings	9-27
ID Card Settings	9-30
PIN Code Authorization	9-31
Using User Login Administration	9-32
Login/Logout	9-32
Overview of Job Accounting	9-33
Enabling Job Accounting	9-34
Job Accounting Access	9-35
Setting an Account	9-36
Adding an Account	9-36
Restricting the Use of the Machine	9-37
Editing an Account	9-38
Deleting an Account	9-39
Job Accounting for Printing	9-40
Job Accounting for Scan Using TWAIN	9-41
Job Accounting for Scan Using WIA	9-42
Job Accounting for the FAX Transmitted from a Computer	9-43
Configuring Job Accounting	9-44
Default Setting	9-44
Counting the Number of Pages Printed	9-45
Print Accounting Report	9-46
Using Job Accounting	9-47
Login/Logout	9-47
Unknown User Settings	9-48
Unknown ID Job	9-48
Registering Information for a User whose ID is Unknown	9-49


Overview of User Login Administration

User login administration specifies how the user access is administered on this machine. Enter a correct login user name and password for user authentication to login.


- 1 Enable User Login Administration ([page 9-3](#))

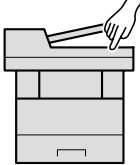

- 2 Set the user ([page 9-6](#))

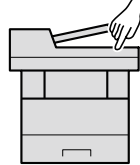

- 3 Enter the login user name and password and execute the job ([page 9-32](#))

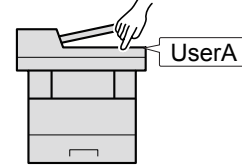

Access are in three levels - "User", "Administrator", and "Machine Administrator". The security levels can be modified only by the "Machine Administrator".


To manage the job account from PC

In addition to the above settings, the following are necessary to manage the job account from PC.

To Manage the Users to Print from PCs

Printer driver settings are necessary to manage the users that print on the machine from PCs.

- 1 Set the User Login Administration on the printer driver ([page 9-13](#))
- 2 Print

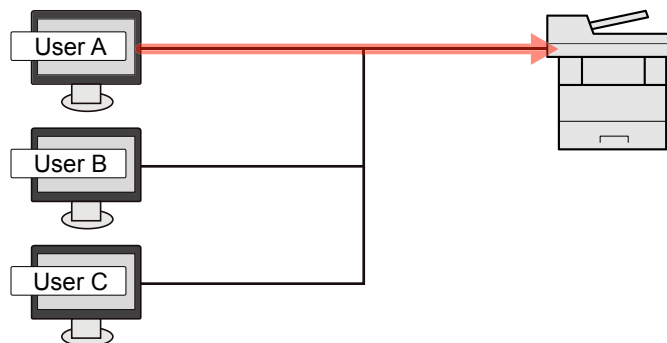

To Manage the Users to Use TWAIN for Scanning

TWAIN driver settings on the PC are necessary to manage the users that use TWAIN for scanning.

- ➔ [To Manage the Users to Scan Using TWAIN \(page 9-15\)](#)

To Manage the Users to Use WIA for Scanning

WIA driver settings on the PC are necessary to manage the users that use WIA for scanning.

- ➔ [To Manage the Users to Scan Using WIA \(page 9-16\)](#)

To Manage the Users to Send Faxes from a PC

FAX driver settings on the PC are necessary to manage the users that send faxes from a PC.

- ➔ [To Manage the Users that Send Faxes from a PC \(page 9-17\)](#)

Enabling User Login Administration

This enables user login administration. Select one of the following authentication methods:

Item	Descriptions
Local Authentication	User authentication based on user properties on the local user list stored in the machine.
Network Authentication	User authentication based on Authentication Server. Use a user property stored in Authentication Server to access the network authentication login page.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select **[Login]**. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [User Login Setting] > [User Login]

2 Configure the settings.

- 1 Select **[Local Authentication]** or **[Network Authentication]**.

Select **[Off]** to disable user login administration.

If you select **[Network Authentication]**, enter the host name (256 characters or less) and domain name (256 characters or less) for the Authentication Server. Select **[NTLM]**, **[Kerberos]** or **[Ext.]** as the server type.

When selecting **[Ext.]** as the server type, enter the port number.

NOTE

- Selecting **[Domain]** displays the domain registration list.
- Enter the domain name. Up to 10 domain names can be registered.

- 2 "Do you want to add a new function to the home screen?" screen appears. To display a new function on the Home screen, select **[Yes]** and specify the position in which you want to display the icon of registered function.

➔ [Available Functions to Display on Desktop \(page 2-20\)](#)

NOTE

If the login user name and password are rejected, check the following settings.

- Network Authentication setting of the machine
- User property of the Authentication Server
- Date and time setting of the machine and the Authentication Server

If you cannot login because of the setting of the machine, login with any administrator registered in the local user list and correct the settings.

Setting User Login Administration

This registers, alters and deletes users and configures the settings for User Login Administration.

Authentication Security

If user authentication is enabled, configure the user authentication settings.

User Account Lockout Setting

You can prohibit the use of a user account if an incorrect password is entered repeatedly to login with that account.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

 **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.


The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [User Login Setting] > [Authentication Security] > [User Account Lockout Settings]

2 Configure the settings.

The following settings can be selected.

Item	Descriptions
Lockout	Select whether or not account lockout policy is enabled. Value: Off, On
Lockout Policy	Specify the conditions and the extent to which the account lockout is applied. Value Number of Retries until Locked: Specify how many login retries are allowed until the account is locked out. (1 to 10 times) Lockout Duration: Specify how long the account is to be locked out until it is unlocked. (1 to 60 minutes) Lockout Target Specify the extent to which the account lockout is applied. You can select from [All] or [Remote Login Only]. Remote Login Only locks out all operations from outside the operation panel.
Locked out Users List	Displays a list of locked out users. You can unlock a user by selecting the user in the list, and selecting [Unlock].  NOTE This function is displayed when account lockout policy is enabled.

Password Policy Settings

You can prohibit the setting and use of passwords that do not comply with the password policy.

Setting the Password Policy makes it more difficult to break the password.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 [User Login Setting] > [Authentication Security] > [Password Policy Settings]

2 Configure the settings.

The following settings can be selected.

Item	Descriptions
Password Policy	Select whether or not password policy is enabled. Value: Off, On
Minimum Password Length	Set the minimum password length of characters for password. Value: Off, On (1 to 64 characters)
Password Complexity	Set the password complexity. Value No more than two consecutive identical char: Off, On At least one uppercase letter (A-Z): Off, On At least one lowercase letter (a-z): Off, On At least one number (0-9): Off, On At least one symbol: Off, On
Maximum Password Age	Set the maximum password age. Value: Off, On (1 to 180 days)
Policy Violated User List	List of users do not meet password policy requirements.

Adding a User (Local User List)

This adds a new user. You can add up to 100 users (including the default login user name).

NOTE

By default, one of each default user with machine administrator rights and administrator privileges is already stored. Each user's properties are:

Machine Administrator

User Name: DeviceAdmin

Login User Name: 6000

Login Password: 6000

Access Level: Machine Administrator

Administrator

User Name: Admin

Login User Name: Admin

Login Password: Admin

Access Level: Administrator

* Upper case and lower case letters are distinguished (case sensitive).

It is recommended to periodically change the user name, login user name and login password regularly for your security.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 [User Login Setting] > [Local User List] > [+]

2 Enter the user information.

Select [Next].

The table below explains the user information to be registered.

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters).
Login User Name	Enter the login user name to login (up to 64 characters). The same login user name cannot be registered.
Access Level	Select "Administrator" or "User" for user access privileges.



NOTE

For details on entering characters, refer to the the following:

➔ [Character Entry Method \(page 11-10\)](#)

3 Check the user information.

Change or add information as needed.

Item	Descriptions
User Name ^{*1}	Enter the name displayed on the user list (up to 32 characters).
Login User Name ^{*1}	Enter the login user name to login (up to 64 characters). The same login user name cannot be registered.
Login Password	Enter the password to login (up to 64 characters). Reenter the same password for confirmation and select the [OK] key.
Account Name	<p>Add an account where the user belongs. The user, who registered his/her account name, can login without entering the account ID.</p> <p>➔ Overview of Job Accounting (page 9-33)</p> <p> NOTE</p> <p>Select [Menu] > [Search (Name)] or [Search (ID)] to search by account name or account ID.</p> <p>Select [Menu] > [Sort (Name)] or [Sort (ID)] to sort the account list.</p>
E-mail Address	The user can register his/her E-mail address. The registered address will be automatically selected for subsequent operations that need any E-mail function.
Access Level ^{*1}	Select "Administrator" or "User" for user access privileges.
ID Card Information	<p>Register ID card information.</p> <p>Place the ID card on the ID card reader, and select [Read].</p> <p> NOTE</p> <p>This function is displayed when the optional ID Card Authentication Kit is activated.</p> <p>➔ Card Authentication Kit(B) "Card Authentication Kit" (page 11-4)</p>

*1 Mandatory at user registration.

Item	Descriptions
My Panel	You can register the language selection, initial screen, and shortcut settings for each user. Settings registered here can be applied simply by logging in.
Local Authorization *1	<p>Set usage authority for each user.</p> <p>The following restriction items are available:</p> <p>Printer: Select whether or not use of the print function of the printer is prohibited.</p> <p>Applicable print functions are as follows:</p> <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC <p>Copy: Select whether or not use of the copy print function is prohibited.</p> <p>Duplex Restriction: Select whether only duplex printing is allowed.</p> <p>Combine Restrict.: Specify whether only Combine is allowed.</p> <p>EcoPrint Restriction: Specify whether only EcoPrint is allowed.</p> <p>Send: Select whether or not use of the send function is prohibited.</p> <p>FAX Transmission: Select whether or not use of the fax send function is prohibited.</p> <p>Storing in Box: Select whether or not use of the box store function is prohibited.</p> <p>Storing in Memory: Select whether or not use of the USB drive store function is prohibited.</p>

*1 Displayed when Local Authorization is enabled.

➔ [Local Authorization \(page 9-18\)](#)



NOTE

For details on entering characters, refer to the the following:

➔ [Character Entry Method \(page 11-10\)](#)

4 Select [Save].

A new user is added on the local user list.



NOTE

If simple login is enabled, a confirmation screen appears when new registration is finished asking if you will configure simple login settings. To configure simple login settings, select [Yes]. If you select [No], you will return to the user list screen.

For the procedure for configuring simple login settings, refer to the following:

➔ [Simple Login Settings \(page 9-27\)](#)

Changing User Properties

User properties can be changed. Types of user properties that could be changed may be different depending on user access privilege.

NOTE

To change the user information of the machine administrator, you must log in with machine administrator authority. You can only view user information if you log in as a regular user.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

For a user with administrator rights who logs in

User properties can be changed and users can be deleted. The items, which can be added, are all able to be changed.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.


Login User Name: 6000

Login Password: 6000

- 2 [User Login Setting] > [Local User List]

2 Change the user properties.

Changing user properties

- 1 Select [] for the user to edit.



NOTE

- To sort the user list, select [Menu] > [Sort (User Name)] and [Sort (Login User Name)].
- To search by name or login user name, select [Menu] > [Search (User Name)] or [Search (Login User Name)].

- 2 Refer to step 3 of "Adding a User (Local User List)" to change a user property.


➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

3 [Save] > [Yes]

The user information is changed.

Deleting a user

1 Select the user to delete.

2 [] > [Yes]

The selected user will be deleted.



NOTE

The default user with machine administrator rights cannot be deleted.

To change the user information of logged in user (User Property)

These users can partially change their own user properties including user name, login password, E-mail address, and Simple Login.

Although "Login User Name", "Access Level", or "Account Name" cannot be changed, the users can check the present status.




1 Display the screen.


[System Menu/Counter] key > [User Property]

2 Change the user properties.

1 Refer to step 3 of "Adding a User (Local User List)" to change a user property.

➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

Item	Description
User Name	Changes the name shown on the user list. Up to 32 characters can be entered.
Login User Name	Displays the login user name that is entered at login.
Login Password	Changes the password that is entered at login. Up to 64 characters can be entered.
Access Level	Displays the user's access level.
Account Name	Displays the account where the user belongs.
Maximum Password Age	Displays the term of validity of the login password.  NOTE This function does not appear when Password Policy is set to [Off] or the term of validity of the password is set to [Off] .
E-mail Address	Changes the user's e-mail address. Up to 256 characters can be entered. If you log in as a user and [New Destination Entry] is set to [Prohibit] , you can only check the e-mail address.
Authorization Rules	Displays the usage restriction that is set for the logged in user.  NOTE [Job Accounting] shows the account name set for the logged in user and the usage restrictions that are set for that account. This function appears when job accounting is set to [On] . For information on job accounting, refer to the following: ➔ Job Accounting Access (page 9-35)
ID Card Information	Displays the ID card information of the logged in user.  NOTE This function is displayed when the optional ID Card Authentication Kit is activated. ➔ Card Authentication Kit(B) "Card Authentication Kit" (page 11-4) This function does not appear when the server type is set to [Ext.] in Network Authentication, and logged in with the user account certificated in the server specified as the [Ext.] server type.

Item	Description
Simple Login	When simple login is enabled, changes associated settings.  NOTE This function does not appear when Simple Login is set to [Off] or the user is not registered in Simple Login.
My Panel	Register the language, default screen and shortcut for each user. Once registered, the setting will be applied simply by login. Network users are not displayed.

2 Select **[Save]**.

The user information is changed.

User Login Administration for Printing

It is possible to manage the users that print on this machine from a PC.

Setting Printer Driver

To manage the users that print on this machine from a PC, the following settings are necessary in the printer driver. Instructions are based on interface elements as they appear in Windows 10.

1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, and **[View devices and printers]**.


NOTE

- In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, and then **[Devices and Printers]**.
- In Windows 7, click **[Start]** button on the Windows, and then click **[Devices and Printers]**.

- 2 Right-click the printer driver icon of the machine, and click the **[Printer properties]** menu of the printer driver.
- 3 Click **[Administrator]** on the **[Device Settings]** tab.

2 Configure the settings.

- 1 Select **[User Login]** on the **[User Login]** tab.

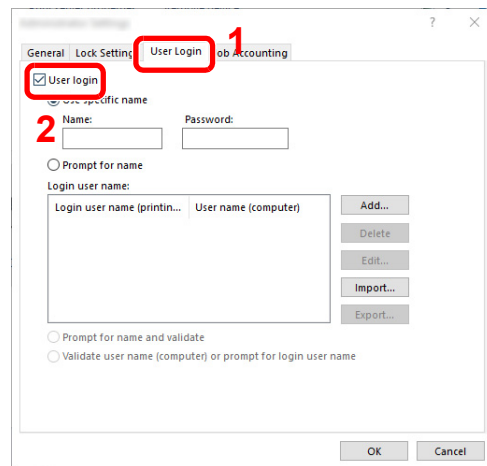

2 Set the User Login Administration.

[Use specific name]: This option can be used to specify a user name and password to use the same User login for every print job. If this option is selected, the user does not have to type the name and password for each print job.

[Prompt for name]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password must be entered each time a printing is attempted.

[Prompt for name and validate]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password stored in the Login user name list needs to be entered. The user name and password must be entered each time a printing is attempted.

[Validate user name (computer) or prompt for login user name]: When printing, the Windows user name is searched in the "Login user names" and printing is possible if the name is registered. If the name is not registered, the printing will be canceled for users with only user authority. If the user has administrator privileges, the screen to enter the user name and password will appear.

3 Click **[OK]**.



NOTE

For other settings of job accounting, refer to the following:

➔ **Printer Driver User Guide**

To Manage the Users to Scan Using TWAIN

It is possible to manage the users that scan using TWAIN.

Setting TWAIN Driver

To manage the users that scan using TWAIN, the following settings are necessary in the TWAIN driver. Instructions are based on interface elements as they appear in Windows 10.


1 Display the screen.

- 1 Click the search box in the taskbar, and type "TWAIN Driver Setting" in there. Select **[TWAIN Driver Setting]** in the search list. TWAIN Driver screen is displayed.

NOTE


- In Windows 8.1, click **[Search]** in charms, and enter "TWAIN Driver Setting" in the search box. Click **[TWAIN Driver Setting]** in the search list then the TWAIN Driver Setting screen appears
- In Windows 7, select **[Start]** button on the Windows, **[All Programs]**, **[Kyocera]** and then **[TWAIN Driver Setting]**.

- 2 Select the machine, and click **[Edit]**.

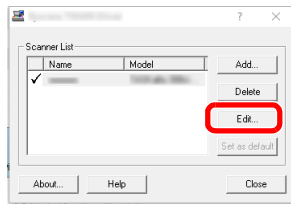

2 Configure the settings.

- 1 Click **[User Authentication Settings]**.
- 2 Select the checkbox beside **[Authentication]**, and enter Login user name and Password.

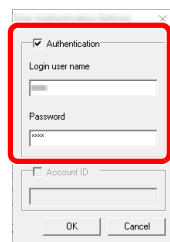

- 3 Click **[OK]**.

To Manage the Users to Scan Using WIA

It is possible to manage the users that scan using WIA.

Setting WIA Driver

To manage the users that scan using WIA, the following settings are necessary in the WIA driver. Instructions are based on interface elements as they appear in Windows 10.


1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**. Click the search box in the Control Panel, and type "Scanner" in there. Select **[View scanners and cameras]** in the search list. The Scanners and Cameras screen is displayed.

NOTE


- In Windows 8.1, click **[Search]** in charms, and enter "Scanner" in the search box. Click **[View scanners and cameras]** in the search list then the Scanners and Cameras screen appears.
- In Windows 7, click **[Start]** button on the Windows and enter **[Scanner]** in **[Program and File Search]**. Click **[View scanners and cameras]** in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and press **[Properties]**.

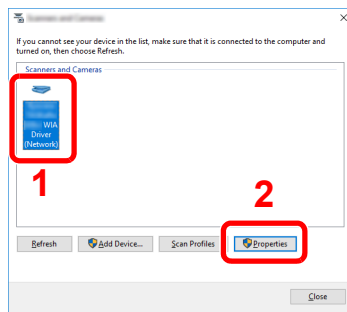

2 Configure the settings.

- 1 Select the checkbox beside **[Authentication]** on the **[Settings]** tab, and enter Login user name and Password.

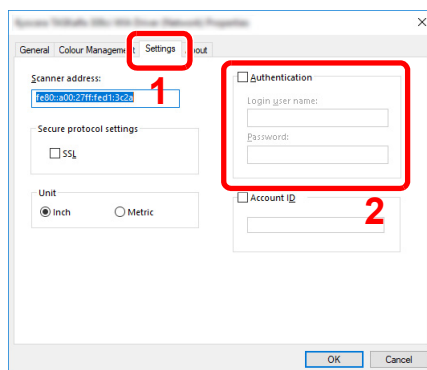

- 2 Click **[OK]**.

To Manage the Users that Send Faxes from a PC

It is possible to manage the users that send faxes from a PC.

Setting FAX Driver

To manage the users that send faxes from a PC, the following settings are necessary in the FAX driver. Instructions are based on interface elements as they appear in Windows 10.

1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, and **[View devices and printers]**.


NOTE

- In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, and then **[Devices and Printers]**.
- In Windows 7, click **[Start]** button on the Windows, and then click **[Devices and Printers]**.

- 2 Right-click the FAX driver icon of the machine, and click the **[Printer properties]** menu of the FAX driver.
- 3 Click the **[Preferences]** button on the **[General]** tab.
- 4 Click **[FAX TX Setting]** on the **[FAX Setting]** tab.

2 Configure the settings.

- 1 Select **[User Login]** on the **[Authentication]** tab.

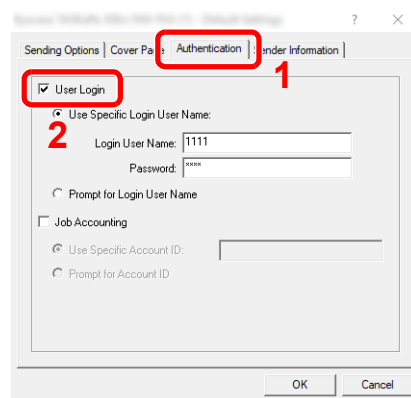

- 2 Set the User Login Administration.

[Use Specific Login User Name]: This option can be used to specify a user name and password to use the same User login for every FAX job. If this option is selected, the user does not have to type the name and password for each FAX job.

[Prompt for Login User Name]: A screen for entering the user name and password will be displayed when attempting a transmission. The user name and password must be entered each time a transmission is attempted.

- 3 Click **[OK]**.

Local Authorization

Select whether or not to use Local Authorization.

NOTE

When using Local Authorization, the user authentication type must be set to **[Local Authentication]**.

➔ [Enabling User Login Administration \(page 9-3\)](#)

1 Display the screen.

- 1 **[System Menu/Counter] key > [User Login/Job Accounting]**

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select **[Login]**. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 **[User Login Setting] > [Local User Authorization]**

2 Select **[Off]** or **[On]**.

Group Authorization Settings

Set restrictions of the machine usage by each individual group registered in the authentication server.

NOTE

To use the group authorization settings, **[Network Authentication]** must be selected for the authentication method in "Enabling User Login Administration". Select "On" for "LDAP" in "Protocol Settings".

- ▶ [Enabling User Login Administration \(page 9-3\)](#)
[Protocol Settings \(page 8-32\)](#)

Group Authorization

Use the group authorization.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select **[Login]**. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name:	6000
Login Password:	6000

- 2 [User Login Setting] > [Group Authorization Set.] > [Group Authorization]

2 Select **[On]**.

Group List (Up to 20)

Register the groups that are restricted the machine usage. Other users and groups belong to "Others".

The table below explains the group information to be registered.

Item	Descriptions
Group ID^{*1}	Enter the ID displayed on the group list (between 1 and 4294967295).
Group Name	Enter the name displayed on the group list (up to 32 characters).
Access Level	Select [Administrator] or [User] for group access privileges.
Printer	Select whether or not to reject usage of print functions for the printer. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC
Copy	Select whether or not to reject usage of copy functions.
Duplex Restriction	Select whether only duplex printing is allowed.
Combine Restrict.	Specify whether only Combine is allowed.
EcoPrint Restriction	Specify whether only EcoPrint is allowed.
Send	Select whether or not to reject usage of the send functions.
FAX Transmission	Select whether or not to reject usage of the FAX transmissions.
Storing in Box	Select whether or not to reject usage of storing in the document boxes.
Storing in Memory	Select whether or not to reject usage of storing in the USB drive.

*1 For "Group ID", specify PrimaryGroupID assigned by Active Directory of Windows. If you are using Windows Server 2008, check Attribute Editor tab of user properties. If you are using Windows Server 2000/2003, check ADSIEdit. ADSIEdit is a support tool included on the installation DVD for Windows Server OS (under \SUPPORT\TOOLS).

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select **[Login]**. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [User Login Setting] > [Group Authorization] > [Group List] > [+]



2 Configure the settings.

- 1 Enter the group ID > **[Next]**
- 2 Enter the group name > **[Next]**



NOTE

For details on entering characters, refer to the the following:

➔ [Character Entry Method \(page 11-10\)](#)

- 3 Select the group access privileges > **[Next]**
- 4 Check the settings and change or add information as needed.

3 Register the group.

Select **[Save]**.

A new group is added on the group list.

Guest Authorization Set.

When User Login Administration is enabled, set the functions that guest users who cannot log in to the machine are allowed to use.

NOTE

To use Guest Authorization Set., User Login Administration must be enabled in "Enabling User Login Administration".

➔ [Enabling User Login Administration \(page 9-3\)](#)

Guest Authorization

Use the guest authorization.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name:	6000
Login Password:	6000

- 2 [User Login Setting] > [Guest Authorization Set.] > [Guest Authorization]

2 Select [**On**].

NOTE

If the guest authorization setting is enabled, the [**Authentication/Logout**] key must be selected when logging in.

In the guest user default settings, only monochrome copying can be used. If you wish to use a different function, log in as a user who can use that function, or change the settings in the guest properties.

Guest Property

Register guest user information and functions that are restricted.

The table below explains the user information to be registered.

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters). The default setting is "Guest User".
Access Level	The authority of the user appears. This cannot be changed.
Account Name	Add an account where the user belongs. If the user does not belong to any account, select [Other].
Authorization Rules	<p>Set usage authority for each user. The items you can restrict the access level with are as follows.</p> <p>Printer: Select whether or not use of the print function of the printer is prohibited. Applicable print functions are as follows:</p> <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report <p>Copy: Select whether or not use of the copy print function is prohibited.</p> <p>Duplex Restriction: Select whether only duplex printing is allowed.</p> <p>Combine Restrict.: Specify whether only Combine is allowed.</p> <p>EcoPrint Restriction: Specify whether only EcoPrint is allowed.</p> <p>Send: Select whether or not use of the send function is prohibited.</p> <p>FAX TX Restriction: Select whether or not use of the fax send function is prohibited.</p> <p>Storing in Box: Select whether or not use of the box store function is prohibited.</p> <p>Storing in Memory: Select whether or not use of the USB drive store function is prohibited.</p>

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 [User Login Setting] > [Guest Authorization Set.] > [Guest Property]

2 Configure the settings.

Check the settings and change or add information as needed.

3 Register the group.

Select [**Save**].

Obtain NW User Property

Set the required information to obtain the network user property from the LDAP server. The user name and E-mail address obtained with this setting is shown in the user information, the status confirmation screen, and the header of E-mail.

NOTE

To obtain the network user property from the LDAP server, **[Network Authentication]** must be selected for the authentication method in "Enabling User Login Administration". Select "On" for "LDAP" in "Protocol Settings".

➔ [Enabling User Login Administration \(page 9-3\)](#)
[Protocol Settings \(page 8-32\)](#)

The table below explains the required information to be registered.

Item	Descriptions
Server Name *1	Enter the LDAP server name or the IP address (up to 64 characters). If a server name is not entered, user information will be acquired from the server set for Network Authentication.
Port	Set the LDAP port number or use the default port 389.
Name 1 *2	Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).
Name 2 *3	Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).
E-mail Address *4	Enter the LDAP Attribute to obtain the E-mail address from the LDAP server (up to 32 characters).
Authentic at Type *5	Set the authentication method. Select [Simple] or [SASL] . After changing the setting, restart the system or turn the power off and then on.
Search Timeout	Set the amount of time to wait before time-out in seconds (from 5 to 255 seconds).

*1 If using Active Directory of Windows, the server name may be the same as the server name entered in the network authentication.

*2 If using Active Directory of Windows, displayName of Attribute may be used as "Name 1".

*3 "Name 2" can be left out. When you assign displayName in "Name 1" and department in "Name 2", and if the value of displayName is "Mike Smith" and the value of department is "Sales" in Active Directory of Windows, the user name appears as "Mike Smith Sales".

*4 If using Active Directory of Windows, mail of Attribute may be used as E-mail Address.

*5 Appears when the server type is set to "Kerberos" in "Network Authentication".

1 Display the screen.

1 **[System Menu/Counter]** key > **[User Login/Job Accounting]**

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select **[Login]**. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

2 **[User Login Setting]** > **[Obtain NW User Property]** > **[On]**

2 Configure the settings.

- 1 **[Server Name]** > Enter the LDAP server name or the IP address > **[OK]**
- 2 **[Port]** > Enter the LDAP port number > **[OK]**
- 3 **[Name 1]** > Enter the LDAP Attribute to obtain the user name to be displayed > **[OK]**
- 4 Similar to steps 3, set **[Name 2]**.
- 5 If you set the server type to "Kerberos", select **[Authentication Type]** and set the authentication method.
- 6 **[E-mail Address]** > Enter the LDAP Attribute to obtain the E-mail address > **[OK]**
- 7 Select **[Search Timeout]** to set the amount of time to wait before time-out.
- 8 Select **[+]**, **[-]** or the numeric keys to enter the time > **[OK]** > **[OK]**

Simple Login Settings

The simple login function allows users to log in simply by selecting a user name. Users must be registered in advance to use this functionality.

NOTE

- For user registration, refer to the following:
 - ➔ [Adding a User \(Local User List\) \(page 9-6\)](#)
- To use Simple Login, User Login Administration must be enabled in "Enabling User Login Administration".
 - ➔ [Enabling User Login Administration \(page 9-3\)](#)
- When the guest authorization setting is enabled, the Simple Login screen is not displayed.

Simple Login

Select whether or not simple login is enabled.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [User Login Setting] > [Simple Login Settings] > [Simple Login]

2 Select [**On**] or [**Off**].

Simple Login Setup

Register users to use simple login. You can add up to 20 users.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.


The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [User Login Setting] > [Simple Login Settings] > [Simple Login Setup]

2 Enter the user information.

- 1 Select the key to which you want to register a user.
- 2 Select [**+**].

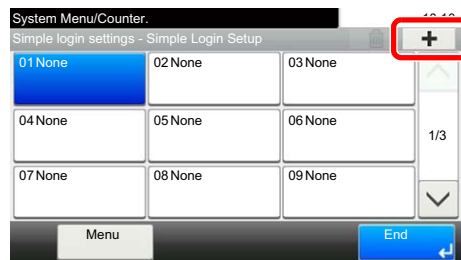

- 3 To specify the user from local users, select [**Local User**]. To specify from network users, select [**Network User**].

The procedure differs depending on the transmission method selected.


Specifying the user from local users

Select the user to be set for simple login.

NOTE

- To sort the user list, select [**Menu**] > [**Sort (Name)**] and [**Sort (Login User Name)**].
- To search by name or login user name, select [**Menu**] > [**Search (Name)**] or [**Search (Login User Name)**].

Specifying the user from network users

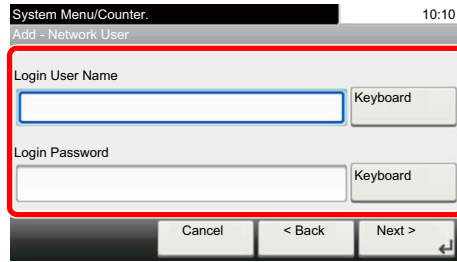

Select [**Keyboard**] for "Login User Name" and "Login Password", enter the information of the user to be registered, and select [**OK**].

If you are specifying a user for whom a domain is set in network authentication, select the "Domain" and select the domain where the user is registered.

Select [**Next**].



NOTE

For details on entering characters, refer to the the following:

➔ [Character Entry Method \(page 11-10\)](#)

4 Enter the user name to be displayed, and select [**OK**].



NOTE

For details on entering characters, refer to the the following:

➔ [Character Entry Method \(page 11-10\)](#)

5 [**Password Login**] > [**On**] or [**Off**] > [**Icon**]

6 Select the user icon to be displayed and select [**OK**].

3 Register the user.

Select [**Save**].

ID Card Settings

If ID card authentication is enabled, select the authentication type.



NOTE

This functions appears when the Card Authentication kit is activated.

➔ [Card Authentication Kit\(B\) "Card Authentication Kit" \(page 11-4\)](#)

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]



NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 [User Login Setting] > [ID Card Settings]

2 Configure the settings.

The following settings can be selected.

Item	Descriptions
Keyboard Login	When ID card authentication is enabled, select whether or not login by keyboard is allowed. Value: Permit, Prohibit
Additional Authentication^{*1}	Select whether or not to require password entry after authenticating by ID card. Value: Off, Use Password, Use PIN

^{*1} This function does not appear when the server type is set to [NTLM] or [Kerberos] in "Network Authentication".

PIN Code Authorization

NOTE

When using PIN Code Authorization, the network authentication must be enabled and **[Ext.]** must be selected for server type.

➔ [Enabling User Login Administration \(page 9-3\)](#)

1 Display the screen.

- 1 **[System Menu/Counter]** key > **[User Login/Job Accounting]**

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select **[Login]**. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 **[User Login Setting]** > **[PIN Login]**

2 Configure the settings.

- 1 Select **[Off]** or **[On]**.
- 2 Select **[OK]**.

Using User Login Administration

This section explains procedures while setting job accounting.

Login/Logout

If user login administration is enabled, the login user name and login password entry screen appears each time you use this machine.

Use the procedure below to login and logout.

Login

If the login user name entry screen appears during operations, log in by referring to the following:

➔ [Login \(page 2-27\)](#)


Logout

When the operations are complete, select the **[Authentication/Logout]** key to return to the login user name and login password entry screen.

Overview of Job Accounting

Job accounting manages the copy/print/scan/FAX count accumulated by individual accounts by assigning an ID to each account.

- 1** Enable job accounting. (Refer to [page 9-34.](#))
- 2** Setting an account. (Refer to [page 9-36.](#))
- 3** Enter the assigned account ID when performing the job. (Refer to [page 9-32.](#))
- 4** Count the number of pages copied, printed, scanned and faxed.

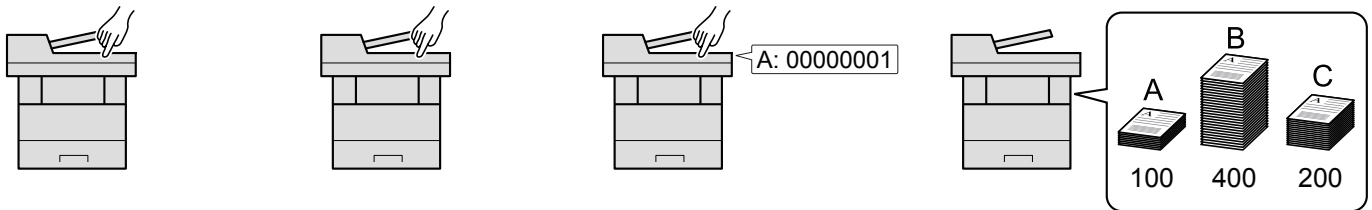


To manage the job account from PC

In addition to the above settings, the following are necessary to manage the job account from PC.

To Manage the Number of Sheets Used on Jobs Printed from a PC

To manage the number of jobs to be printed from the PC on the network, you need to configure settings by using the printer driver on the PC.

- 1** Set Job Accounting for the PC on the network by using the printer driver. (Refer to [page 9-40.](#))
- 2** Execute printing.
- 3** Count the number of pages printed.

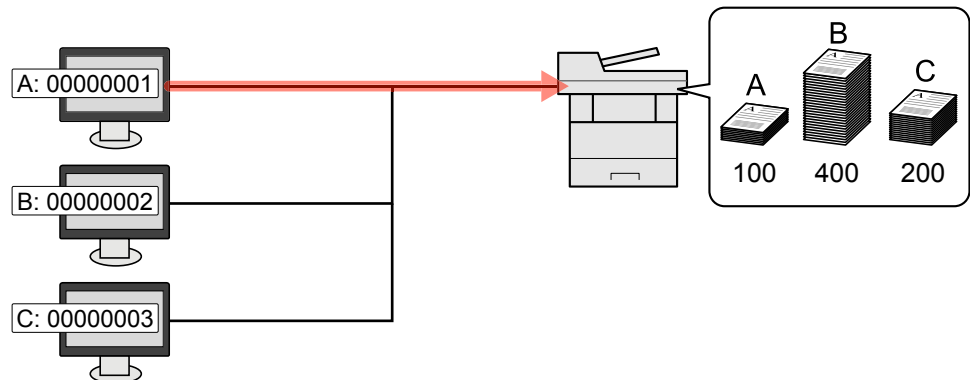

To Manage the Scan Job Account by Using TWAIN

To manage the scan job account by using TWAIN, you need to configure the TWAIN driver settings on the computer connected to the machine.

➔ [Job Accounting for Scan Using TWAIN \(page 9-41\)](#)

To Manage the Scan Job Account by Using WIA

To manage the scan job account by using WIA, you need to configure the WIA driver settings on the computer connected to the machine.

➔ [Job Accounting for Scan Using WIA \(page 9-42\)](#)

To Manage the FAX Job Transmitted from a PC

To manage the number of FAX jobs transmitted from the PC, you need to configure the settings by using the FAX Driver on the PC.

➔ [Job Accounting for the FAX Transmitted from a Computer \(page 9-43\)](#)

Enabling Job Accounting

Enable job accounting. Use the procedure below.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [Job Accounting Settings] > [Job Accounting]

2 Select [On].

NOTE

- To disable job accounting, select [**Off**].
- When the display returns to System Menu default screen, logout is automatically executed and the screen to enter the Account ID appears. To continue the operation, enter the Account ID.

Job Accounting Access

Set the job accounting access.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]



NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 [Job Accounting Settings] > [Job Accounting Access]

2 Configure the settings.

Select [**Local**] or [**Network**].

Setting an Account

You can add, change and delete an account and set the restriction for each account.

Adding an Account

Up to 100 individual accounts can be added. The following entries are required.

Item	Descriptions
Account Name	Enter the account name (up to 32 characters).
Account ID	Enter the account ID as many as eight digits (between 0 and 99999999).
Restriction	This prohibits printing/scanning or restricts the number of sheets to load. ➔ Restricting the Use of the Machine (page 9-37)

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [Job Accounting Settings] > [Accounting List] > [+]

2 Enter the account information.

- 1 Enter the account name > [Next]

NOTE

For details on entering characters, refer to the the following:

➔ [Character Entry Method \(page 11-10\)](#)

- 2 Enter the account ID > [Next]

NOTE

Any "Account ID" that has already registered cannot be used. Enter any other account ID.

- 3 Activate or deactivate restriction.

➔ [Restricting the Use of the Machine \(page 9-37\)](#)

- 4 Select [**Save**].

A new account is added on the Account List.

Restricting the Use of the Machine

This section explains how to restrict the use of the machine by account or the number of sheets available.

The items that can be restricted differ depending on whether "Individual" or "Total" is selected for "Copy/Print Count".

➔ [Copy/Print Count \(page 9-44\)](#)

Restriction Items

"Individual" selected for Copy/Printer Count"Split" selected for Copy/Printer Count

Item	Descriptions
Copy (Total)	Limits the number of sheets used for copying.
Printer (Total)	Limits the number of sheets used for printing. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC
Scan (Others)	Limits the number of sheets scanned (excludes copying).
FAX Transmission	Limits the number of sheets sent by fax.

"Total" selected for Copy/Printer Count

Item	Descriptions
Print (Total)	Limits the total number of sheets used for copying and printing.
Scan (Others)	Limits the number of sheets scanned (excludes copying).
FAX Transmission	Limits the number of sheets sent by fax.

Applying Restriction

Restriction can be applied in the following modes:

Item	Descriptions
Off	No restriction is applied.
Counter Limit	Restricts the print counter in one-page increments up to 9,999,999 copies.
Reject Usage	Restriction is applied.

Editing an Account

This changes the registered account information.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.


The factory default login user name and login password are set as shown below.


Login User Name: 6000

Login Password: 6000

- 2 [Job Accounting Settings] > [Accounting List]

2 Edit an account.

- 1 Select [] for the account name you wish to edit.

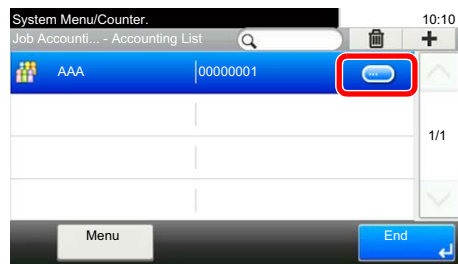

NOTE

- To search by name or login user name, select [**Menu**] > [**Search (Name)**] or [**Search (ID)**].
- To sort the user list, select [**Menu**] > [**Sort (Name)**] and [**Sort (ID)**].

- 2 Select the account information to be changed and change the account information.

- 3 [**Save**] > [**Yes**]

The account information is changed.

Deleting an Account

This deletes the account.

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.


Login User Name: 6000

Login Password: 6000

- 2 [Job Accounting Settings] > [Accounting List]

2 Delete an account.

- 1 Select the account name you wish to delete.

- 2 [] > [Yes]

The account is deleted.

Job Accounting for Printing

The number of jobs to be printed from the computer can be managed by Job Accounting.

Setting Printer Driver

To manage the number of jobs to be printed from the PC on the network, you need configure the following settings by using the printer driver on the PC. Instructions are based on interface elements as they appear in Windows 10.

1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, and **[View devices and printers]**.


NOTE

- In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, and then **[Devices and Printers]**.
- In Windows 7, click **[Start]** button on the Windows, and then click **[Devices and Printers]**.

- 2 Right-click the printer driver icon of the machine, and click the **[Printer properties]** menu of the printer driver.
- 3 Click **[Administrator]** on the **[Device Settings]** tab.

2 Configure the settings.

- 1 Select **[Job accounting]** on the **[Job Accounting]** tab.

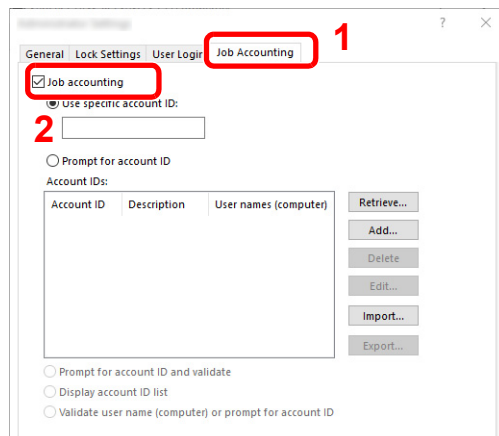

- 2 Set the Account ID.

[Use specific account ID]: Enter the Account ID. Printing will be performed using the entered Account ID. If this option is selected, the user does not have to enter the Account ID for each print job.

[Prompt for account ID]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID must be entered each time a printing is attempted.

[Prompt for account ID and validate]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID stored in the Account ID list needs to be entered. The Account ID must be entered each time a printing is attempted.

[Display account ID list]: The Account ID list is displayed when printing. The Account ID to be used needs to be selected from the list.

[Validate user name (computer) or prompt for account ID]: When printing, the Windows user name is searched in the "Account IDs" and printing is possible if the name is registered. If the Account ID is not registered, the screen for entering the Account ID will appear.

- 3 Click **[OK]**.

**NOTE**

For other settings of job accounting, refer to the following:

➔ **Printer Driver User Guide**

Job Accounting for Scan Using TWAIN

The number of jobs scanned by using TWAIN can be managed by Job Accounting.

Setting TWAIN Driver

To manage the number of jobs scanned by using TWAIN, you need to configure the following settings by using the TWAIN Driver on the computer. Instructions are based on interface elements as they appear in Windows 10.


1 Display the screen.

- 1 Click the search box in the taskbar, and type "TWAIN Driver Setting" in there. Select **[TWAIN Driver Setting]** in the search list. TWAIN Driver screen is displayed.

**NOTE**


- In Windows 8.1, click **[Search]** in charms, and enter "TWAIN Driver Setting" in the search box. Click **[TWAIN Driver Setting]** in the search list then the TWAIN Driver Setting screen appears
- In Windows 7, select **[Start]** button on the Windows, **[All Programs]**, **[Kyocera]** and then **[TWAIN Driver Setting]**.

- 2 Select the machine, click **[Edit]**.

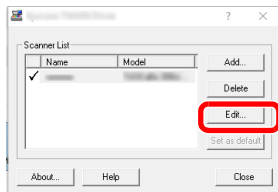

2 Configure the settings.

- 1 Click **[User Authentication Settings]**.
- 2 Select the checkbox beside **[Account ID]**, and enter the account ID.

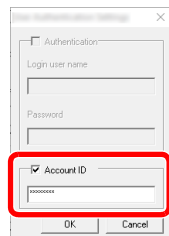

- 3 Click **[OK]**.

Job Accounting for Scan Using WIA

The number of jobs scanned by using WIA can be managed by Job Accounting.

Setting WIA Driver

To manage the number of jobs scanned by using WIA, you need to configure the following settings by using the WIA Driver on the computer. Instructions are based on interface elements as they appear in Windows 10.


1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**. Click the search box in the Control Panel, and type "Scanner" in there. Select **[View scanners and cameras]** in the search list. The Scanners and Cameras screen is displayed.

NOTE


- In Windows 8.1, click **[Search]** in charms, and enter "Scanner" in the search box. Click **[View scanners and cameras]** in the search list then the Scanners and Cameras screen appears.
- In Windows 7, click **[Start]** button on the Windows and enter **[Scanner]** in **[Program and File Search]**. Click **[View scanners and cameras]** in the search list then the Scanners and Cameras screen appears.

- 2 Select the same name as this machine from WIA Drivers, and press **[Properties]**.

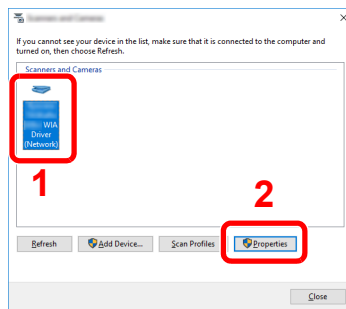

2 Configure WIA Driver.

- 1 Select the checkbox beside **[Account ID]** on the **[Settings]** tab, and enter the Account ID.

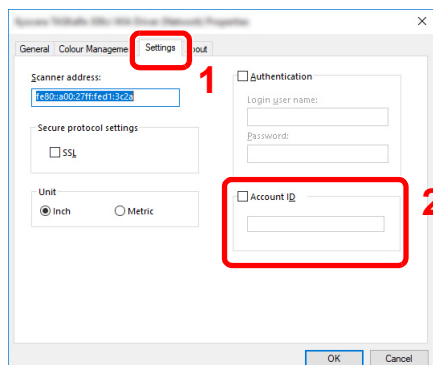

- 2 Click **[OK]**.

Job Accounting for the FAX Transmitted from a Computer

The number of FAX jobs transmitted from the computer can be managed by Job Accounting.

Setting FAX Driver

To manage the number of FAX jobs transmitted from the computer, you need to configure the following settings by using the FAX Driver on the computer. Instructions are based on interface elements as they appear in Windows 10.

1 Display the screen.

- 1 Click **[Start]** button on the Windows and then select **[Windows System]**, **[Control Panel]**, and **[View devices and printers]**.


NOTE

- In Windows 8.1, select **[Settings]** in charms on Desktop, and select **[Control Panel]**, and then **[Devices and Printers]**.
- In Windows 7, click **[Start]** button on the Windows, and then click **[Devices and Printers]**.

- 2 Right-click the FAX driver icon of the machine, and click the **[Printer properties]** menu of the FAX driver.
- 3 Click the **[Preferences]** button on the **[General]** tab.
- 4 Click **[FAX TX Setting]** on the **[FAX Setting]** tab.

2 Configure the settings.

- 1 Select **[Job Accounting]** on the **[Authentication]** tab.

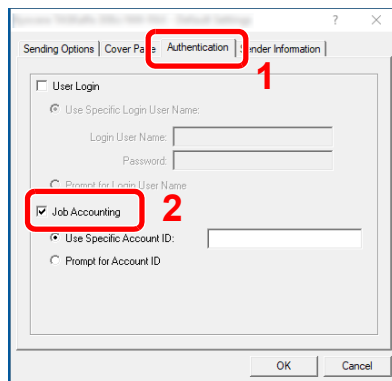

- 2 Set the Job Accounting.

[Use Specific Account ID]: This option can be used to specify an account ID to use the same Account ID for every FAX job. If this option is selected, the user does not have to enter the Account ID for each FAX job.

[Prompt for Account ID]: A screen for entering the Account ID will be displayed when attempting a transmission. The Account ID must be entered each time a transmission is attempted.

- 3 Click **[OK]**.

Configuring Job Accounting

Default Setting

Set the defaults for job accounting. To configure the settings, select the item in Default Setting and select the setting item.

[System Menu/Counter] key > [User Login/Job Accounting] > [Job Accounting Settings] > [Default Setting]

For details on each function, see the table below.

Item	Description
Apply Limit	<p>This specifies how the machine behaves when the counter has reached the limit of restriction. The table below describes the action taken.</p> <p>Value</p> <p>Immediately: Job stops when the counter reaches its limit. The next job will be prohibited in sending or in storing in the box.</p> <p>Subsequently: Printing/scanning of the job continues but the subsequent job will be rejected.</p> <p>Alert Only: Job continues while displaying an alert message.</p>
Copy/Print Count	<p>You can select how the copying and printing page counts are shown - either the total of both or each of copying and printing individually (Split). The selection may influence restriction on the count and count method.</p> <p>Value: Total, Individual</p> <p>➔ Restricting the Use of the Machine (page 9-37) Print Accounting Report (page 9-46)</p>
Counter Limit	<p>When you add a new account, you can change the default restrictions on the number of sheets used. You can set any number from 1 to 9,999,999.</p> <p>The items that can be set differ depending on whether [Individual] or [Total] is selected for [Copy/Print Count].</p> <p>➔ Copy/Print Count (page 9-44)</p>
[Individual] selected for Copy/Printer Count	
Copy (Total)	Sets the default restriction on the number of sheets used for copying.
Printer (Total)	<p>Sets the default restriction on the number of sheets used for printing.</p> <p>Applicable print functions are as follows:</p> <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC
Scan (Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
FAX Transmission	Sets the default restriction on the number of sheets used for sending faxes.
[Total] selected for Copy/Printer Count	
Print (Total)	Sets the default restriction on the total number of sheets used for copying and printing.
Scan (Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
FAX Transmission	Sets the default restriction on the number of sheets used for sending faxes.

Counting the Number of Pages Printed

This counts the number of pages printed. Counts are classified into Total Job Accounting and Each Job Accounting. A new count can also be started after resetting the count data which was stored for a certain period of time.

[System Menu/Counter] key > [User Login/Job Accounting] > [Job Accounting Settings] > [Total Accounting] or [Each Job Account]

Total Accounting

This counts the number of pages for all accounts and resets the counts for those accounts together at the same time.

Each Job Account

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

Types of the counts are as follows.


Item	Descriptions
Printed Pages	Displays the number of pages copied and printed, and the total number of pages used. You can also use [FAX], [by Duplex] and [by Combine] to check the number of pages used.
Copy (Total)	Displays the number of pages copied.
Printer (Total)	Displays the number of pages printed. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC
Copy/Print. (Total)	Displays the total number of pages used for copying and printing.
FAX	Displays the number of pages received.
Total	Displays the total number of pages used.
by Duplex	Displays the number of pages printed in [1-sided] mode, [2-sided] mode, and the total pages in both modes.
by Combine	Displays the number of pages printed in [None] (no Combine) mode, [2 in 1] mode, [4 in 1] mode, and the total pages in both modes.
Scanned Pages	Displays the number of pages scanned for copying, faxing and other functions, as well as the total number of pages scanned.
FAX TX Pages	Displays the number of pages faxed.
FAX TX Time	Displays the total duration of FAX transmissions.
Counter Reset	Resets the counter. Select [Yes] in the confirmation screen.

Print Accounting Report

The total pages counted of all relevant accounts can be printed as an accounting report.

Reports have different formats depending on how the count of copiers and printers is administered.

When "Individual" is selected for Managing the Copy/Printer Count.

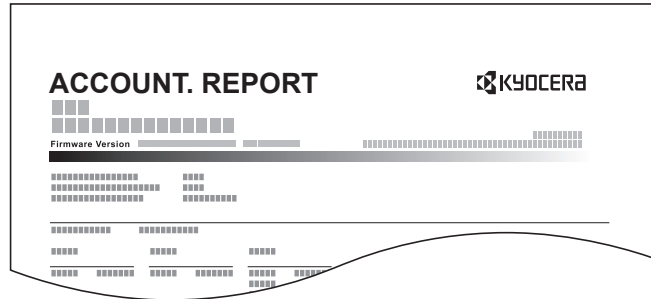

Use the procedure below to print a job accounting report.

1 Prepare paper.

Check that A4 or Letter paper is loaded in the cassette.

2 Display the screen.

[System Menu/Counter] key > [User Login/Job Accounting] > [Job Accounting Settings]



NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

3 Print the report.

[Print Accounting Report] > [Yes]

Accounting report is printed.

Using Job Accounting

This section explains procedures while setting job accounting.

Login/Logout

If job accounting is enabled, an account ID entry screen appears each time you use this machine.

Use the procedure below to login and logout.

Login

- 1 In the account ID entry screen, enter the account ID using the numeric keys and select **[Login]**.

NOTE

- If you entered a wrong character, select the **[Clear]** key and enter the account ID again.
- If the entered account ID does not match the registered ID, a warning beep will sound and login will fail. Enter the correct account ID.
- By selecting **[Check Counter]**, you can refer to the number of pages printed and the number of pages scanned.

When the screen to enter the login user name and password appears

If user login administration is enabled, the screen to enter the login user name and password appears. Enter a login user name and password to login. If the user has already registered the account information, the account ID entry would be skipped.

➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

- 2 Proceed to complete the rest of the steps.

Logout

When the operations are complete, select the **[Authentication/Logout]** key to return to the account ID entry screen.

Unknown User Settings

Unknown ID Job

This specifies the behavior for handling the jobs sent with unknown or unsend login user names or User ID. If the User Login is set to invalid and Job Accounting is set to valid, follow the procedure when the Account ID is unknown.

The setting items are as follows.

Item	Descriptions
Permit	The job is permitted to be printed.
Reject	The job is rejected (not printed).

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [Unknown User Settings] > [Unknown ID Job]

2 Configure the settings.

Select [**Permit**] or [**Reject**].

Registering Information for a User whose ID is Unknown

If you register user information for a user whose ID is unknown, you can check information on the Job Status or Job History screens. In addition, you can restrict available functions.



NOTE

This function is displayed when [Unknown ID Job] is set to [Permit].

1 Display the screen.

- 1 [System Menu/Counter] key > [User Login/Job Accounting]



NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 [Unknown User Settings] > [User Property]

2 Enter the user information.

Enter the user information > [OK]

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters).
Account Name	<p>Register an account for a user whose ID is unknown.</p> <p>➔ Overview of Job Accounting (page 9-33)</p> <p> NOTE</p> <ul style="list-style-type: none"> • Select [Menu] > [Search (Name)] or [Search (ID)] to search by account name or account ID. • Select [Menu] > [Sort (Name)] or [Sort (ID)] to sort the account list. • This is displayed when job accounting is enabled.
Authorization Rules	<p>Set usage authority for each user.</p> <p>The following restriction items are available:</p> <p>Print: Select whether or not use of the print function of the printer is prohibited.</p>

10 Troubleshooting

This chapter explains the following topics:

Regular Maintenance	10-2
Cleaning	10-2
Toner Container Replacement	10-6
Waste Toner Box Replacement	10-10
Replacing Staples	10-12
Troubleshooting	10-14
Solving Malfunctions	10-14
Responding to Messages	10-19
Adjustment/Maintenance	10-30
Clearing Paper Jams	10-31
Clearing a Staple Jam	10-39

Regular Maintenance

Cleaning

Clean the machine regularly to ensure optimum printing quality.



CAUTION

For safety, always unplug the power cord before cleaning the machine.


Glass Platen

Wipe the inside of the document processor and the glass platen with a soft cloth dampened with alcohol or mild detergent.



IMPORTANT

Do not use thinner or other organic solvents.

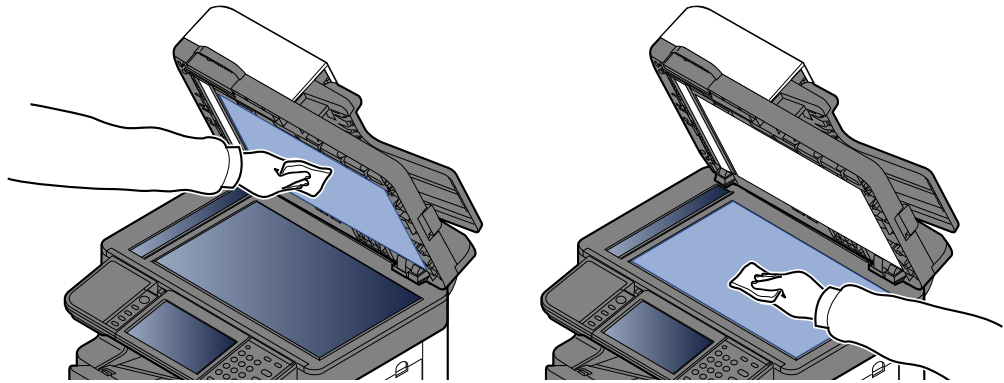

Slit Glass





When using the document processor, clean the slit glass surface and the reading guide with the dry cloth.

✔ **IMPORTANT**

Do not use water, soap or solvents for cleaning.


🔍 **NOTE**

Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.

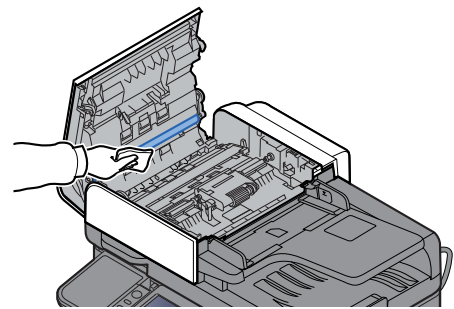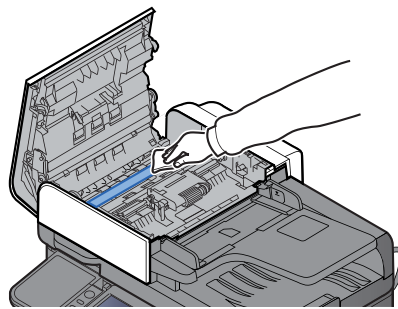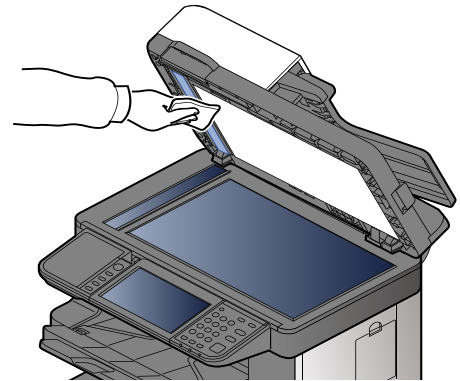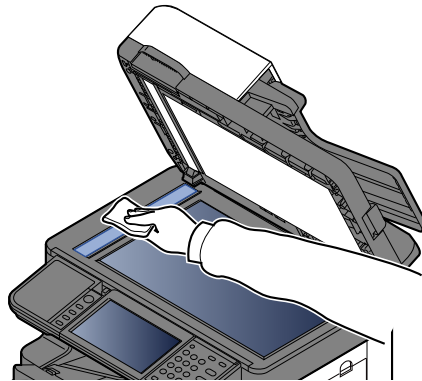


Registration Roller


1

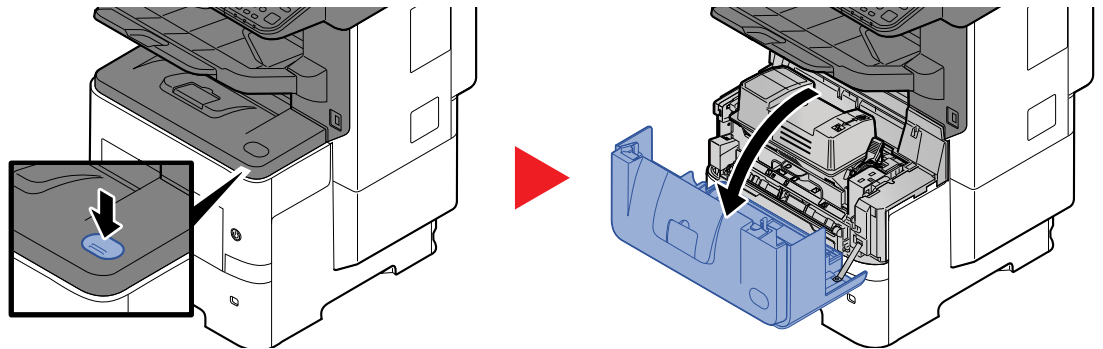

2

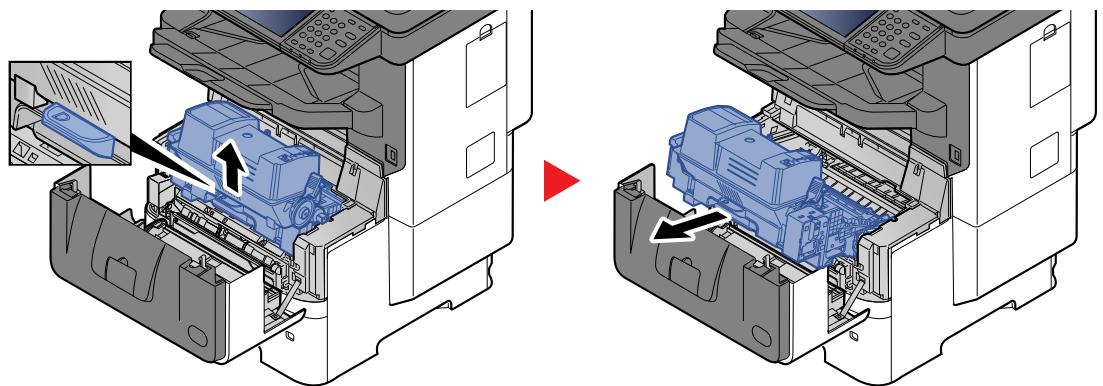


3

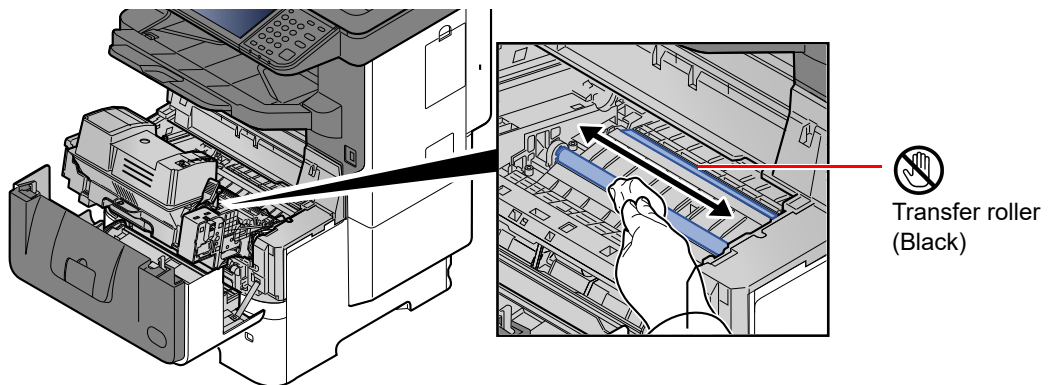

✔ **IMPORTANT**


Be careful not to touch the black transfer roller and brown transfer belt during cleaning as this may adversely affect print quality.

4

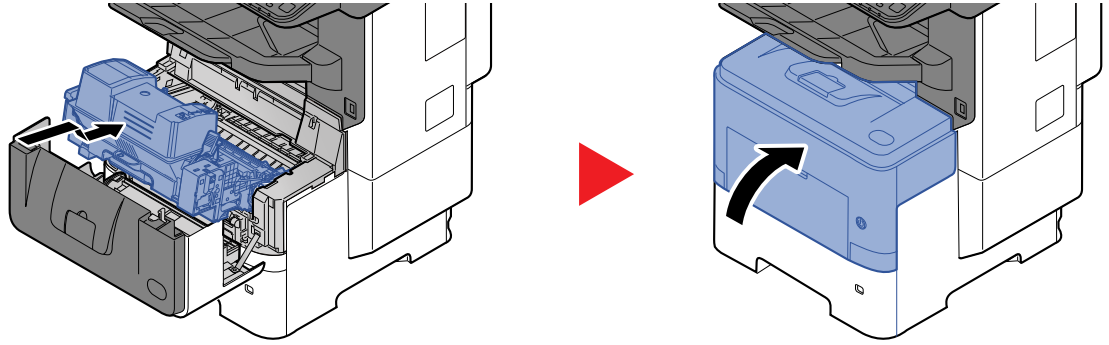

Vents

Use a lint free cloth to clean dust and dirt away from the vents.

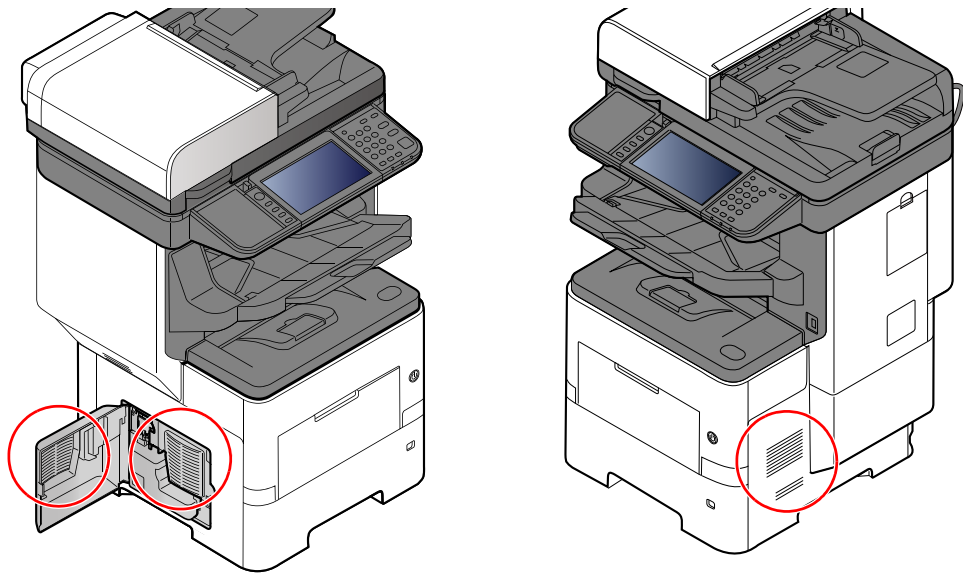

Toner Container Replacement

When toner runs low, "Toner is low. (Replace when empty.)" appears in the touch panel. Make sure you have a new toner container available for replacement.

When the touch panel displays "Toner is empty.", replace the toner.

Frequency of Toner Container Replacement

The life of the toner containers depends on the amount of toner required to accomplish your printing jobs. According to ISO/IEC 19752 and EcoPrint switched off the toner container can print as follows (A4/Letter paper is assumed):

Life of the Toner Container (Printable pages) ^{*1}
25,000 images or 40,000 images

*1 The number of prints depends on the capacity of the installed toner container.



NOTE


- The average number of pages that can be printed by the toner containers included with the machine are as follows. ECOSYS M3860idn/ECOSYS M3860idnf: 11,000 images.
- To maintain quality, we recommend using genuine Kyocera toner containers, which must pass numerous quality inspections.
- The memory chip in the toner container of this product stores information necessary for improving customer convenience, operation of the recycling system for used toner containers, and planning and development of new products. The stored information does not include information that makes it possible to identify individuals, and is only used anonymously for the above purposes.




CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


Replacing the Toner Container

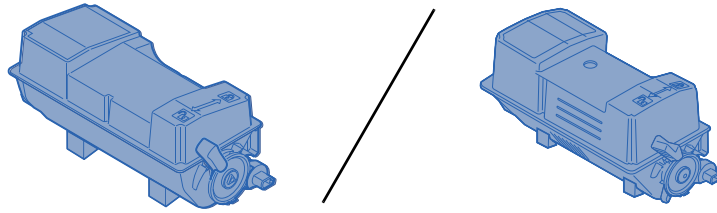


1

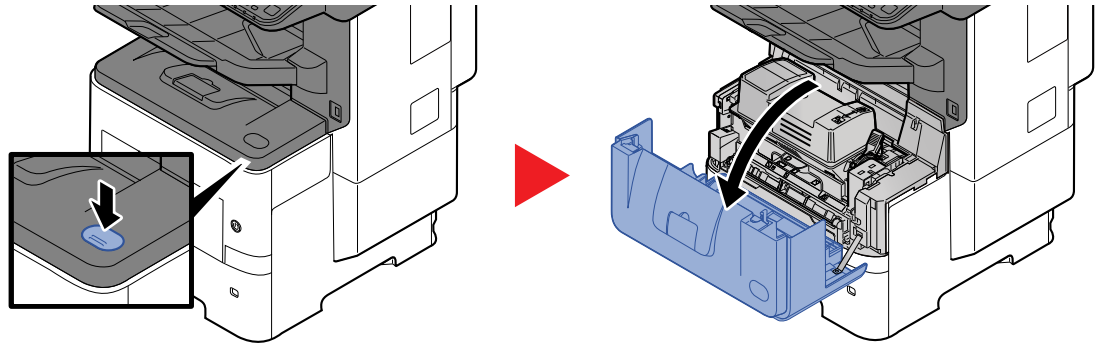

2

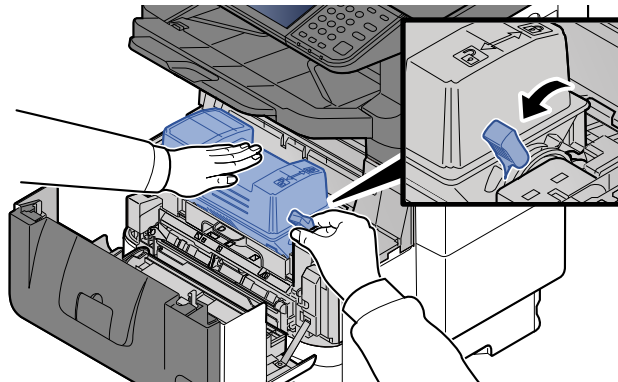


3

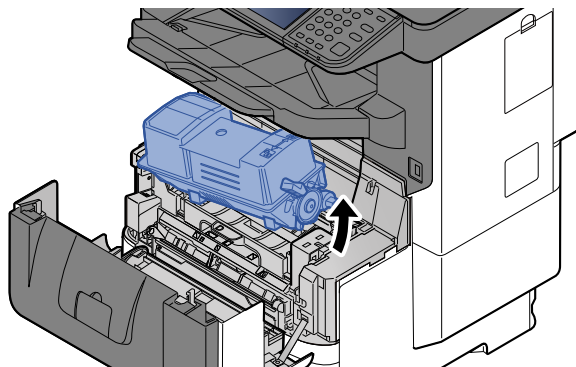


NOTE

When removing the toner container from the machine, lift up the right hand side first.

4

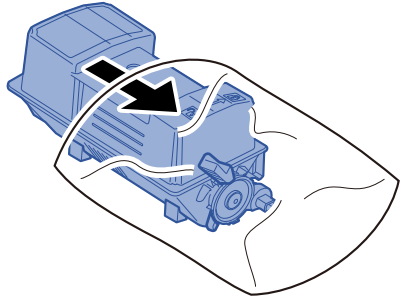


5

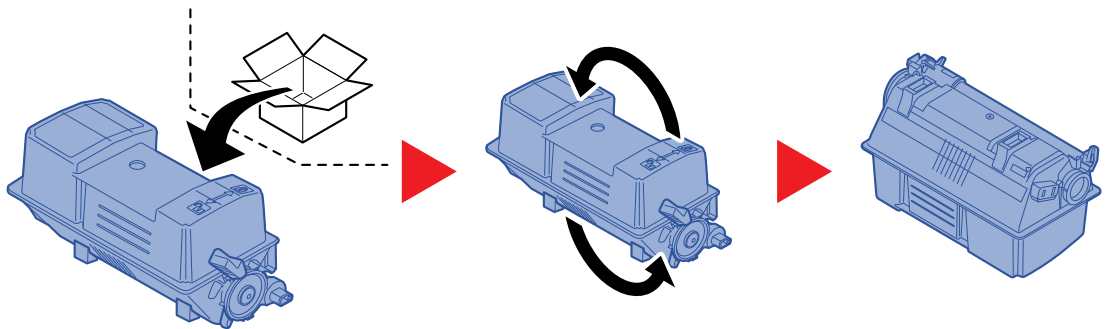


✔ IMPORTANT


Do not touch the points shown below.

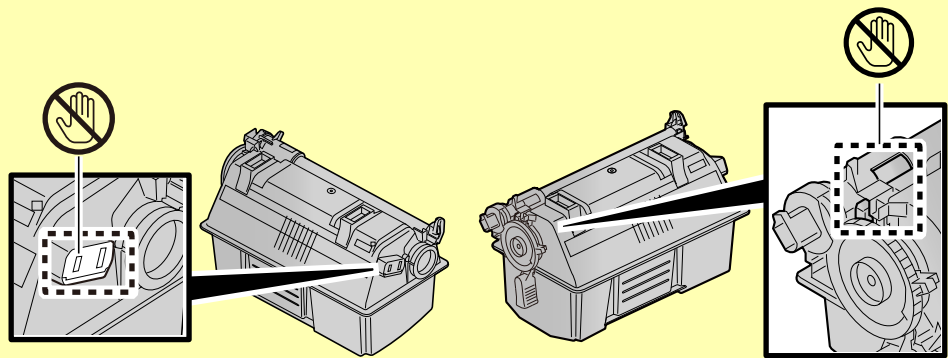


6

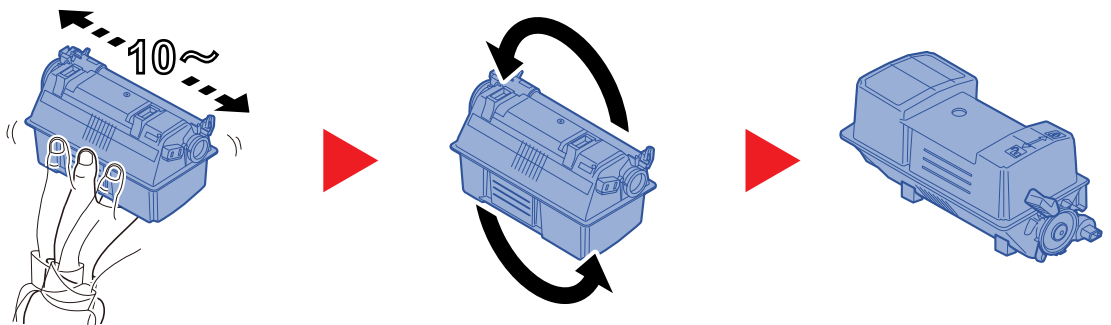


7

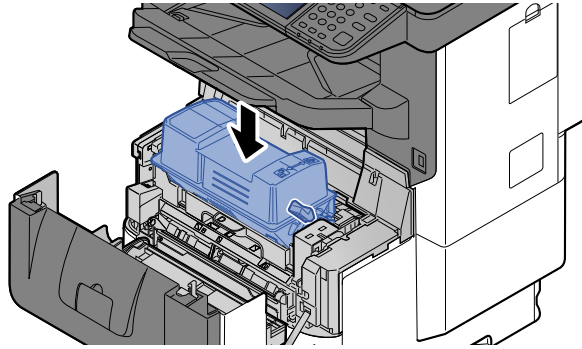

8

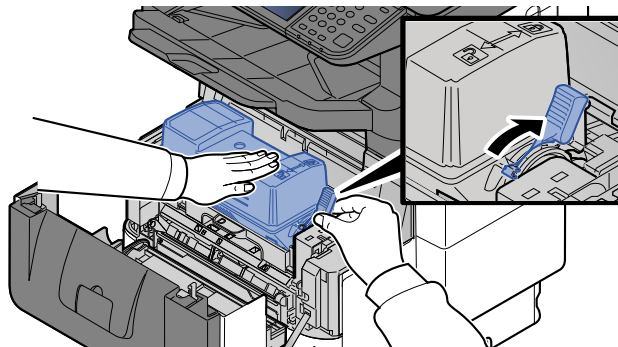

9

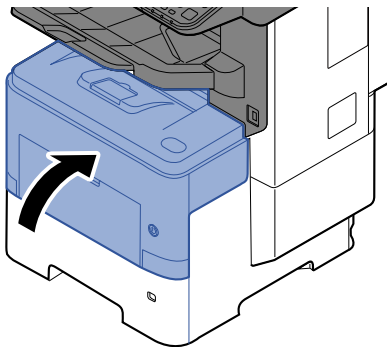

NOTE

- If the front cover does not close, check that the new toner container is installed correctly (in step 7).
- Return the exhausted toner container to your dealer or service representative. The collected toner container will be recycled or disposed in accordance with the relevant regulations.


Waste Toner Box Replacement

When the waste toner box becomes full, immediately replace the waste toner box.


CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


1

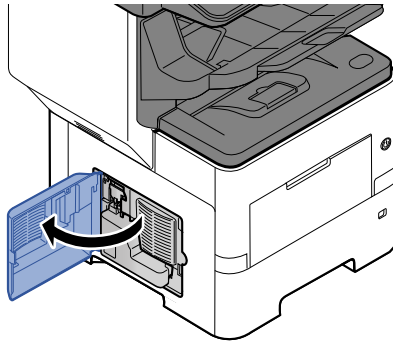


2

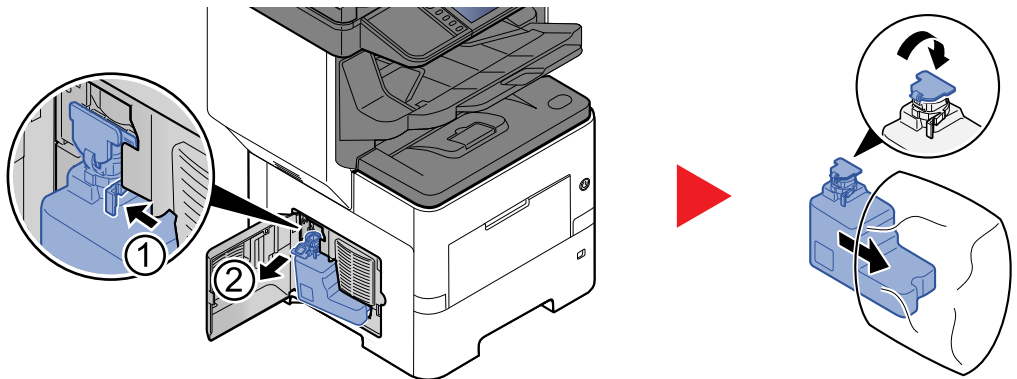


3

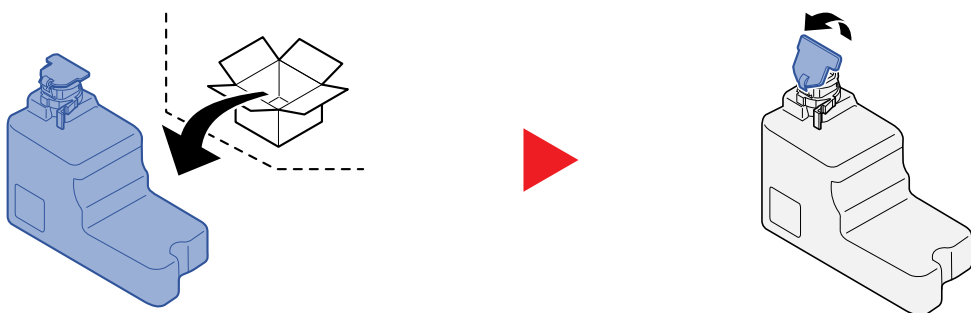

4

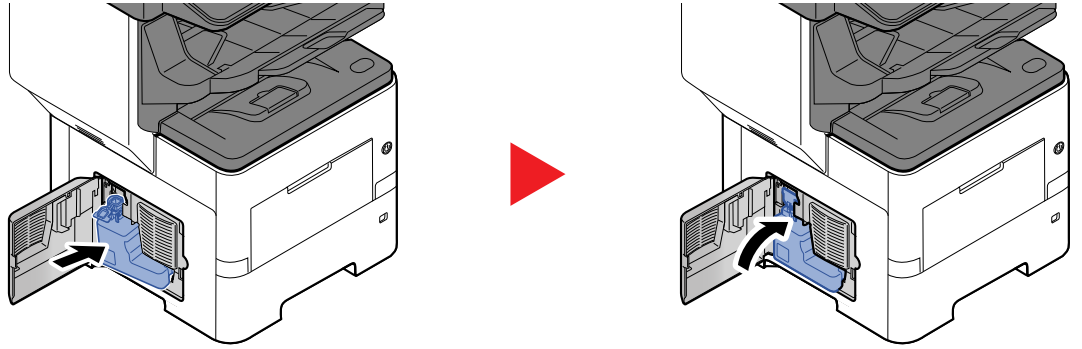

5

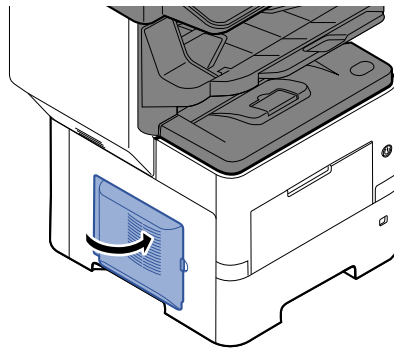

NOTE

Return the exhausted waste toner box to your dealer or service representative. The collected waste toner box will be recycled or disposed in accordance with the relevant regulations.

Replacing Staples

Add staples to the optional manual stapler.





NOTE



If the Staple Unit runs out of staples, contact your dealer or service representative.

Model without the finisher

1

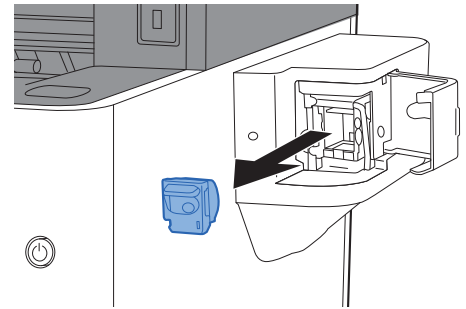
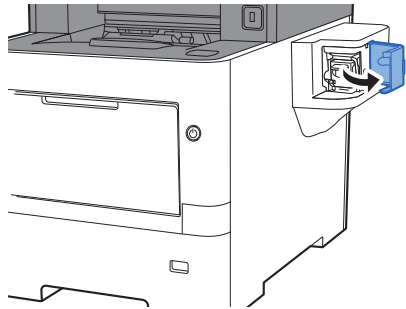


2

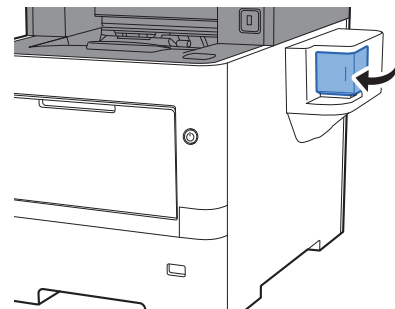
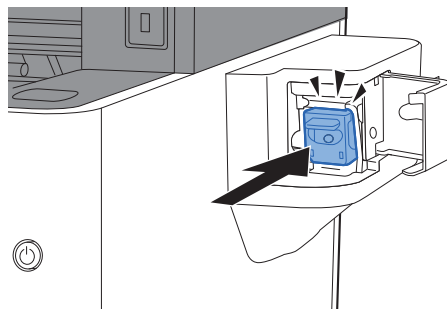


Model with the finisher



1

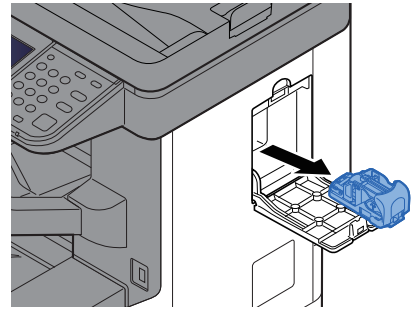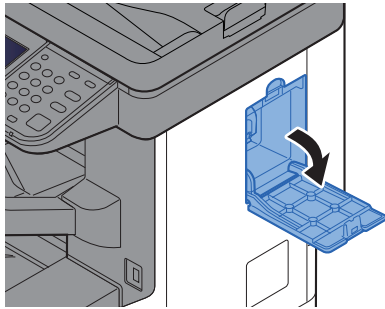



2

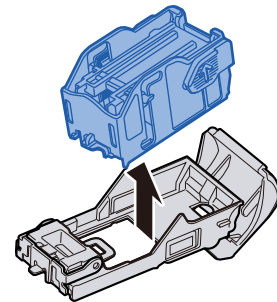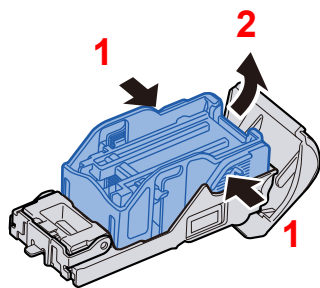

3

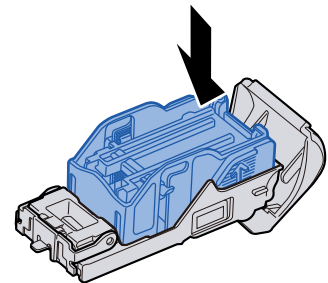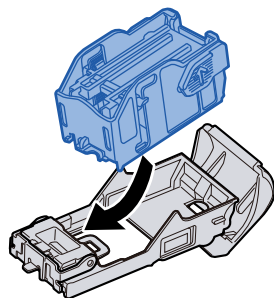

4

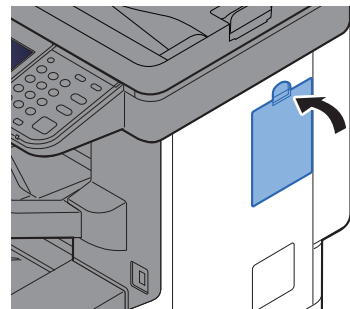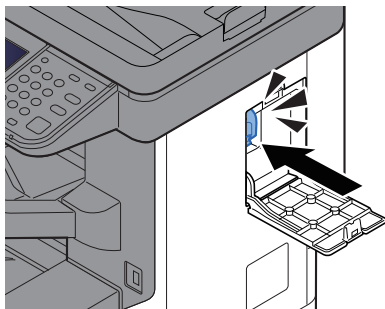

Troubleshooting

Solving Malfunctions


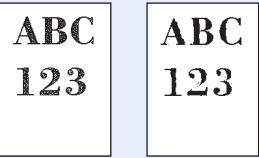
The table below provides general guidelines for problem solving.

 
 

 

If a problem occurs with your machine, look into the checkpoints and perform procedures indicated on the following pages. If the problem persists, contact your Service Representative.





 **NOTE**

   

 

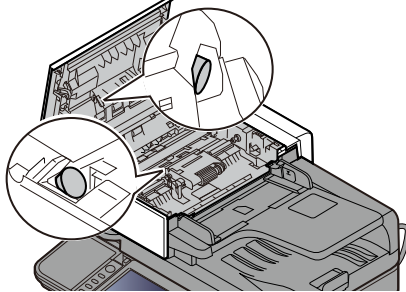
 
When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

- ➔ [Display for Device Information \(page 2-22\)](#)
- [Checking the Equipment's Serial Number \(page i\)](#)

Symptom	Checkpoints	Corrective Actions	Reference Page
An application does not start.	Is the Auto Panel Reset time short?	Set the Auto Panel Reset time to 30 seconds or more.	page 8-49
The screen does not respond when the main power switch is turned on.	Check the power cord.	Connect both ends of the power cord securely.	page 2-14
Pressing the [Start] key does not produce copies.	Is there a message on the screen?	Determine the appropriate response to the message and respond accordingly.	page 10-19
	Is the machine in Sleep mode?	Select any key on the operation panel to recover the machine from Sleep mode.	page 2-38
Blank sheets are ejected. 	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	page 5-2
		When placing originals in the document processor, place them face-up.	page 5-3
	—	Check that the settings of the application software.	—
Printouts are totally too light. 	Is the paper damp?	Replace the paper with new paper.	page 3-2
	Have you changed the density?	Select appropriate density level.	page 6-15 page 8-52
	Is the toner distributed evenly within the toner container?	Shake the toner container from side to side several times.	page 10-6
	Is EcoPrint mode enabled?	Disable [EcoPrint] mode.	page 8-15
	—	Run [Drum Refresh 1].	page 10-30
	—	Make sure the paper type setting is correct for the paper being used.	page 8-14

Symptom	Checkpoints	Corrective Actions	Reference Page
<p>Printouts are too dark even though the background of the scanned original is white.</p> 	<p>Have you changed the density?</p>	<p>Select appropriate density level.</p>	<p>page 6-15 page 8-52</p>
<p>Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly).</p> 	<p>Is the original a printed photograph?</p>	<p>Set the original image to [Photo].</p>	<p>page 6-16</p>
<p>Texts are not clearly printed.</p> 	<p>Did you choose appropriate image quality for the original?</p>	<p>Select appropriate image quality.</p>	<p>page 6-16</p>
<p>Black dots appear on the white background when white original is scanned.</p> 	<p>Is the original holder or the glass platen dirty?</p>	<p>Clean the original holder or the glass platen.</p>	<p>page 10-2</p>
<p>Printouts are fuzzy.</p> 	<p>Is the machine being used in conditions of very humid, or humidity or temperature rapidly changes?</p>	<p>Use in an environment that has suitable humidity.</p>	<p>—</p>
	<p>—</p>	<p>Run [Drum Refresh 1].</p>	<p>page 10-30</p>
<p>Images are skewed.</p> 	<p>Are the originals placed correctly?</p>	<p>When placing originals on the platen, align them with the original size indicator plates.</p>	<p>page 5-2</p>
	<p>—</p>	<p>When placing originals in the document processor, align the original width guides securely before placing the originals.</p>	<p>page 5-3</p>
	<p>Is the paper loaded correctly?</p>	<p>Check the position of the paper width guides.</p>	<p>page 3-4 page 3-11</p>

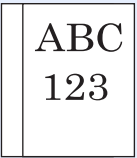Symptom	Checkpoints	Corrective Actions	Reference Page
<p>The altitude is 1000 m or higher and irregular horizontal white lines appear in the image.</p> 	—	Select the [System Menu/Counter] key > [Adjustment/Maintenance] > [Service Setting] > [Altitude Adjustment], and set to an elevation one level higher than the current setting.	—
<p>The altitude is 1000 m or higher and dots appear in the image.</p> 	—	Select the [System Menu/Counter] key > [Adjustment/Maintenance] > [Service Setting] > [Altitude Adjustment], and set to an elevation one level higher than the current setting.	—
Paper often jams.	Is the paper loaded correctly?	Load the paper correctly.	page 3-2
	Is the paper of the supported type? Is it in good condition?	Remove the paper, turn it over, and reload it.	page 3-4
	Is the paper curled, folded or wrinkled?	Replace the paper with new paper.	page 3-4
	Are there any loose scraps or jammed paper in the machine?	Remove any jammed paper.	page 10-31
<p>2 or more sheets are overlaps when ejected. (multi feed)</p> 	—	Load the paper correctly.	page 3-2
Printouts are wrinkled.	Is the paper loaded correctly?	Load the paper correctly.	page 3-2
	Is the paper damp?	Replace the paper with new paper.	page 3-2
<p>Printouts are curled.</p> 	Is the paper damp?	Replace the paper with new paper.	page 3-2
Cannot print.	Is the machine plugged in?	Plug the power cord into an AC outlet.	—
	Is the machine powered on?	Turn on the power switch.	page 2-15
	Are the USB cable and network cable connected?	Connect the correct USB cable and network cable securely.	page 2-13
	Is the print job paused?	Resume printing.	page 7-10

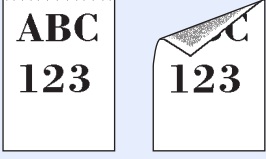Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot print with USB drive. USB drive not recognized.	Is the USB host blocked?	Select [Unblock] in the USB host settings.	page 8-43
	—	Check that the USB drive is securely plugged into the machine.	—
Printouts have vertical lines. 	Is the slit glass dirty?	Clean the slit glass.	page 10-3
Dirt on the top edge or back of the paper. 	Is the interior of the machine dirty?	Clean the interior of the machine.	page 10-4
Part of the image is periodically faint or shows white lines. 	—	Run [Drum Refresh 1].	page 10-30
Print on the back of the sheet is visible on the front. 	—	Set [Prevent Bleed-through] to [On].	page 6-19 page 8-15
[Multi originals fed at once.] is often displayed though no multi originals are not fed.	Is the sensor dirty with paper dust, etc.?	Open the document processor cover and clean two sensors shown in the figure below with dry cloth. 	—
Lines appear on ruled lines. 	Is the paper damp?	Replace the paper with new paper.	page 3-2
	—	Select the [System Menu/Counter] key > [Adjustment/Maintenance] > [Service Setting] > [Transfer Adjustment], and set to [Line Text Priority].	—


Symptom	Checkpoints	Corrective Actions	Reference Page
Part of the image has come off (poor toner fixation).	—	Select the [System Menu/Counter] key > [Adjustment/Maintenance] > [Service Setting] > [Fuser Adjustment], and set to [2].	—
Cannot send via SMB.	Is the network cable connected?	Connect the correct network cable securely.	page 2-13
	Have the network settings for the equipment been configured properly?	Configure the TCP/IP settings properly.	page 8-30
	Have the folder sharing settings been configured properly?	Check sharing settings and access privileges under the folder properties.	page 3-20
	Has the SMB protocol been set to [On]?	Set the SMB protocol setting to [On].	page 8-33
	Has [Host Name] been entered properly? *1	Check the name of the computer to which data is being sent.	page 5-23
	Has [Path] been entered properly?	Check the share name for the shared folder.	page 5-23
	Has [Login User Name] been entered properly? *1 *2	Check the domain name and login user name.	page 5-23
	Has the same domain name been used for [Host Name] and [Login User Name]?	Delete the domain name and backslash ("/") from [Login User Name].	page 5-23
	Has [Login Password] been entered properly?	Check the login password.	page 5-23
	Have exceptions for Windows Firewall been configured properly?	Configure exceptions for Windows Firewall properly.	page 3-24
	Do the time settings for the equipment, domain server, and data destination computer differ?	Set the equipment, domain server, and data destination computer to the same time.	—
	Is the screen displaying Send error?	Refer to Responding to Send Error .	page 10-27
Cannot send via the e-mail.	Is the E-mail send size limit set in the SMTP server registered on the machine?	Check the limit value is entered to "E-mail Size Limit" of [E-mail] setting in Command Center RX and change the value as necessary.	page 2-64
The machine is emitting steam in the area around the paper ejection slot.	Check the room temperature to see if it is low, or if damp paper was used.	Depending on the printing environment and the paper's condition, the heat generated during printing will cause the moisture in the paper to evaporate, and the steam emitted may look like smoke. This is not a problem, and you can continue printing. If the steam concerns you, raise the room temperature, or replace the paper with a newer, dryer paper.	—

*1 You can also enter a full computer name as the host name (for example, pc001.abcdnet.com).

*2 You can also enter login user names in the following formats:
 Domain_name/user_name (for example, abcdnet/james.smith)
 User_name@domain_name (for example, james.smith@abcdnet)

Responding to Messages

If the touch panel or the computer displays any of these messages, follow the corresponding procedure.

 **NOTE**

When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

- ➔ [Display for Device Information \(page 2-22\)](#)
- [Checking the Equipment's Serial Number \(page i\)](#)

A

Message	Checkpoints	Corrective Actions	Reference Page
Activation error.	—	Turn the main power switch off and on. If the error exists, contact administrator.	page 2-15
Add the following paper in cassette #.	Does the selected paper size matches the paper size loaded in the specified paper source?	Select [Continue] to continue printing. Select [Cancel] to cancel the job.	—
	Is the indicated cassette out of paper?	Load paper. Select [Paper Selection] to select the other paper source. Select [Continue] to print on the paper in the currently selected paper source.	page 3-2
Add the following paper in the multi purpose tray.	Does the selected paper size matches the paper size loaded in the specified paper source?	Select [Continue] to continue printing. Select [Cancel] to cancel the job.	—
	Is the indicated cassette out of paper?	Load paper. Select [Paper Selection] to select the other paper source. Select [Continue] to print on the paper in the currently selected paper source.	page 3-11


B

Message	Checkpoints	Corrective Actions	Reference Page
Box is not found.	—	The specified box cannot be found. Job is canceled. Select [End].	—
Box limit exceeded.*1	Is [End] displayed on the screen?	The specified box is full, and no further storage is available; Job is canceled. Select [End]. Try to perform the job again after printing or deleting data from the box.	—

*1 When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

- ➔ [Auto Error Clear \(page 8-51\)](#)

C

Message	Checkpoints	Corrective Actions	Reference Page
Cannot connect to Authentication Server.*1	—	Set machine time to match the server's time.	page 2-29
	—	Check the domain name.	page 9-2
	—	Check the host name.	page 9-2
	—	Check the connection status with the server.	—
Cannot duplex print on the following paper.*1	Did you select a paper size/type that cannot be duplex printed?	Select [Paper Selection] to select the available paper. Select [Continue] to print without using Duplex function.	page 6-24
Cannot perform remote printing.	—	Remote printing is prohibited. Job is canceled. Select [End].	—
Cannot print the specified number of copies.*1	—	<p>Only one copy is available. Select [Continue] to continue printing. Select [Cancel] to cancel the job.</p> <p>The machine may reproduce the same originals by arranging the following settings:</p> <ul style="list-style-type: none"> • Uncheck [RAM Disk] in the [Device Settings] tab of the printer's properties. <p> NOTE</p> <p>If you unchecked the [RAM Disk], check the [RAM Disk] again after the printing is completed. If not, print speed may be reduced.</p>	—
Cannot process this job.*1	—	This job is canceled because it is restricted by User Authorization or Job Accounting. Select [End].	—
Cassette is not installed.	—	Cannot feed paper. Set the cassette indicated on the screen.	—
Check the toner container.	—	The toner container is not installed correctly. Set it correctly.	page 10-6
Check waste toner box.	—	The waste toner box is not installed correctly. Set it correctly.	page 10-10
	Is the waste toner box full?	Replace the waste toner box.	

*1 When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-51\)](#)

E

Message	Checkpoints	Corrective Actions	Reference Page
Error occurred at cassette #.	—	Remove the indicated cassette. Select [Next >] to follow the instructions.	—

F

Message	Checkpoints	Corrective Actions	Reference Page
Failed to specify Job Accounting.*1	—	Failed to specify Job Accounting when processing the job externally. The job is canceled. Select [End].	—
Failed to store job retention data.	—	The job is canceled. Select [End]. Insufficient free space in the Job Box. Try to perform the job again after printing or deleting data from the Job Box.	—

*1 When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-51\)](#)

I

Message	Checkpoints	Corrective Actions	Reference Page
Incorrect account ID.*1	—	The account ID was incorrect when processing the job externally. The job is canceled. Select [End].	—
Incorrect box password.	—	The box password was incorrect when processing the job externally. The job is canceled. Select [End].	—
Incorrect Login User Name or Password.*1	—	The login user name or password was incorrect when processing the job externally. The job is canceled. Select [End].	—
Inner tray is full of paper.	—	Remove paper from the inner tray. Select [Continue] to resume printing. Select [Cancel] to cancel the job.	—

*1 When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-51\)](#)

J

Message	Checkpoints	Corrective Actions	Reference Page
Job Accounting restriction exceeded.	Is the acceptable printing count restricted by Job Accounting exceeded?	The printing count exceeded the acceptable count restricted by Job Accounting. Cannot print any more. This job is canceled. Select [End] .	—

K


Message	Checkpoints	Corrective Actions	Reference Page
KPDL error.*1	—	PostScript error has occurred. The job is canceled. Select [End] .	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-51\)](#)

M

Message	Checkpoints	Corrective Actions	Reference Page
Machine failure.	—	Internal error has occurred. Make a note of the error code displayed on the screen, and contact your Service Representative.	—
Maximum number of scanned pages.	Is the acceptable scanning count exceeded?	Only one copy of the scanned pages is available. Select [Continue] to print, send or store the scanned pages. Select [Cancel] to cancel printing, sending or storing.	—
Memory card error.	—	An error has occurred on the memory card. Job is canceled. Select [End] . 04: Insufficient space on the memory card to complete this operation. Move data or delete unneeded data.	—

Message	Checkpoints	Corrective Actions	Reference Page
Memory is full.*1	—	<p>The process cannot be performed due to insufficient memory. The job is canceled. Select [End].</p> <p>The machine may reproduce the same originals by arranging the following setting:</p> <ul style="list-style-type: none"> Decrease [Image Quality] of [File Format]. 	—
	—	<p>Unable to continue the job as the memory is used up. Select [Continue] to print the scanned pages. The print job cannot be processed completely. Select [Cancel] to cancel the job.</p> <p>The machine may reproduce the same originals by arranging the following settings:</p> <ul style="list-style-type: none"> Select [On] of RAM Disk Setting in System Menu, and then decrease the RAM disk size. Select [Printer Priority] of Optional Memory in System Menu. <p> NOTE</p> <p>Before changing the RAM Disk Setting or Optional Memory setting, contact your administrator.</p>	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-51\)](#)


N

Message	Checkpoints	Corrective Actions	Reference Page
Non-genuine Toner.	Is the installed toner container our own brand?	We will not be liable for any damage caused by the use of third party supplies in this machine.	—

P

Message	Checkpoints	Corrective Actions	Reference Page
Paper jam.	—	If a paper jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instruction to remove the jammed paper.	page 10-31
Preparing to print.	—	The machine is under the adjustment to maintain its quality. Please wait.	—
Print overrun.	—	Warning. Low printer memory. The job was paused. Re-starting the job. Select [Continue] .	—


R

Message	Checkpoints	Corrective Actions	Reference Page
RAM disk error.	—	<p>An error has occurred on the RAM disk. Job is canceled. Select [End].</p> <p>The possible error codes and their descriptions are as follows.</p> <p>04: Insufficient space on the RAM disk. If the optional RAM dis is installed, increase the RAM disk size by changing RAM Disk Setting in System Menu.</p> <p> NOTE</p> <p>The range of RAM disk size can be increased by selecting [Printer Priority] in Optional Memory.</p>	page 8-44
USB drive error.	Is writing to a USB drive prohibited?	<p>An error occurred in the USB drive. The job stopped. Select [End].</p> <p>The possible error codes and their descriptions are as follows.</p> <p>01: Connect a USB drive that can be written to.</p>	—
	—	<p>An error occurred in the USB drive. The job stopped. Select [End].</p> <p>The possible error codes and their descriptions are as follows.</p> <p>01: The amount of data that can be saved at once has been exceeded. Turn the power OFF/ON. If the error still occurs, the USB drive is not compatible with the machine. Use the USB drive formatted by this machine. If the USB drive cannot be formatted, it is damaged. Connect a compatible USB drive.</p>	—
USB Drive is full.*1	—	<p>Job is canceled. Select [End].</p> <p>Insufficient free space in the USB drive. Delete unnecessary files.</p>	—
Remove originals in the document processor.	Are there any originals left in the document processor?	Remove originals from the document processor.	—
Replace all originals and press [Continue].	—	Remove originals from the document processor, put them back in their original order, and place them again. Select [Continue] to resume printing. Select [Cancel] to cancel the job.	—
Replace MK.	—	Replacement of the parts in the maintenance kit is necessary at every 500,000 pages of printing and requires professional servicing. Contact your Service Representative.	—
Running security function...	—	Running security function. Please wait.	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-51\)](#)

S

Message	Checkpoints	Corrective Actions	Reference Page
Scanner memory is full.*1	—	<p>Scanning cannot be performed due to insufficient memory of scanner. Only one copy of the scanned pages is available. Select [Continue] to print, send or store the scanned pages. Select [Cancel] to cancel the printing job.</p> <p>The machine may reproduce the same originals by arranging the following settings:</p> <ul style="list-style-type: none"> Reduce the number of originals to be scanned at once. Furthermore, the machine may reproduce the same originals by arranging the following settings: Select [Copy Priority] of Optional Memory in System Menu. <p> NOTE Before changing the Optional Memory setting, contact your administrator.</p>	—
Send Error.*1	—	<p>An error has occurred during transmission. The job is canceled. Select [End].</p> <p>Refer to Responding to Send Error for the error code and corrective actions.</p>	page 10-27
Shake the toner container.	—	<p>Shake the toner container well and reinstall it.</p>	page 10-6
SSD error.	—	<p>An error has occurred on SSD. Job is canceled. Select [End].</p> <p>The possible error codes and their descriptions are as follows.</p> <p>01: The amount of data that can be saved at once has been exceeded. Turn the power OFF/ON. If the error still occurs, divide the file into smaller files. If the error occurs after the file is divided, the specified file may be damaged. Delete the file.</p> <p>04: Insufficient space on SSD to complete this operation. Move data or delete unneeded data.</p>	—
System error.	—	<p>System error has occurred. Follow the instructions on the screen.</p>	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-51\)](#)

T

Message	Checkpoints	Corrective Actions	Reference Page
The cover is open.	Is the top cover of the document processor open?	Close the document processor cover.	—
	Is there any cover which is open?	Close the cover indicated on the screen.	
The manufacturer assumes no responsibility for damage caused by a non-genuine toner.	Is the installed toner container our own brand?	We will not be liable for any damage caused by the use of third party supplies in this machine. If you want to continue, select [Next] .	—
The password does not meet password policy.	Is the password expired?	Change the login password. Job is canceled. Select Press [End] .	page 9-5
	Is the password policy requirement (such as password length or required characters) changed?	Confirm the password policy requirements and change the login password. Job is canceled. Select Press [End] .	page 9-5
The slit glass requires cleaning.	—	Clean the slit glass.	page 10-3
This memory is not formatted.	Is the USB drive formatted by this machine?	Perform [Format] on this machine.	page 7-11
Toner is empty.	—	Replace the toner container to our specified toner container.	page 10-6
Toner is low. (Replace when empty.)	—	It is almost time to replace the toner container. Obtain a new toner container.	—

U

Message	Checkpoints	Corrective Actions	Reference Page
Unknown Toner Installed. PC [K]	Does the installed toner container's regional specification match the machine's?	Install the specified container.	—





W

Message	Checkpoints	Corrective Actions	Reference Page
Warning low memory.	—	Cannot start the job. Try again later.	—

Y

Message	Checkpoints	Corrective Actions	Reference Page
You cannot use this box. Job is canceled.	—	You cannot use the specified box. Job is canceled. Select [End] .	—

Responding to Send Error

Error Code	Message	Corrective Actions	Reference Page
1101	Failed to send the e-mail.	Check the host name of the SMTP server on the Command Center RX.	page 2-64
	Failed to send via FTP.	Check the host name of FTP.	page 5-23
	Failed to send via SMB.	Check the host name of SMB.	page 5-23
1102	Failed to send via SMB.	Check the SMB settings. <ul style="list-style-type: none"> Login user name and login password  NOTE If the sender is a domain user, specify the domain name. <ul style="list-style-type: none"> Host name Path 	page 5-23
	Failed to send the e-mail.	Check the following on the Command Center RX. <ul style="list-style-type: none"> SMTP login user name and login password POP3 login user name and login password E-mail size limit 	page 2-64
	Failed to send via FTP.	Check the FTP settings. <ul style="list-style-type: none"> Login user name and login password  NOTE If the sender is a domain user, specify the domain name. <ul style="list-style-type: none"> Path Folder share permissions of the recipient 	page 5-23
1103	Failed to send via SMB.	Check the SMB settings. <ul style="list-style-type: none"> Login user name and login password  NOTE If the sender is a domain user, specify the domain name. <ul style="list-style-type: none"> Path Folder share permissions of the recipient 	page 5-23
	Failed to send via FTP.	Check the FTP settings. <ul style="list-style-type: none"> Path Folder share permissions of the recipient 	page 5-23
1104	Failed to send the e-mail.	Check the e-mail address.  NOTE If the address is rejected by the domain, you cannot send the email.	page 5-22

Error Code	Message	Corrective Actions	Reference Page
1105	Failed to send via SMB.	Check the following settings. [System Menu/Counter] key > [System/Network] > [Network] > [Protocol Settings] > [SMB Client (Transmission)]	page 8-33
	Failed to send the e-mail.	Select [On] of the SMTP settings on the Command Center RX.	page 2-64
	Failed to send via FTP.	Check the following settings. [System Menu/Counter] key > [System/Network] > [Network] > [Protocol Settings] > [FTP Client (Transmission)]	page 8-33
1106	Failed to send the e-mail.	Check the sender address of SMTP on the Command Center RX.	page 2-64
1131	Failed to send via FTP.	Enable the SSL. [System Menu/Counter] key > [System/Network] > [Network] > [Security Settings] > [SSL]	page 8-39
1132	Failed to send the e-mail.	Check the following of the SMTP server. <ul style="list-style-type: none"> • Is SMTP over SSL available? • Is the encryption available? 	Refer to the Command Center RX User Guide.
	Failed to send via FTP.	Check the following of the FTP server. <ul style="list-style-type: none"> • Is FTPS available? • Is the encryption available? 	—
2101	Failed to send via SMB.	Check the network and SMB settings. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. • Host name and IP address • Port number 	—
	Failed to send via FTP.	Check the network and FTP settings. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. • Host name and IP address • Port number 	—
	Failed to send the e-mail.	Check the network and Command Center RX. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. • POP3 server name of the POP3 user • SMTP server name 	page 2-64

Error Code	Message	Corrective Actions	Reference Page
2102 2103	Failed to send via FTP.	<p>Check the network.</p> <ul style="list-style-type: none"> The network cable is connected. The hub is not operating properly. The server is not operating properly. 	—
		<p>Check the following of the FTP server.</p> <ul style="list-style-type: none"> Is FTP available? The server is not operating properly. 	—
	Failed to send the e-mail.	<p>Check the network.</p> <ul style="list-style-type: none"> The network cable is connected. The hub is not operating properly. The server is not operating properly. 	—
2201 2202 2203 2231	<p>Failed to send the e-mail.</p> <p>Failed to send via FTP.</p> <p>Failed to send via SMB.</p>	<p>Check the network.</p> <ul style="list-style-type: none"> The network cable is connected. The hub is not operating properly. The server is not operating properly. 	—
2204	Failed to send the e-mail.	Check the e-mail size limit of the SMTP settings on the Command Center RX.	page 2-64
3101	Failed to send the e-mail.	Check the authentication methods of both the sender and the recipient.	—
	Failed to send via FTP.	<p>Check the network.</p> <ul style="list-style-type: none"> The network cable is connected. The hub is not operating properly. The server is not operating properly. 	—
3201	Failed to send the e-mail.	Check the SMTP user authentication method of the recipient.	—
0007 4201 4701 5101 5102 5103 5104 7101 7102 7103 720f	—	Turn the main power switch off and back on. If this error occurs several times, make a note of the displayed error code and contact your service representative.	page 2-15
9181	—	The scanned original exceeds the acceptable number of pages of 999. Send the excess pages separately.	—

Adjustment/Maintenance

Drum Refresh 1

Remove image blur from the printout.

NOTE

Drum Refresh 1 cannot be performed while printing. Execute Drum Refresh 1 after the printing is done.

1 Display the screen.

[System Menu/Counter] key > [Adjustment/Maintenance] > [Drum Refresh 1]

2 Perform the drum refresh.

Select [Start]. "Drum Refresh 1" begins.

Drum Refresh 2

Remove white dots from the printout.

NOTE

Drum Refresh 2 cannot be performed while printing. Execute Drum Refresh 2 after the printing is done.

1 Load paper.

Load A4 or Letter size paper into the Multipurpose tray.

2 Display the screen.

[System Menu/Counter] key > [Adjustment/Maintenance] > [Drum Refresh 2]

3 Perform the drum refresh.

Select [Start]. "Drum Refresh 2" begins.


NOTE

When you run [Drum Refresh 2], the machine sometimes makes a vibrating sound for about 80 seconds until drum refreshing is completed. The toner soiling on the ejected paper is normal and does not indicate a fault.


Clearing Paper Jams

If a paper jam occurs, the touch panel will display "Paper Jam." and the machine will stop. Refer to these procedures to remove the jammed paper.

Jam Location Indicators


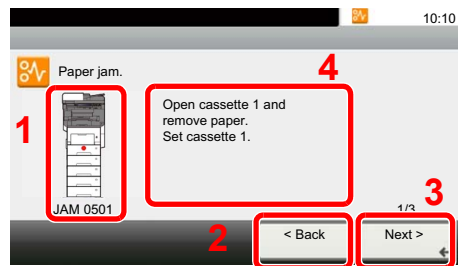


- 1 Shows the location of a paper jam.
- 2 Shows the previous step.
- 3 Shows the next step.
- 4 Shows the removal procedure.

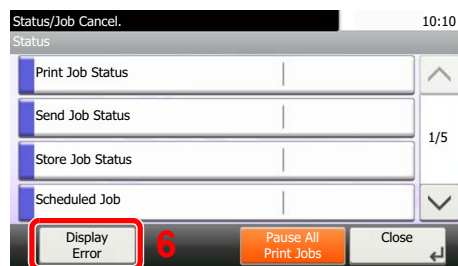

- 5 Selecting [**Status/Job Cancel**] key displays [**Hold**]. Selecting [**Hold**] displays status screen, and the status of jobs can be checked.
- 6 Select [**Display Error**] to return to the paper jam guidance.

If a paper jam occurs, the location of the jam will be displayed on the touch panel as well as the clearing instructions.

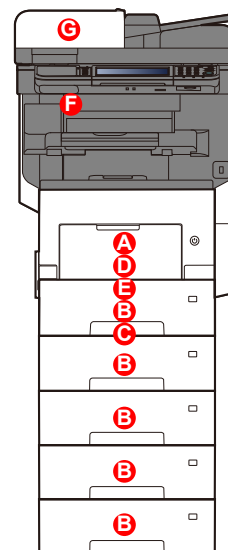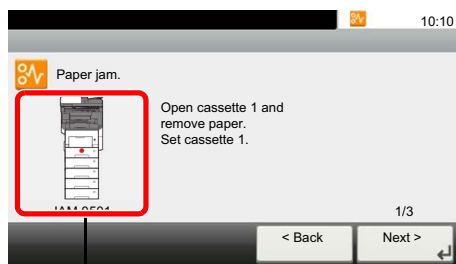

Paper Jam Location Indicator	Paper Jam Location	Reference Page
A	Multi Purpose Tray	page 10-32
B	Cassettes 1 to 5	page 10-33
C	Duplex Unit	page 10-34
D	Inside the Machine	page 10-35
E	Inner Tray / Inside Rear Cover	page 10-36
F	Finisher Tray	page 10-37
G	Document Processor	page 10-38

After you remove the jam, the machine will warm up again and the error message will be cleared. The machine resumes with the page that was printing when the jam occurred.

Precautions with Paper Jams

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.




CAUTION



The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.

Multi Purpose Tray

1

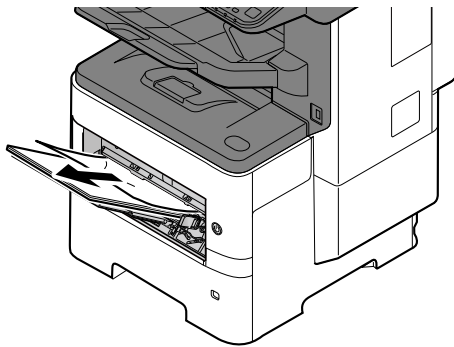


2

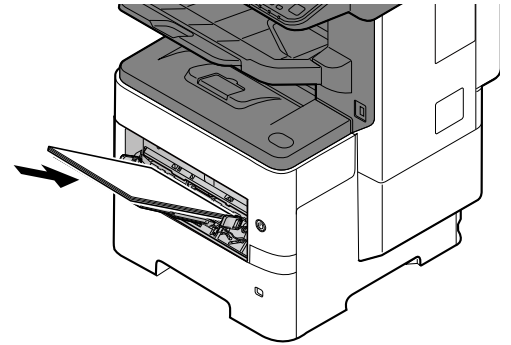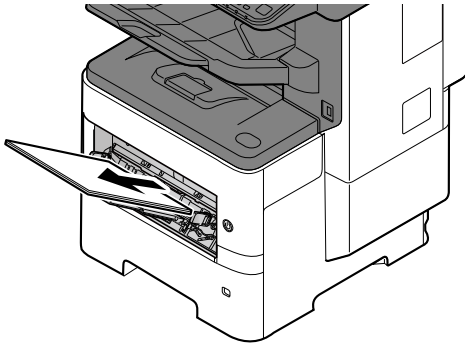


Cassettes 1 to 5

Procedures for handling a paper jam in Cassettes 1 to 5 are all the same. This section explains procedures using Cassette 1 as an example.

1

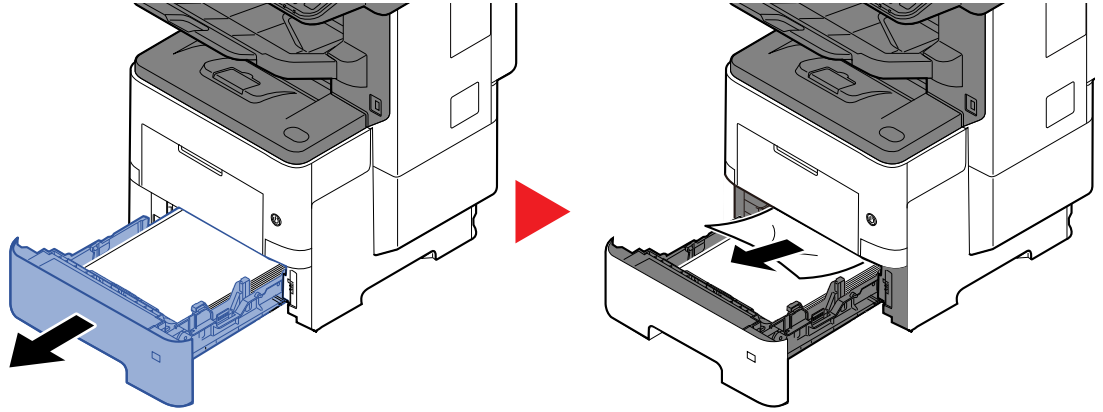


2

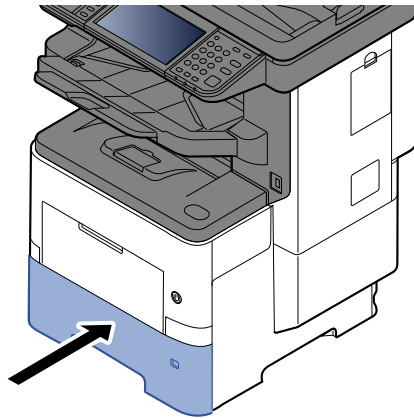


Duplex Unit


1

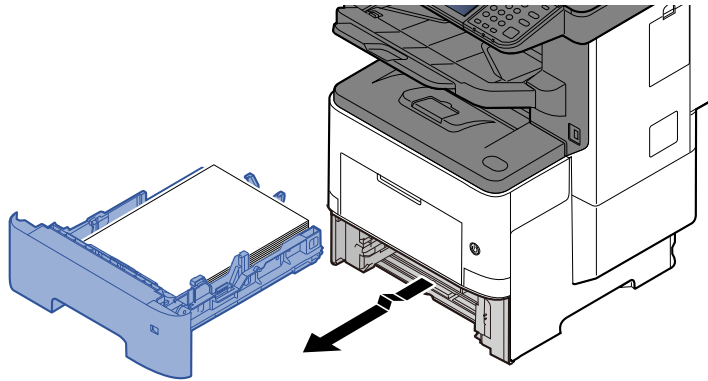

2

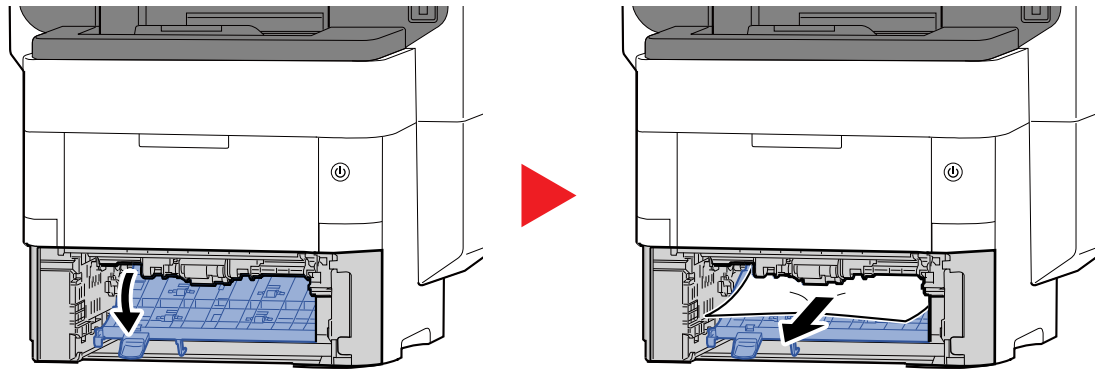


3

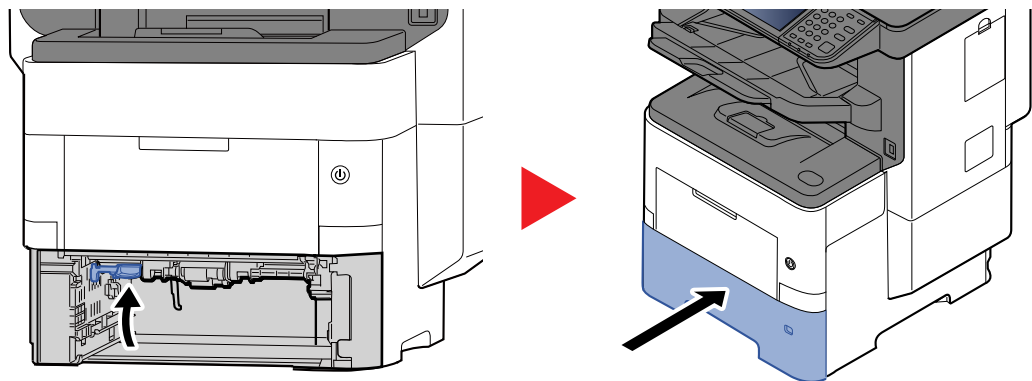


Inside the Machine


1

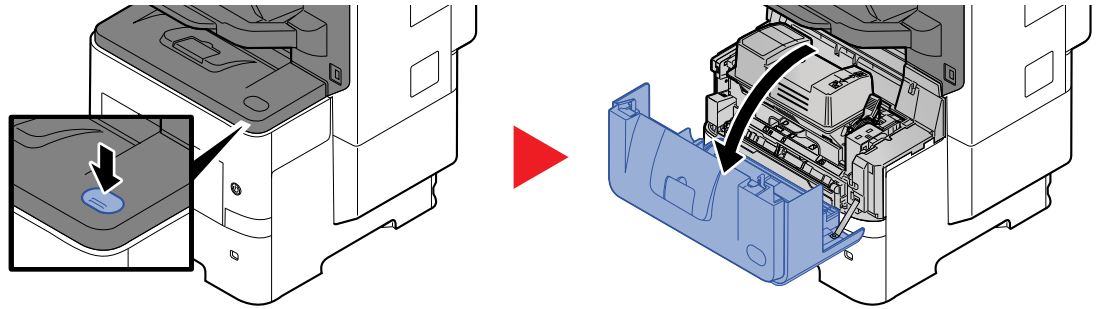

2

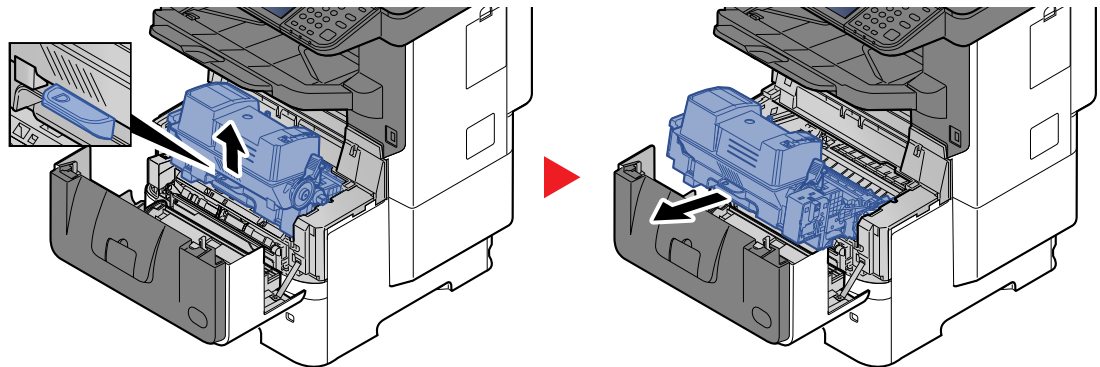

3

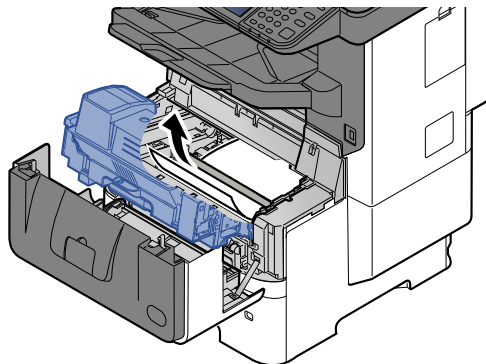


If the jammed paper appears to be pinched by rollers, pull it along the normal running direction of the paper.

If you cannot find a paper jam, try checking inside the rear of the printer.


➔ [Inner Tray / Inside Rear Cover \(page 10-36\)](#)

4

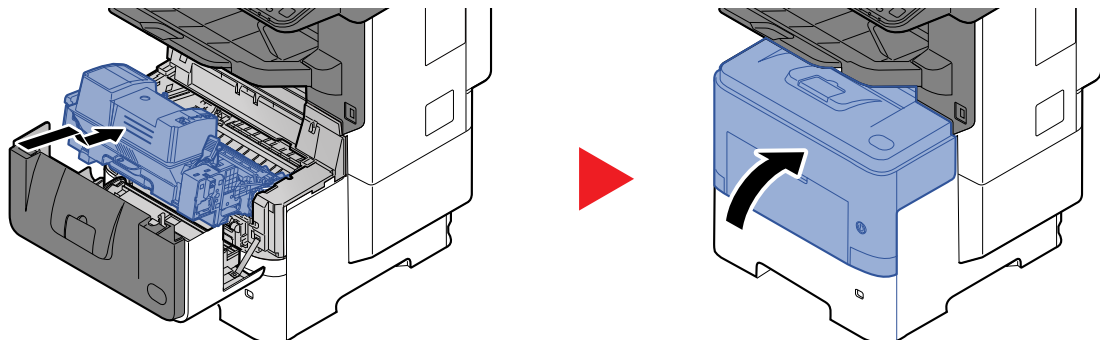


Inner Tray / Inside Rear Cover


1

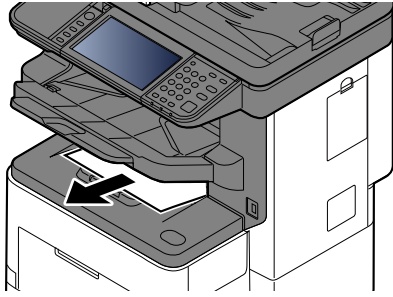

2

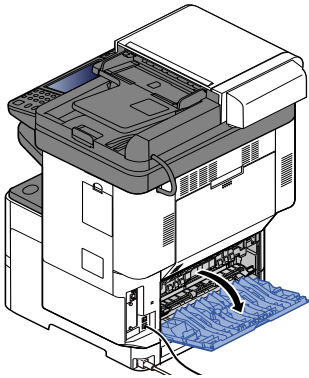

3

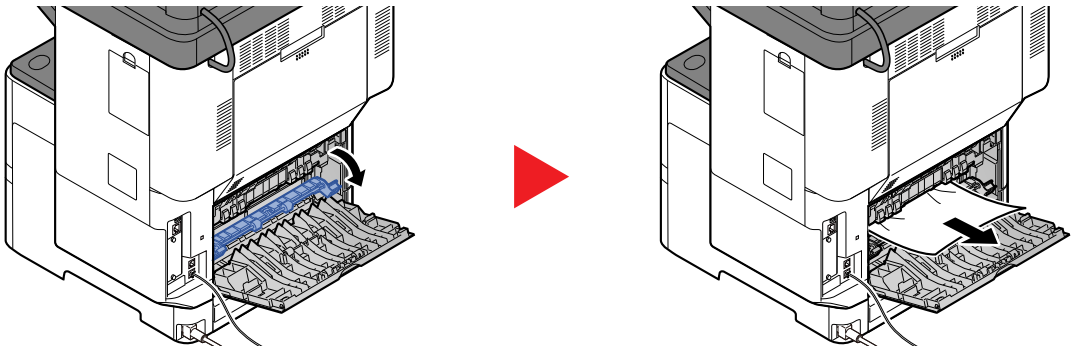


If you cannot find a paper jam, try checking inside the rear of the machine.

CAUTION


The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.

4

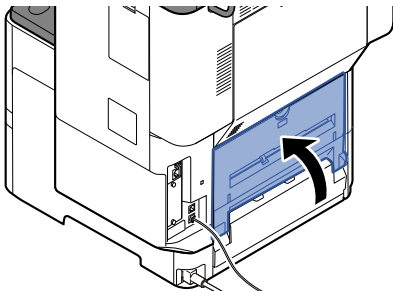


Finisher tray


1

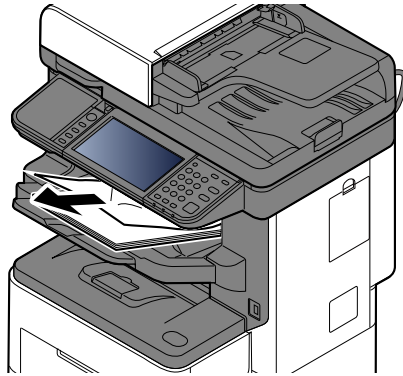

2

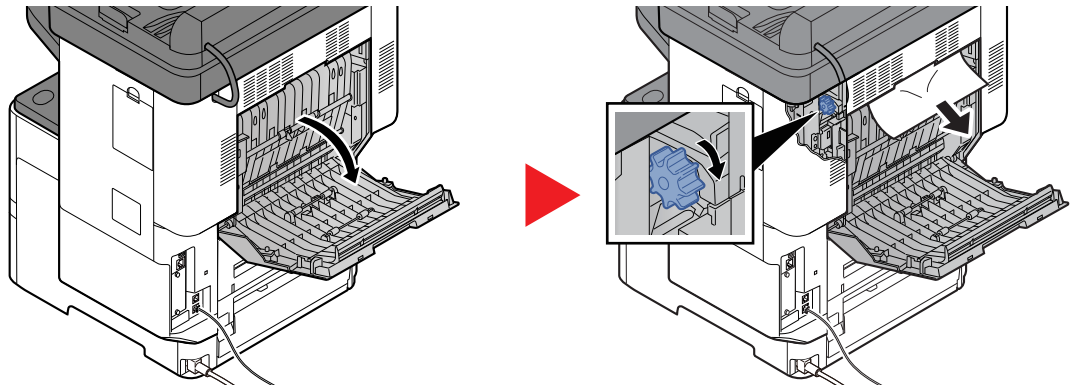


3

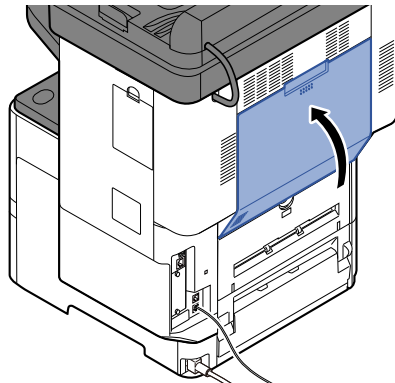


Document Processor


1

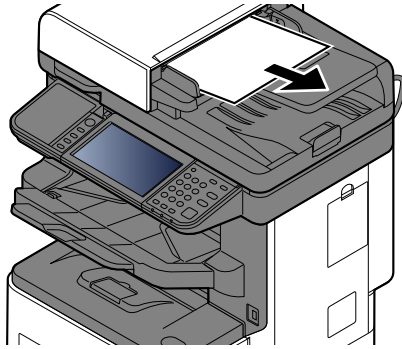


2

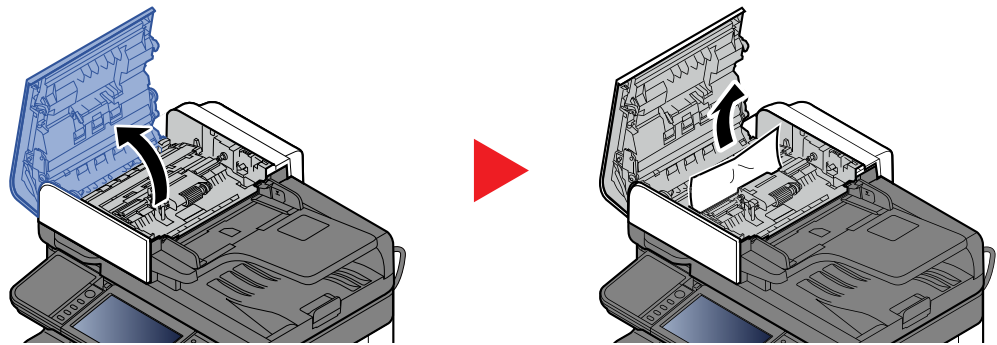

3

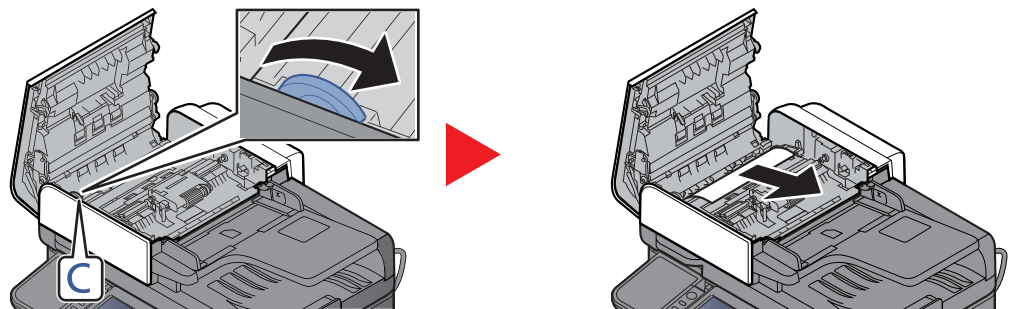


4

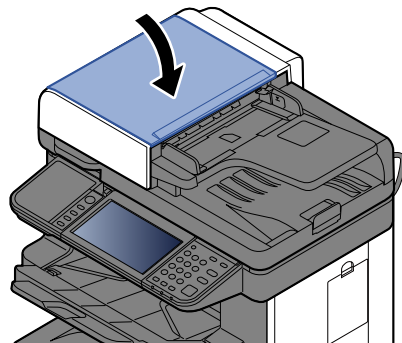


Clearing a Staple Jam

Model without the finisher


1

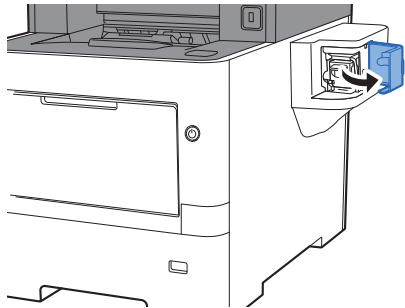

2


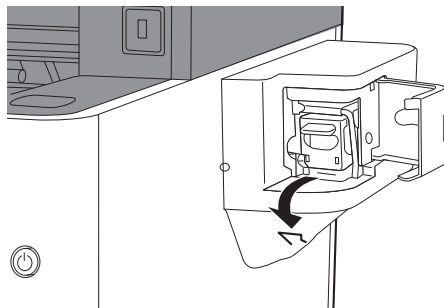


3




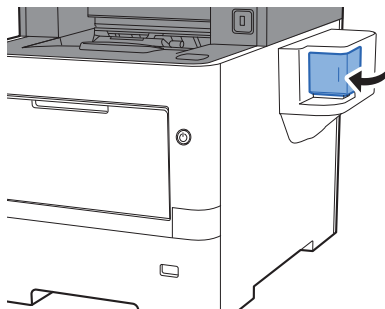


Model with the finisher

1

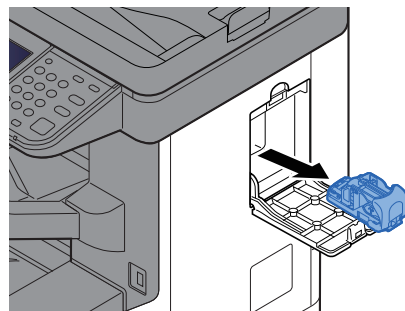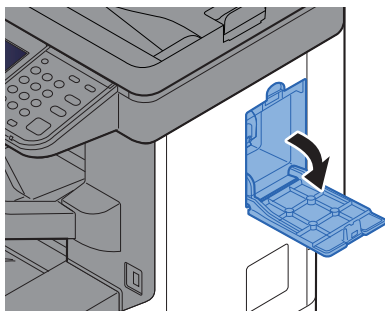

2

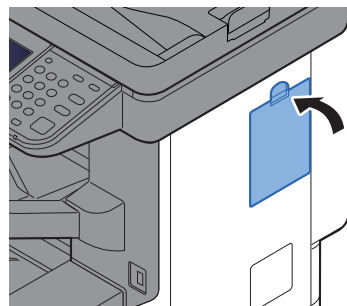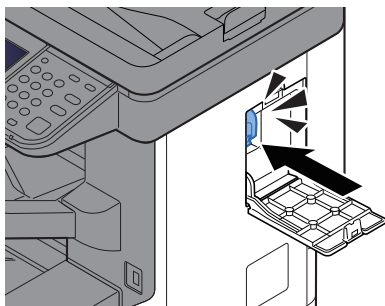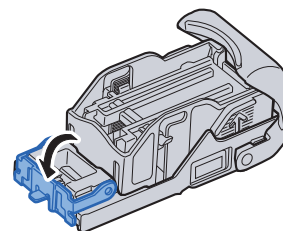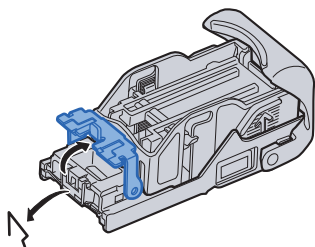

11 Appendix

This chapter explains the following topics:


Optional Equipment	11-2
Overview of Optional Equipment	11-2
Optional Applications	11-8
Character Entry Method	11-10
Entry Screens	11-10
Entering Characters	11-12
Paper	11-13
Basic Paper Specifications	11-13
Choosing the Appropriate Paper	11-14
Special Paper	11-17
Specifications	11-21
Machine	11-21
Copy Functions	11-23
Printer Functions	11-24
Scanner Functions	11-25
Document Processor	11-25
Paper Feeder (500-sheet) (Option)	11-26
Manual Stapler (ECOSYS M3860idn only)	11-26
Glossary	11-27

Optional Equipment


Overview of Optional Equipment

The following optional equipment is available for the machine.

ECOSYS M3860idn

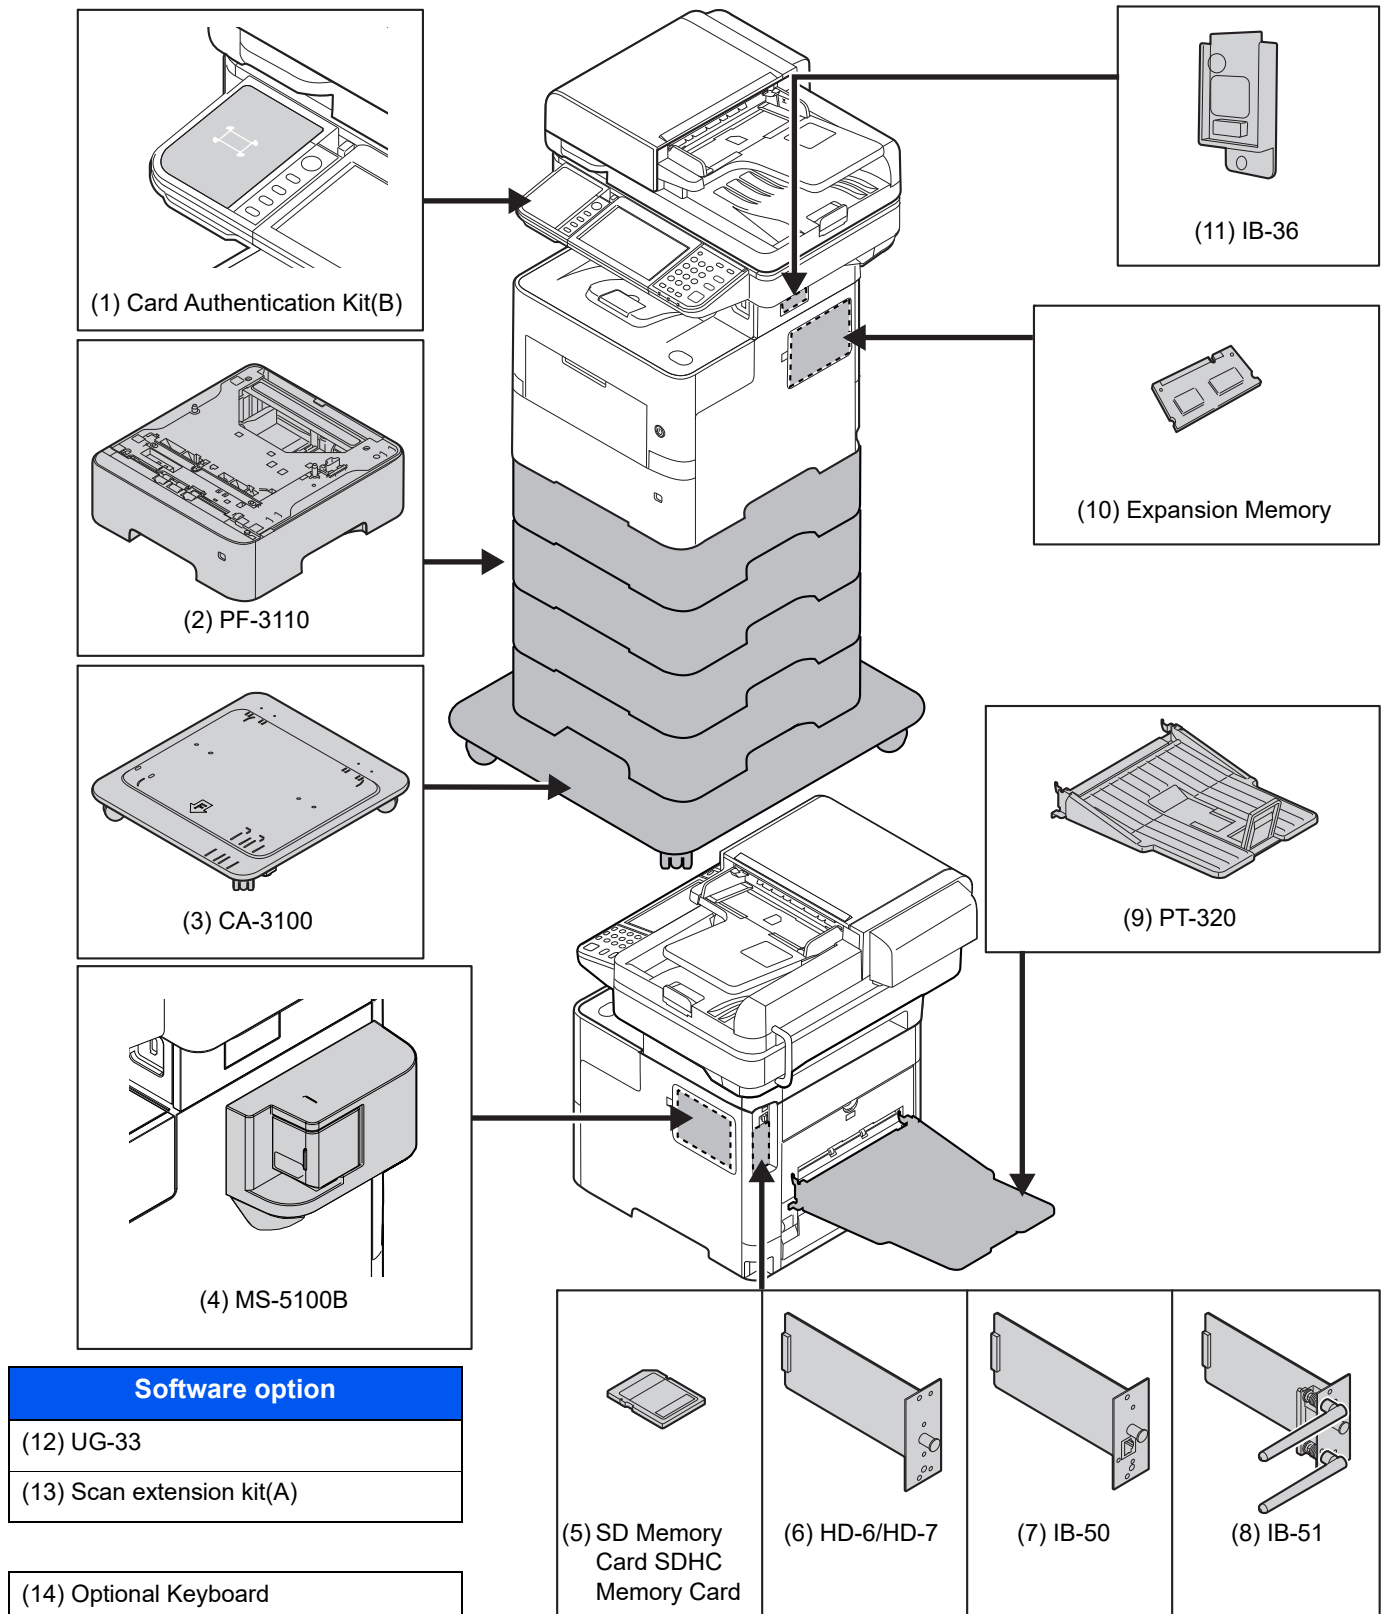

ECOSYS M3860idnf

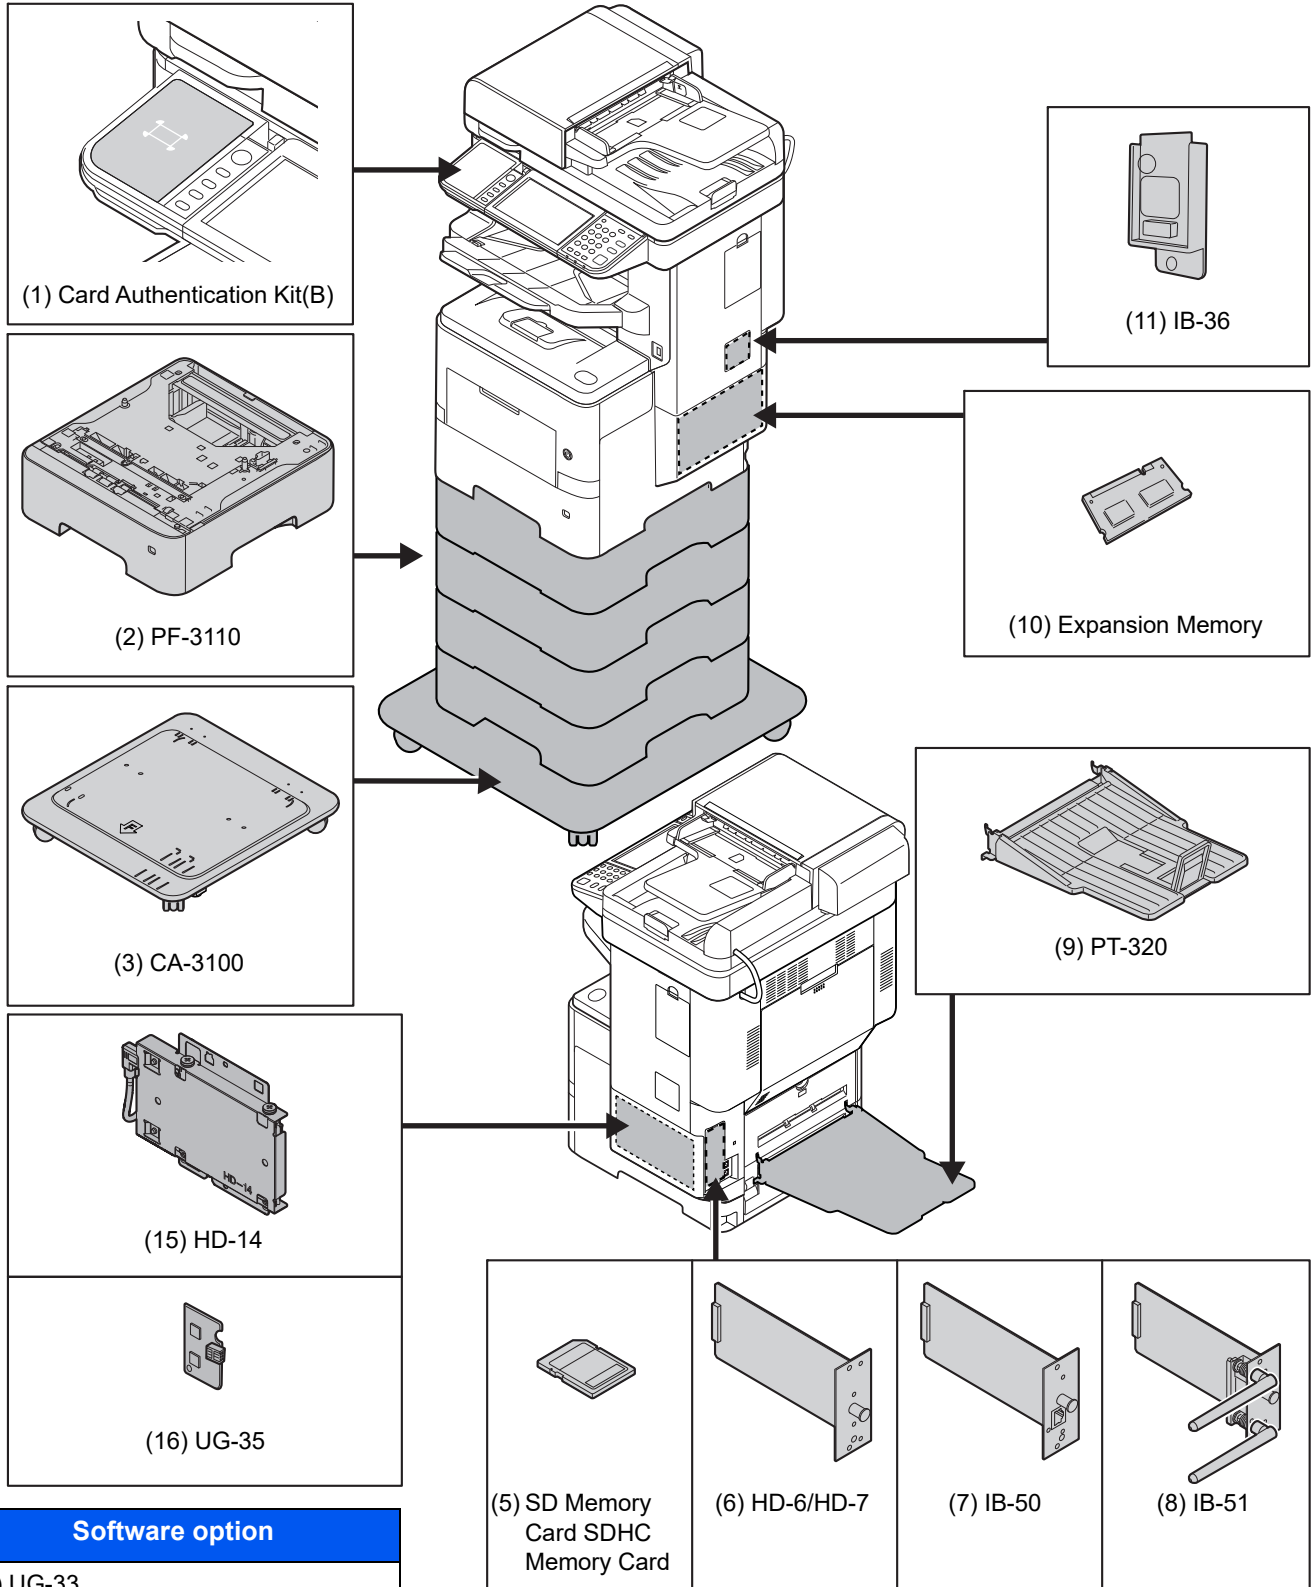

Software option

(12) UG-33

(13) Scan extension kit(A)

(14) Optional Keyboard

(1) Card Authentication Kit(B) "Card Authentication Kit"

User login administration can be performed using ID cards. To do so, it is necessary to register ID card information on the previously registered local user list. For more information about how to register this information, refer to the following:

➔ **Card Authentication Kit(B) Operation Guide**

(2) PF-3110 "Paper Feeder (500-sheet x1)"

Up to four additional cassettes identical to the machine's cassettes can be installed in the machine. Loading method are the same as the standard cassettes.

➔ [Loading in the Cassettes \(page 3-4\)](#)

(3) CA-3100 "Caster kit"

If you are attaching Paper Feeder (500-sheet x1) to the printer and installing it on the floor, you can use the Caster kit to maintain the machine's stability.

(4) MS-5100B "Manual stapler" (ECOSYS M3860idn only)

It can staple the originals or the printouts. The number of sheets that can be stapled together is 20 sheets (80 g/m²).

(5) "SD/SDHC Memory Card"

An SD/SDHC memory card is useful for storing fonts, macros, and overlays. The machine is equipped with a slot for an SDHC memory card with a maximum size of 32 GB, and an SD memory card with a maximum size of 2 GB.


Reading the SD/SDHC Memory Card

Once inserted in the machine's slot, the contents of the SD/SDHC memory card can be read from the operation panel or automatically when you power on or reset the machine.


Installing and Formatting the SD/SDHC Memory Card

To use an unused SD/SDHC memory card, you must first use the machine to format the SD/SDHC memory card. For information on formatting an SD/SDHC memory card, consult your Service Representative.


- 1 Power off the machine and unplug the power cord.

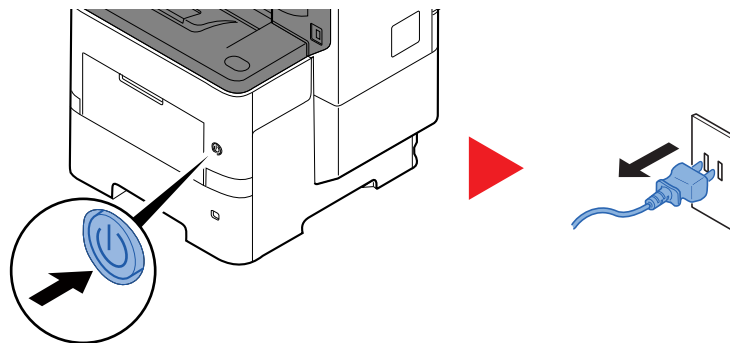


- 2 Remove the cover.

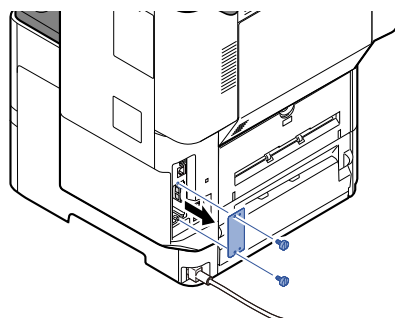


- 3 Insert the SD/SDHC memory card into the SD/SDHC memory card slot.

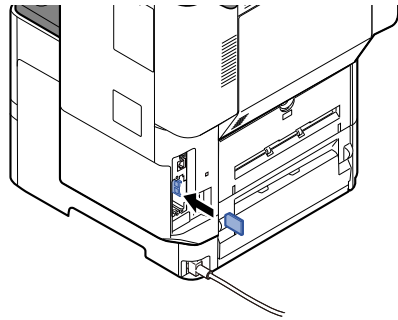

- 4 Replace the covers.

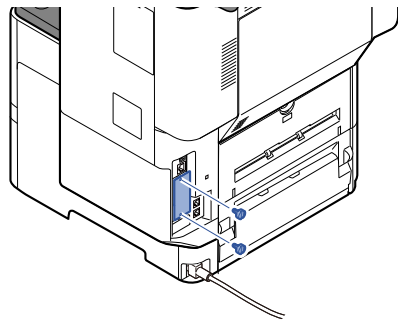

- 5 Insert the power cord into the socket and turn on the power switch.

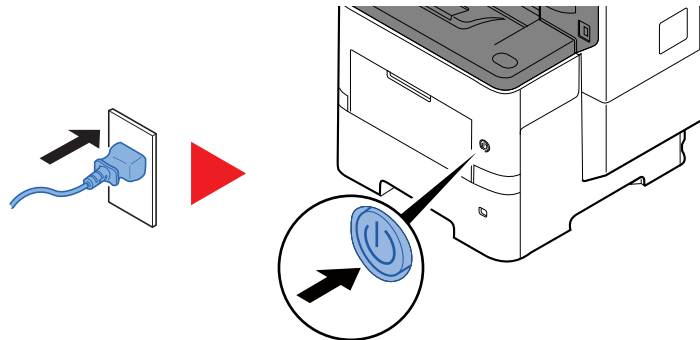

(6) HD-6/HD-7 "SSD"

With SSD installed in the machine, received data can be rasterized and stored on this SSD. This enables high-speed printing of multiple copies using an electric sort function. Also, you can use the Document Box functions.

- ➔ [What is Document Box? \(page 5-37\)](#)

The security function can be used by installing the SSD.

- ➔ [Data Security \(page 8-45\)](#)
- ➔ Data Encryption/Overwrite OPERATION GUIDE

(7) IB-50 "Network Interface Kit"

The Network Interface Kit provides a high-speed connection for the Gigabit-per-second interface. Settings are possible for a variety of OS and network protocols.

- ➔ [IB-50 User's Manual](#)

(8) IB-51 "Wireless Network Interface Kit"

This is a wireless LAN interface card which supports the wireless LAN specifications IEEE802.11n (Max 300 Mbps) and 11 g/b.

With the utilities supplied, settings are possible for a variety of OS and network protocols.


➔ **IB-51 User's Manual**

(9) PT-320 "Rear Tray"


Use the faceup output tray when you wish paper to be stacked with the printed side facing up (reverse order). The rear tray can only be used for printing from a PC.

Installing the Rear Tray

- 1 Install the paper stopper according to the size of paper to be used.

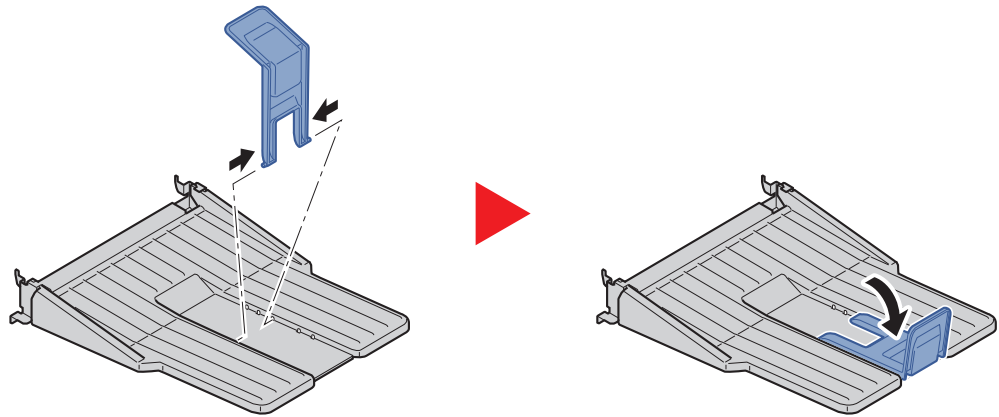


- 2 Install the rear tray on the rear of the machine.

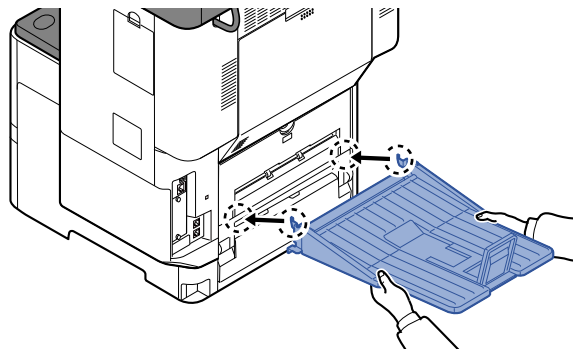

(10) "Expansion Memory"

The machine can perform the more multiple jobs simultaneously by adding more memories. You can increase the machine's memory up to 3,072 MB by plugging in the optional memory modules.

Precautions for Handling the Memory Modules

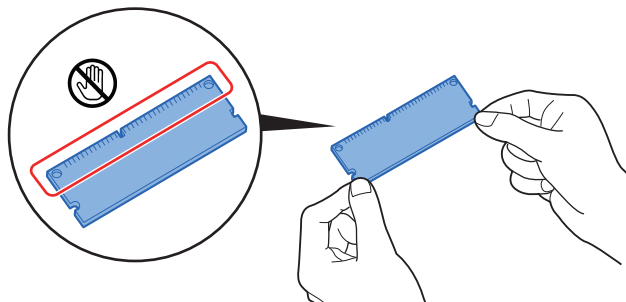

To protect electronic parts, discharge static electricity from your body by touching a water pipe (faucet) or other large metal object before handling the memory modules. Or, wear an antistatic wrist strap, if possible, when you install the memory modules.

(11) IB-36 "Wireless Network Interface Kit"

This is a wireless LAN Interface card which supports the wireless LAN specifications IEEE802.11n (Max 65 Mbps) and 11 g/b. In addition, network printing is possible without using the wireless LAN router because Wi-Fi Direct is supported.

(12) UG-33 "ThinPrint Option"

This application allows print data to be printed directly without a print driver.

(13) Scan extension kit(A) "OCR Scan Activation Kit"

This option enables the use of the OCR function in the applications of the machine. To use this function, a hard disk, SSD or SD/SDHC memory card must be inserted.

- ➔ [HD-6/HD-7 "SSD" \(page 11-5\)](#)
- ➔ [HD-14 "Hard Disk" \(page 11-7\)](#)
- ➔ ["SD/SDHC Memory Card" \(page 11-4\)](#)

To use this function, the application and OCR dictionary must be installed.

- ➔ [Optional Applications \(page 11-8\)](#)
- ➔ [OCR Dictionary Installation \(page 8-46\)](#)

(14) Optional Keyboard "Optional Keyboard"

A Optional keyboard can be used to enter information into the text fields on the operation panel. A special mount is also available to install the keyboard on the machine. Please contact your dealer or service representative for information on keyboards that are compatible with your machine before you purchase one.

(15) HD-14 "Hard Disk"

With hard disk installed in the machine, received data can be rasterized and stored on this hard disk. This enables high-speed printing of multiple copies using an electric sort function. Also, you can use the Document Box functions.

- ➔ [What is Document Box? \(page 5-37\)](#)

The security function can be used by installing the hard disk.

- ➔ [Data Security \(page 8-45\)](#)
- ➔ Data Encryption/Overwrite OPERATION GUIDE

(16) UG-35 "Trusted Platform Module"

With this option installed in the machine, confidential information can be safely protected. The encryption key used to encrypt confidential information on this machine is stored in a dedicated storage area on the TPM chip. Since this storage area cannot be read from outside the TPM, confidential information can be safely protected. Once you have installed this option, the hard disk cannot be used without this option.

Optional Applications

Overview of the Applications

The applications listed below are installed on this machine.

Application
Data Encryption/Overwrite
Card Authentication Kit* ¹
ThinPrint Option* ¹
OCR Scan Activation Kit* ¹

*¹ This can be used on a trial basis for a limited time.

NOTE

- Restrictions such as the number of times the application can be used during the trial period differ depending on the application.
- If you change the date/time while using the trial version of an application, you will no longer be able to use the application.

Starting Application Use

Use the procedure below to start using an application.

- 1 [System Menu/Counter] key > [System/Network] > [Optional Function]


NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000
Login Password: 6000

- 2 Select the desired application and select [**Activate**].

You can view detailed information on the selected application by selecting [].

- 3 Select [**Official**] and enter a license key.

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to Step 5.

To use the application as a trial, select [**Trial**] without entering the license key.

- 4 Select [**Yes**] in the confirmation screen.

NOTE

- If you started the Security Kit or Thin Print option and entered the license key, turn the power OFF/ON.
- Icons of activated application are displayed in the Home screen.

Checking Details of Application

Use the procedure below to check the details of application.

- 1 [System Menu/Counter] key > [System/Network] > [Optional Function]



NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Login User Name: 6000

Login Password: 6000

- 2 Select the desired application and select [].

You can view detailed information on the selected application.

The table below lists the item you can view.

Item
Function Name
License
Remaining Counts
Expiration Date
Status

Extend the trial period.

[Extend] > [Yes]

The trial period is extended.

Character Entry Method

To enter characters for a name, use the on-display keyboard in the touch panel following the steps as explained below.


NOTE

Keyboard Layout

"QWERTY", "QWERTZ" and "AZERTY" are available as keyboard layouts the same as a PC keyboard. Select the [System Menu/Counter] key, [Common Settings] and then [Keyboard Layout] to choose the desired layout. "QWERTY" layout is used here as an example. You may use another layout following the same steps.

Entry Screens

Lower-case Letter Entry Screen

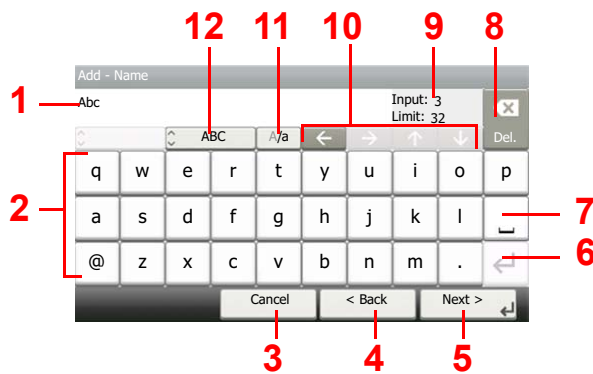


No.	Display/Key	Description
1	Display	Displays entered characters.
2	Keyboard	Select the character to enter.
3	[Cancel]	Select to cancel entered characters and return to the screen before the entry was made.
4	[< Back]	Select to return to the previous screen.
5	[OK] / [Next >]	Select to save the entered characters and move to the next screen.
6	Enter Key	Select to enter a line break.
7	Space Key	Select to insert a space.
8	Delete Key	Select to delete a character to the left of the cursor.
9	[Input] / [Limit] Display	Displays maximum number of characters and the number of characters entered.
10	Cursor Key	Select to move the cursor on the display.
11	[A/a] / [a/A]	Select to switch between upper case and lower case.
12	[ABC] / [Symbol]	Select the characters that are entered. To enter symbols or numbers, select [Symbol].

Upper-case Letter Entry Screen



Number/Symbol Entry Screen

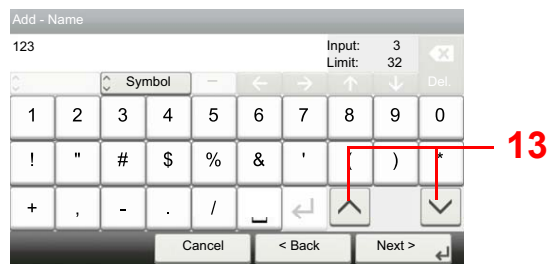

No.	Display/Key	Description
13	[▲]/[▼]	To enter a number or symbol not shown in the keyboard, select the cursor key and scroll the screen to view other numbers or symbols to enter.

Entering Characters

Follow the steps below to enter 'List A-1' for an example.

1 Enter 'List', (space).




To shift from lower case to upper case letters, select [a/A]. To shift from upper case to lower case letters, select [A/a].

2 Enter 'A-1'.



To enter numbers or symbols, select [ABC] to display [Symbol].

3 Register the characters you entered.

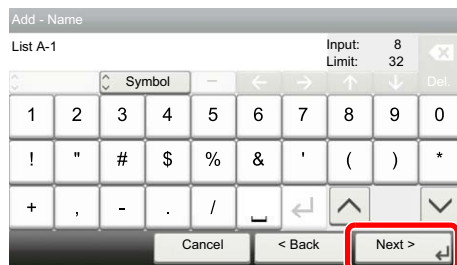

Select [Next>]. The entered characters are registered.

Paper

This section explains the paper sizes and types that can be used in the paper source.

For details on the sizes, types, and number of sheets of paper that can be loaded in each paper tray, refer to the following:

➔ [Specifications \(page 11-21\)](#)

Basic Paper Specifications

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

Supported Paper

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

Basic Paper Specifications

The following table lists the specifications of paper that is supported with this machine. Refer to the subsequent sections for further details.

Criteria	Specifications
Weight	Cassettes: 60 to 120 g/m ²
	Multi purpose tray: 60 to 220 g/m ² , 209.5 g/m ² (Cardstock)
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°
Moisture content	4 to 6%
Pulp content	80% or more



NOTE

Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

Choosing the Appropriate Paper

This section describes guidelines for choosing paper.

Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Use of paper in any of these conditions will not only deliver poor copies but may also cause jams and shorten the useful life of the machine. Choose paper with a smooth and even surface; however, avoid coated paper or paper with a treated surface as it may damage the drum or fusing unit.

Ingredients

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. Those types of paper may produce harmful fumes from the heat of printing and may damage the drum.

Be sure to use the standard paper that contains at least 80% pulp, i.e., not more than 20% of the total paper content consists of cotton or other fibers.

Supported Paper Sizes

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a ± 0.7 mm dimensional accuracy for length and width. Corner angles must be $90^\circ \pm 0.2^\circ$.

Paper Size	Cassette 1	Cassettes 2 to 5	Multi Purpose Tray
Envelope Monarch (3-7/8 × 7-1/2")	×	○	○
Envelope #10 (4-1/8 × 9-1/2")	×	○	○
Envelope DL (110 × 220 mm)	○	○	○
Envelope C5 (162 × 229 mm)	○	○	○
Executive (7-1/4 × 10-1/2")	○	○	○
Letter	○	○	○
Legal	○	○	○
A4 (297 × 210 mm)	○	○	○
B5 (257 × 182 mm)	○	○	○
A5 (210 × 148 mm)	○	○	○
A6 (148 × 105 mm)	○	○	○
B6 (182 × 128 mm)	○	○	○
Envelope #9 (3-7/8 × 8-7/8")	×	○	○
Envelope #6 (3-5/8 × 6-1/2")	×	○	○
ISO B5 (176 × 250 mm)	○	○	○
Hagaki (Cardstock) (100 × 148 mm)	×	×	○
Oufuku hagaki (Return postcard) (148 × 200 mm)	○	○	○
Oficio II	○	○	○
216 × 340 mm	○	○	○
16K (273 × 197 mm)	○	○	○

Paper Size	Cassette 1	Cassettes 2 to 5	Multi Purpose Tray
Statement	○	○	○
Folio (210 × 330 mm)	○	○	○
Youkei 4 (105 × 235 mm)	×	○	○
Youkei 2 (114 × 162 mm)	×	○	○
Custom	Cassette 1: 105 × 148 to 216 × 356 mm Cassettes 2 to 5: 92 × 162 to 216 × 356 mm Multi Purpose Tray: 70 × 148 to 216 × 356 mm		

Smoothness

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams.

Basis Weight

In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area. In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper. Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

Moisture Content

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic chargeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the carton to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

Other Paper Specifications

Porosity: The density of the paper fibers.

Stiffness: Paper must be stiff enough or it may buckle in the machine, causing jams.

Curl: Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

Static electricity: During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

Whiteness: Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

Quality: Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

Packaging: Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

Specially treated paper: We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- Glossy paper
- Watermarked paper
- Paper with an uneven surface
- Perforated paper

Special Paper

This section describes printing onto special paper and print media.

The following paper and media can be used.

- Transparencies
- Preprinted paper
- Bond paper
- Recycled paper
- Thin paper
- Letterhead
- Colored paper
- Prepunched paper
- Envelopes
- Hagaki (Cardstock)
- Thick paper
- Labels
- High-quality paper

When using these paper and media, choose those that are designed specifically for copiers or page printers (such as laser printers). Use the multi purpose tray for transparencies, thick paper, envelopes, cardstocks, and label paper.

Choosing Special Paper

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multi purpose tray for special paper.

Transparencies

Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Heat resistance	Must withstand at least 190°C
Thickness	0.100 to 0.110 mm
Material	Polyester
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°

To avoid problems, use the multi purpose tray for transparencies and load transparencies with the long side facing the machine.


If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

Label

Be sure to feed labels from the multi purpose tray.

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.

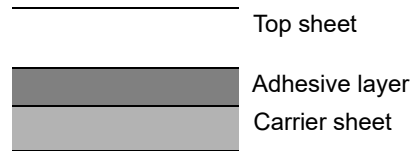

Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.


Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

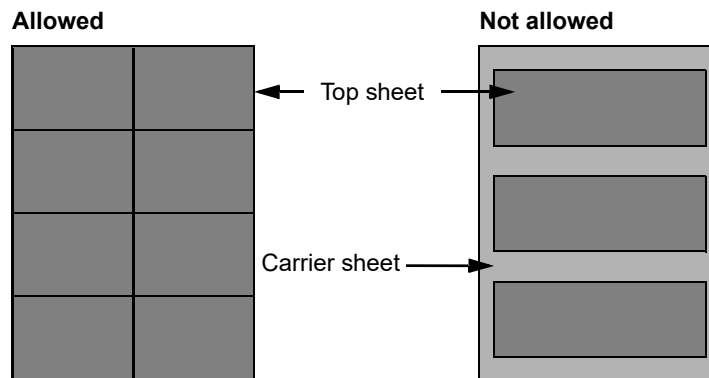

Use label paper that conforms to the following specifications.

Top sheet weight	44 to 74 g/m ²
Basis weight (overall paper weight)	104 to 151 g/m ²
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture content	4 to 6 % (composite)

Hagaki (Cardstock)

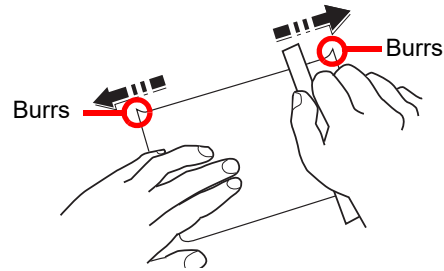

Before loading Hagaki (Cardstock) into the multi purpose tray, fan them and align the edges. If the Hagaki (Cardstock) paper is curled, straighten it before loading. Printing onto curled Hagaki (Cardstock) may cause jams.

Use unfolded Oufuku hagaki (Return postcard) (available at post offices). Some Hagaki (Cardstock) may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki (Cardstock) on a flat surface and rubbing the edges gently a few times with a ruler.

Envelopes

Envelopes should be fed from the MP tray with the print-side up or the optional paper feeder with the print-side up.



NOTE

Do not load paper above the load limits located on the paper width guide of the optional paper feeder.

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

- Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes off in the machine.
- Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.
- If paper jams occur, load fewer envelopes at once.

Thick Paper

Before loading thick paper in the multi purpose tray, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki (Cardstock) by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.



NOTE

If the paper is not supplied correctly even after it is smoothed, load the paper in the multi purpose tray with the leading edge raised a few millimeters.

Colored Paper

Colored paper must conform to the specifications.

➔ [Basic Paper Specifications \(page 11-13\)](#)

In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

Preprinted Paper

Preprinted paper must conform to the specifications.

➔ [Basic Paper Specifications \(page 11-13\)](#)

The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

Recycled Paper

Recycled paper must conform to the specifications; however, its whiteness may be considered separately.

➔ [Basic Paper Specifications \(page 11-13\)](#)



NOTE

Before purchasing recycled paper in volume, try testing a sample to ensure satisfactory print quality.

Specifications

✔ IMPORTANT

Specifications are subject to change without notice.

NOTE

For more information on using the FAX, refer to the following:

➔ [FAX Operation Guide](#)

Machine

Item		Description
Type		Desktop
Printing Method		Electrophotography by semiconductor laser
Paper Weight	Cassette	60 to 120 g/m ²
	Multi Purpose Tray	60 to 220 g/m ² , 209.5 g/m ² (Cardstock), 136 to 163 g/m ² (Banner sheet)
Paper Type	Cassette	Plain, Rough, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, High Quality, Custom 1 to 8 (Duplex: Same as Simplex)
	Multi Purpose Tray	Plain, Transparency (OHP film), Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8
Paper Size	Cassette	A4, A5, A5 (Landscape), A6, B5, B6, Letter, Legal, Statement, Statement (Landscape), Executive, Oficio II, Folio, 216 × 340 mm, 16K, B5 (ISO), Envelope DL, Envelope C5, Oufuku Hagaki (Return postcard), Custom (105 × 148 to 216 × 356 mm)
	Multi Purpose Tray	A4, A5, A5 (Landscape), A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Statement (Landscape), Executive, Oficio II, 16K, B5 (ISO), Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Custom (70 × 148 mm to 216 × 356 mm), Banner sheet (216 × 470.1 mm to 216 × 915 mm)
Warm-up Time (22°C/71.6°F, 60%)	Power on	25 seconds or less
	Low Power Mode	10 seconds or less
	Sleep	25 seconds or less
Paper Capacity	Cassette	500 sheets (80 g/m ²)* ¹
	Multi Purpose Tray	100 sheets (80 g/m ²)

*1 Up to upper limit height line in the cassette.

Item		Description
Output Tray Capacity	Inner tray	ECOSYS M3860idnf: 250 sheets (80 g/m ²) ECOSYS M3860idn: 500 sheets (80 g/m ²)
	Finisher Tray	250 sheets (80 g/m ²)
Stapling (For ECOSYS M3860idnf)	Number of Sheets	A4/Letter: 50 sheets (80 g/m ²) Mixed Size Stapling (Legal, Foolscap, Letter): 30 sheets (80 g/m ²)
	Media types (60 - 90g/m ²)	Plain, Preprinted, Labels, Bond, Recycled, Vellum, Rough, Letterhead, Color, Prepunched, High Quality, Custom
Image Write System		Semiconductor laser and electrophotography
Memory		1024 MB
Interface	Standard	USB Interface Connector: 1 (Hi-Speed USB) Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T) USB Port: 2 (Hi-Speed USB) Fax: 1
	Option	eKUIO: 1
Operating Environment	Temperature	10 to 32.5°C/50 to 90.5°F
	Humidity	15 to 80 %
	Altitude	3,500 m/11,482 ft maximum
	Brightness	1,500 lux maximum
Dimension (W × D × H)	ECOSYS M3860idn	18.9" × 19.49" × 24.02" 480 × 495 × 610 mm
	ECOSYS M3860idnf	18.9" × 21.46" × 29.14" 480 × 545 × 740 mm
Weight (without toner container)	ECOSYS M3860idn	Approx. 61.8 lb/Approx. 28 kg
	ECOSYS M3860idnf	Approx. 86.0 lb/Approx. 39 kg
Space Required (W × D) (Using multi purpose tray)	ECOSYS M3860idn	18.9" × 26.97" 480 × 685 mm
	ECOSYS M3860idnf	18.9" × 26.97" 480 × 685 mm
Power Source	ECOSYS M3860idn	120 V Specification Model: 120 V ~ 60 Hz 10.0 A 230 V Specification Model: 220 to 240 V ~ 50/60 Hz 5.6 A
	ECOSYS M3860idnf	120 V Specification Model: 120 V ~ 60 Hz 11.3 A 230 V Specification Model: 220 to 240 V ~ 50/60 Hz 5.9 A
The power consumption of the product in networked standby (If all network ports are connected.)		The information is available at the website below. http://www.kyoceradocumentsolutions.eu/index/environment/green_products/low_power_consumption.html
Options		➔ Optional Equipment (page 11-2)

Copy Functions

Item	Description	
Copy Speed (Standard cassette)	A4 Letter Legal B5 A5 A5 (Landscape) Statement Statement (Landscape) A6	60 sheets/min 62 sheets/min 50 sheets/min 48 sheets/min 32 sheets/min 90 sheets/min 32 sheets/min 92 sheets/min 32 sheets/min
First Copy Time (A4, place on the platen, feed from Cassette)	6 seconds or less	
Zoom Level	Manual mode: 25 to 400%, 1% increments Auto mode: Preset Zoom	
Continuous Copying	1 to 999 sheets	
Resolution	600 × 600 dpi	
Supported Original Types	Sheet, Book, 3-dimensional objects (maximum original size: Legal/Folio)	
Original Feed System	Fixed	

Printer Functions

Item	Description
Printing Speed	Same as Copying Speed.
First Print Time (A4, feed from Cassette)	4.1 seconds or less
Resolution	Fast 1200, Fine 1200, 600 dpi
Operating System	Windows 7, Windows 8, Windows 8.1, Windows 10, Windows Server 2008/R2, Windows Server 2012/R2, Windows Server 2016 Mac OS 10.5 or later
Interface	USB Interface Connector: 1 (Hi-Speed USB) Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T) Optional Interface (Option): 1 (For IB-50/IB-51 mounting) Wireless LAN (Option): 1 (For IB-36 mounting)
Page Description Language	PRESCRIBE
Emulations	PCL6 (PCL-XL, PCL5e), KPDL3, XPS, Open XPS, TIFF/JPEG, IBM Proprinter, LQ-850, LinePrint

Scanner Functions

Item		Description
Resolution		600 dpi, 400 dpi, 300 dpi, 200×400 dpi, 200 dpi, 200×100 dpi
File Format		TIFF (MMR/JPEG compression), JPEG, PDF (MMR/JPEG compression), XPS, PDF/A, High compressive PDF, Encrypted PDF, OPEN XPS, MS Office ^{*1} , Searchable PDF ^{*1*2}
Scanning Speed^{*3}	(A4 landscape, 200 dpi, Image quality: Text/ Photo original)	1-sided B/W 60 Images/min Color 45 Images/min
		2-sided B/W 120 Images/min Color 90 Images/min
	(A4 landscape, 300 dpi, Image quality: Text/ Photo original)	1-sided B/W 60 Images/min Color 40 Images/min
		2-sided B/W 120 Images/min Color 80 Images/min
Interface		Ethernet (10 BASE-T/100 BASE-TX/1000 BASE-T), USB
Transmission System		SMB, SMTP, FTP, FTP over SSL, USB, TWAIN ^{*4} , WIA ^{*4} , WSD

*1 When the optional OCR Scan Activation Kit is installed.

*2 Microsoft Office 2007 or later

*3 When using the document processor (except TWAIN and WIA scanning)

*4 Available Operating System: Windows Server 2008/Windows Server 2008 R2/Windows 7/Windows 8/Windows 8.1/Windows 10/Windows Server 2012/Windows Server 2012 R2/Windows Server 2016

Document Processor

Item		Description
Supported Original Types		Sheet originals
Paper Size	Maximum	8.5" × 14" 216 × 355.6 mm (Long-sized 216 × 915 mm)
	Minimum	4.13" × 5.82" 105 mm × 148 mm
Paper Weight		1-sided: 50 to 120 g/m ² 2-sided: 50 to 120 g/m ²
Loading Capacity		100 sheets (50 to 80 g/m ²) maximum

Paper Feeder (500-sheet) (Option)

Item	Description
Paper Supply Method	Friction roller feeder (No. Sheets: 500, 80 g/m ²)
Paper Size	A4, A5, A5 (Landscape), B5, B6, Folio, Letter, Legal, Statement, Statement (Landscape), Executive, Oficio II, 16K, B5 (ISO), Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Envelope DL, Envelope C5, Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Custom (92 × 162 to 216 × 356 mm)
Supported Paper	Paper weight: 60 to 120 g/m ² Media types: Plain, Rough, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, High Quality, Custom 1 to 8
Dimensions (W) × (D) × (H)	14.97" × 16.16" × 4.77" 380 × 410 × 121 mm
Weight	8.4 lbs. or less/ 3.8 kg or less

Manual Stapler (ECOSYS M3860idn only)

Item	Description
Paper Weight	90 g/m ² or less
Number of stapled sheets*1	20 sheets (80 g/m ²) maximum, 15 sheets (90 g/m ² or less) maximum
Dimensions (W) × (D) × (H)	2.64" × 6.5" × 5.32" 67 × 165 × 135 mm
Weight	1.4 lbs. or less/ 0.6 kg or less

*1 Paper stack up to 2mm thick.



NOTE

Consult your dealer or service representative for recommended paper types.

Glossary

Accessibility

The machine is designed featuring good accessibility even for the elderly and those who are physically challenged or visually impaired. Touch panel is adjustable in two angles.

Apple Talk

AppleTalk offers file sharing and printer sharing and it also enables you to utilize application software that is on another computer on the same AppleTalk network.

Auto Form Feed Timeout

During data transmission, the machine may sometimes have to wait until receiving the next data. This is the auto form feed timeout. When the preset timeout passes, the machine automatically prints output. However, no output is performed if the last page has no data to be printed.

Auto-IP

Auto-IP is a module that enables dynamic IPv4 addresses to be assigned to a device on startup. However, DHCP requires a DHCP server. Auto-IP is a server-less method of choosing an IP address. IP addresses between 169.254.0.0 to 169.254.255.255 are reserved for Auto-IP and assigned automatically.

Auto Paper Selection

A function to automatically select paper in the same size as originals when printing.

Auto Sleep

A mode designed for electrical power saving, activated when the machine is left unused or there is no data transfer for a specific period. In Sleep mode, power consumption is kept to a minimum.

Bonjour

Bonjour, also known as zero-configuration networking, is a service that automatically detects computers, devices and services on an IP network. Bonjour, because an industry-standard IP protocol is used, allows devices to automatically recognize each other without an IP address being specified or DNS server being set. Bonjour also sends and receives network packets by UDP port 5353. If a firewall is enabled, the user must check that UDP port 5353 is left open so that Bonjour will run correctly. Some firewalls are set up so as to reject only certain Bonjour packets. If Bonjour does not run stably, check the firewall settings and ensure that Bonjour is registered on the exceptions list and that Bonjour packets are accepted. If you install Bonjour on Windows OS, the Windows firewall will be set up correctly for Bonjour.

Custom Box

The Custom Box function stores print data for each individual user on the printer and allows the user to print single or multiple copies of the stored data later using the printer's operation panel.

Default Gateway

This indicates the device, such as a computer or router, that serves as the entrance/exit (gateway) for accessing computers outside the network that you are on. When no specific gateway is designated for a destination IP address, data is sent to the host designated as the Default Gateway.

DHCP (Dynamic Host Configuration Protocol)

Dynamic Host Configuration Protocol (DHCP) that automatically resolves IP addresses, subnet masks, and gateway addresses on a TCP/IP network. DHCP minimizes the load of network management employing a large number of client computers because it relieves individual clients including printers from the IP address being assigned.

DHCP (IPv6)

DHCP (IPv6) is the next-generation of the Internet's Dynamic Host Configuration Protocol and supports IPv6. It extends the BOOTP startup protocol that defines the protocols used for transferring configuration information to hosts on the network. DHCP (IPv6) permits the DHCP server to use its expanded functionality to send configuration parameters to an IPv6 node. Because the network addresses that can be used are allocated automatically, the IPv6 node management workload is reduced in systems where the administrator has to exercise close control over IP address allocation.

dpi (dots per inch)

A unit for resolution, representing the number of dots printed per inch (25.4 mm).

EcoPrint Mode

A printing mode that helps save toner. Copies made in this mode are thus lighter than normal.

Emulation

The function to interpret and execute other printers' page description languages. The machine emulates operation of PCL6, KPDL3 (PostScript 3 compatible).

Enhanced WSD

Kyocera's proprietary web services.

FTP (File Transfer Protocol)

A protocol to transfer files on the TCP/IP network, whether the Internet or an intranet. Along with HTTP and SMTP/POP, FTP is now frequently used on the Internet.

Grayscale

A computer color expression. Displayed images of this sort are typically composed of shades of gray, varying from black at the weakest intensity to white at the strongest, without any other colors. Gray levels are displayed in numerical levels: that is, white and black only for 1 bit; 256 gray levels (including white and black) for 8 bits; and 65,536 gray levels for 16 bits.

Help

A ? (Help) key is provided on this machine's operation panel. If you are unsure of how to operate the machine, would like more information on its functions or are having problems getting the machine to work properly, press the ? (Help) key to view a detailed explanation on the touch panel.

IP Address

An Internet protocol address is a unique number that represents a specific computer or related device on the network. The format of an IP address is four sets of numbers separated by dots, e.g. 192.168.110.171. Each number should be between 0 and 255.

IPP

IPP (Internet Printing Protocol) is a standard that uses TCP/IP networks such as the Internet to enable print jobs to be sent between remote computers and printers. IPP is an extension of the HTTP protocol used to view websites and enables printing to be carried out via routers on printers in remote locations. It also supports the HTTP authentication mechanisms along with SSL server and client authentication as well as encryption.

Job Box

The Job Box function stores print data on the printer and allows users to print single or multiple copies of the stored data later using the printer's operation panel.

KPDL (Kyocera Page Description Language)

Kyocera's PostScript page description language compatible with Adobe PostScript Level 3.

Multi Purpose (MP) Tray

The paper supply tray on the front side of the machine. Use this tray instead of the cassettes when printing onto envelopes, Hagaki (Cardstock), transparencies, or labels.

NetBEUI (NetBIOS Extended User Interface)

An interface, developed by IBM in 1985, as an update from NetBIOS. It enables more advanced functions on smaller networks than other protocols such as TCP/IP, etc. It is not suitable for larger networks due to lack of routing capabilities to choose the most appropriate routes. NetBEUI has been adopted by IBM for its OS/2 and Microsoft for its Windows as a standard protocol for file sharing and printing services.

Outline font

With outline fonts, character outlines are represented with numerical expressions and fonts can be enlarged or reduced in different ways by changing the numeric values of those expressions. Printing remains clear even if you enlarge fonts, since the characters are defined with outlines represented with numerical expressions. You can specify the font size in steps of 0.25 points up to 999.75 points.

PDF/A

This is "ISO 19005-1. Document management - Electronic document file format for long-term preservation - Part 1: Use of PDF (PDF/A)", and is a file format based on PDF 1.4. It has been standardized as ISO 19005-1, and is a specialization of PDF, which has been mainly used for printing, for long-term storage. A new part, ISO 19005-2 (PDF/A-2), is currently being prepared.

POP3 (Post Office Protocol 3)

A standard protocol to receive E-mail from the server in which the mail is stored on the Internet or an intranet.

PostScript

A page description language developed by Adobe Systems. It enables flexible font functions and highly-functional graphics, allowing higher quality printing. The first version called Level 1 was launched in 1985, followed by Level 2 that enabled color printing and two-byte languages (e.g. Japanese) in 1990. In 1996, Level 3 was released as an update for the Internet access and PDF format as well as gradual improvements in implementation technologies.

PPM (prints per minute)

This indicates the number of A4 size printouts made in one minute.

Printer Driver

The software to enable you to print data created on any application software. The printer driver for the machine is contained in the DVD enclosed in the package. Install the printer driver on the computer connected to the machine.

RA(Stateless)

The IPv6 router communicates (transmits) information such as the global address prefix using ICMPv6. This information is the Router Advertisement (RA).

ICMPv6 stands for Internet Control Message Protocol, and is a IPv6 standard defined in the RFC 2463 "Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 (IPv6) Specification".

RAM Disk

Using part of the printer's memory as a virtual disk, you can set any amount of memory from overall printer memory as a RAM disk in order to use features such as electronic sorting (shortening print time).

Send as E-mail

A function to send the image data stored in the machine as an E-mail attachment. E-mail addresses can be selected from the list or entered at each time.

SMTP (Simple Mail Transfer Protocol)

A protocol for E-mail transmission over the Internet or an intranet. It is used for transferring mail between mail servers as well as for sending mail from clients to their servers.

Status Page

The page lists machine conditions, such as the memory capacity, total number of prints and scans, and paper source settings.

Subnet Mask

The subnet mask is a way of augmenting the network address section of an IP address.

A subnet mask represents all network address sections as 1 and all host address sections as 0. The number of bits in the prefix indicates the length of the network address. The term "prefix" refers to something added to the beginning and, in this context, indicates the first section of the IP address. When an IP address is written, the length of the network address is indicated by the prefix length after a forward slash (/). For example, "24" in the address "133.210.2.0/24". In this way, "133.210.2.0/24" denotes the IP address "133.210.2.0" with a 24-bit prefix (network section). This new network address section (originally part of the host address) made possible by the subnet mask is referred to as the subnet address. When you enter the subnet mask, be sure to set the "DHCP" setting to "Off".

TCP/IP (Transmission Control Protocol/Internet Protocol)

TCP/IP is a suite of protocols designed to define the way computers and other devices communicate with each other over a network.

TCP/IP (IPv6)

TCP/IP (IPv6) is based on the current Internet protocol, TCP/IP (IPv4). IPv6 is the next-generation Internet protocol and expands the available address space, which resolves the problem of the lack of addresses under IPv4, while also introducing other improvements such as additional security functionality and the capacity to prioritize data transmission.

TWAIN (Technology Without An Interesting Name)

A technical specification for connecting scanners, digital cameras, and other image equipment to computers. The TWAIN compatible devices enable you to process image data on any relevant application software. TWAIN is adopted on a large amount of graphic software (e.g. Adobe Photoshop) and OCR software.

USB (Universal Serial Bus) 2.0

A USB interface standard for Hi-Speed USB 2.0. The maximum transfer rate is 480 Mbps. This machine is equipped with USB 2.0 for high-speed data transfer.

WIA (Windows Imaging Acquisition)

A function to import images supported after Windows Me/XP from digital cameras and other peripheral devices. This function replaces what TWAIN used to do. The feature is provided as a part of Windows functions and improves ease of operation, so that you import images directly to My Computer without using any application.

Index

A

Accessibility 11-27
Address Book 3-30

- Adding 3-34
- Contact 3-34
- Editing and Deleting 3-38
- Group 3-37

Address Book/One Touch 8-24
Adjustment/Maintenance 8-52

- Print Density 8-52
- Sharpness Adjustment 8-52

AirPrint 4-11
Anti-theft Lock Slot 2-3, 2-5
Apache License (Version 2.0) 1-14
Apple Talk 11-27
Application 5-11, 8-23
Auto Color Correction 8-53
Auto Drum Refresh 8-53
Auto Error Clear 8-51
Auto Form Feed Timeout 11-27
Auto Panel Reset 8-49
Auto Paper Selection 11-27
Auto Sleep 2-39, 11-27
Auto-IP 11-27

- Settings 8-30

Automatic 2-Sided Print Function 1-17

B

Background Density Adjustment 6-19, 8-52

- Default 8-15

Bluetooth Settings 8-43
Bonjour 11-27

- Settings 8-32

C

Cables 2-12
Card Authentication Kit 11-4
Card Reader 2-10, 2-11
Cassette

- Loading Paper 3-4, 3-8
- Paper Size and Media Type 3-15, 8-8

Cassette 1 2-2, 2-4
Cassette Settings 3-15
Cassette/MP Tray Settings 8-8
Cassettes 2 to 5 2-10, 2-11
Caster kit 11-4
Character Entry Method 11-10
Checking the Counter 2-55
Checking the Remaining Amount of Toner 7-13
Cleaning 10-2

- Glass Platen 10-2
- Registration Roller 10-4
- Slit Glass 10-3

Collate/Offset 6-13
Color Selection 6-17

- Default 8-15

Combine 6-22
Command Center RX 2-58
Common Settings 8-10

- Default Screen 8-10
- Direct Printing from Web 8-20
- Display Status/Log 8-20
- Error Handling 8-18
- Function Defaults 8-15
- Function Key Assignment 8-20
- Keyboard Layout 8-19
- Low Toner Alert 8-19
- Measurement 8-18
- Message Banner Print 8-21
- Offset Documents by Job 8-19
- Offset One Page Documents 8-19
- Optional Keyboard Type 8-19
- Original Settings 8-11
- Paper Settings 8-12
- Preset Limit 8-17
- Remote Printing 8-20
- Sound 8-10

Connecting

- LAN Cable 2-13
- Power Cable 2-14
- USB cable 2-14

Connection Method 2-12
Continuous Scan 6-26

- Default 8-16
- Direct Printing from Web 8-20

Contrast 6-18, 8-52
Conventions Used in This Guide xix
Copy 5-16
Copy Settings 8-21

- Auto % Priority 8-21
- Auto Paper Selection 8-21
- Reserve Next Priority 8-21

Copy Speed 11-23
Correcting Black Line 8-53
Counting the Number of Pages Printed

- Counter 2-55
- Each Job Account 9-45
- Print Accounting Report 9-46
- Total Accounting 9-45
- Unknown ID Job 9-48

Custom Box 11-27

- Creating a New Box 5-39
- Deleting Documents 5-47
- Editing and Deleting Custom Box 5-41
- Printing Documents 5-46
- Send 5-47
- Storing Documents 5-42

D

Data Sanitization 8-46
Data Security 8-45
Date Format 8-49
Date/Time 8-49

- Date/Timer/Energy Saver 8-49
 - Auto Error Clear 8-51
 - Auto Panel Reset 8-49
 - Date Format 8-49
 - Date/Time 8-49
 - Energy Saver Recovery Level 8-50
 - Error Clear Timer 8-51
 - Low Power Timer 8-49
 - Panel Reset Timer 8-49
 - Ping Timeout 8-51
 - Power Off Rule 8-51
 - Power Off Timer 8-51
 - Sleep Level 8-49
 - Sleep Rules 8-50
 - Sleep Timer 8-50
 - Time Zone 8-49
 - Unusable Time 8-51
 - Weekly Timer Settings 8-50
 - Default Gateway 11-27
 - Settings 8-30
 - Default Screen 8-10
 - Delete after Printed 6-36
 - Density 6-15
 - Density Adjustment 8-52
 - Destination
 - Adding a Destination 3-34
 - Address Book 5-20
 - Checking and Editing 5-25
 - Confirmation Screen of Destinations 5-26
 - Dest. Check before Send 8-22
 - Entering a New E-mail Address 5-22
 - Entry Check for New Dest. 8-22
 - Multi Sending 5-28
 - One Touch Key 3-39
 - Search 5-21
 - Sort 8-24
 - Specifying a New PC Folder 5-23
 - Device 7-11
 - DHCP 11-28
 - Settings 8-30
 - DHCP (IPv6) 11-28
 - Settings 8-31
 - Display Brightness 8-53
 - Display Status/Log 8-20
 - Document Box
 - Custom Box 5-37, 5-39
 - Job Box 4-12, 5-37
 - USB Drive Box 5-37
 - What is Document Box? 5-37
 - Document Box Settings 8-23
 - Custom Box 8-23
 - Job Box 8-23
 - Polling Box 8-23
 - Sub Address Box 8-23
 - Document Processor
 - How to Load Originals 5-3
 - Loading Originals 5-3
 - Originals Not Supported by the Document Processor 5-3
 - Originals Supported by the Document Processor 5-3
 - Processor 5-3
 - Part Names 2-2
 - dpi 11-28
 - Drum Refresh 1 8-53
 - Drum Refresh 2 8-53
 - Duplex 6-24
 - Duplex (2-sided Original) 6-29
 - Duplex Cover 2-6, 2-8
- ## E
- EcoPrint 6-17, 11-28
 - Default 8-15
 - Printer 8-25
 - Edit Destination
 - Address Book 3-34
 - Address Book Defaults 8-24
 - Contact 3-34
 - Edit Restriction 8-25
 - Group 3-37
 - One Touch Key 3-39
 - E-mail Settings 2-64
 - E-mail Subject/Body 6-35
 - Default 8-16
 - Emulation 11-28
 - Selection 8-25
 - Encrypted PDF Password 6-37
 - Energy Saver Recovery Level 8-50
 - Energy Saving Control Function 1-17
 - Energy Star (ENERGY STAR®) Program 1-18
 - Enhanced VNC (RFB) over SSL
 - Protocol Settings 8-39
 - Enhanced WSD 11-28
 - Protocol Settings 8-36
 - Enhanced WSD over SSL
 - Protocol Settings 8-36
 - Enter key 2-25
 - Entry
 - File Name 6-27
 - Subject 6-35
 - Environment 1-3
 - Error Clear Timer 8-51
 - Error Handling 8-18
 - Duplexing Error 8-18
 - Finishing Error 8-18
 - Multi Originals Fed 8-18
 - No Staple Error 8-18
 - Paper Jam before Staple 8-18
 - Paper Mismatch Error 8-18
 - Wrong Size Paper Loaded 8-18
 - eSCL
 - Protocol Settings 8-37
 - eSCL over SSL
 - Protocol Settings 8-37
 - Expansion Memory 11-6
 - External Address Book
 - Default 8-24

F

- Favorites [5-6](#)
 - Editing and Deleting [5-10](#)
 - Recalling [5-9](#)
 - Registering [5-7](#)
- FAX [8-23](#)
- File
 - Format [6-31](#)
 - PDF [6-32](#)
 - Separation [6-35](#)
- File Format [6-31](#)
 - Default [8-15](#)
- File Management Utility Connection [5-33](#)
- File Name Entry [6-27](#)
 - Default [8-16](#)
- File Separation [6-35](#)
 - Default [8-15](#)
- First Copy Time [11-23](#)
- First Print Time [11-24](#)
- Front Cover [2-2, 2-4](#)
- Front Cover Open Button [2-2, 2-4](#)
- FTP [11-28](#)
- FTP Client (Transmission)
 - Protocol Settings [8-33](#)
- FTP Encrypted TX [6-36](#)
 - Default [8-16](#)
- FTP Server (Reception)
 - Protocol Settings [8-33](#)

- Function Defaults [8-15](#)
 - Background Density Adj. (Copy) [8-15](#)
 - Background Density Adj. (Send/Store) [8-15](#)
 - Collate/Offset [8-15](#)
 - Color Selection [8-15](#)
 - Continuous Scan (Copy) [8-16](#)
 - Continuous Scan (FAX) [8-16](#)
 - Continuous Scan (Send/Store) [8-16](#)
 - Detect Items to Skip (Copy) [8-17](#)
 - Detect Items to Skip (Send/Store) [8-17](#)
 - EcoPrint [8-15](#)
 - E-mail Subject/Body [8-16](#)
 - FAX TX Resolution [8-16](#)
 - File Format [8-15](#)
 - File Name Entry [8-16](#)
 - File Separation [8-15](#)
 - FTP Encrypted TX [8-16](#)
 - High Comp. PDF Image [8-17](#)
 - Image Quality [8-17](#)
 - JPEG/TIFF Print [8-16](#)
 - OCR Output Format [8-17](#)
 - OCR Text Recognition [8-17](#)
 - Original Image (Copy) [8-15](#)
 - Original Image (Send/Store) [8-15](#)
 - Original Orientation (Copy) [8-15](#)
 - Original Orientation (Send/Store) [8-15](#)
 - PDF/A [8-17](#)
 - Prevent Bleed-through (Copy) [8-15](#)
 - Prevent Bleed-through (Send/Store) [8-16](#)
 - Primary OCR Language [8-17](#)
 - Scan Resolution [8-15](#)
 - Skip Blank Page (Copy) [8-16](#)
 - Skip Blank Page (Send/Store) [8-16](#)
 - XPS Fit to Page [8-16](#)
 - Zoom [8-16](#)
- Function Key Assignment [8-20](#)
- Fuser Cover [2-6, 2-7](#)

G

- Glossary [11-27](#)
- Google Cloud Print [4-11](#)
- GPL/LGPL [1-12](#)
- Grayscale [11-28](#)
- Group Authorization Set. [9-19](#)
 - Group Authorization [9-19](#)
 - Group List [9-20](#)
- Group Authorization Settings [9-19](#)
- Guest Authorization Set. [9-22](#)
 - Guest Authorization [9-22](#)
 - Guest Property [9-23](#)
- Guides Provided with the Machine [xvi](#)

H

- Handle [2-2, 2-4](#)
- Hard Disk [11-7](#)
- Hard Disk Initialization [8-45](#)
- Help [11-28](#)
- Help Screen [2-26](#)
- High Comp. PDF Image [6-31](#)
 - Default [8-17](#)

- Home [8-21](#)
 - Customize Desktop [2-19](#)
 - Customize Taskbar [2-19](#)
 - Wallpaper [2-19](#)
- Home Screen [2-18](#)
- Host Name [8-28](#)
- HTTP
 - Protocol Settings [8-34](#)
- HTTPS
 - Protocol Settings [8-34](#)
- I**
- Image Quality [6-31](#)
 - Default [8-17](#)
- Inner Tray [2-2, 2-4](#)
- Install
 - Macintosh [2-50](#)
 - Software [2-42](#)
 - Windows [2-43](#)
- Interface Block Setting [8-43](#)
- Internet [8-24](#)
 - Proxy [8-24, 8-40](#)
- IP Address [11-28](#)
 - Settings [8-30](#)
- IP Filter (IPv4)
 - Settings [8-32](#)
- IP Filter (IPv6)
 - Settings [8-32](#)
- IPP [11-29](#)
 - Protocol Settings [8-35](#)
- IPP over SSL
 - Protocol Settings [8-35](#)
- IPSec
 - Settings [8-32](#)
- J**
- Job
 - Available Status [7-2](#)
 - Canceling [7-10](#)
 - Checking History [7-8](#)
 - Checking Status [7-2](#)
 - Detailed Information [7-7](#)
 - Detailed Information of Histories [7-9](#)
 - Details of the Status Screens [7-3](#)
 - Displaying History Screen [7-9](#)
 - Displaying Status Screens [7-2](#)
 - Pause and Resumption [7-10](#)
 - Sending the Log History [7-9](#)
- Job Accounting [9-33](#)
 - Adding an Account [9-36](#)
 - Counting the Number of Pages Printed [9-45](#)
 - Default Setting [9-44](#)
 - Deleting an Account [9-39](#)
 - Editing an Account [9-38](#)
 - Enabling Job Accounting [9-34](#)
 - FAX Driver [9-43](#)
 - Job Accounting Access [9-35](#)
 - Login [9-47](#)
 - Logout [9-47](#)
 - Overview of Job Accounting [9-33](#)
 - Print Accounting Report [9-46](#)
 - Printing [9-40](#)
 - Restricting the Use of the Machine [9-37](#)
 - TWAIN [9-41](#)
 - WIA [9-42](#)
- Job Box [11-29](#)
 - Deletion of Job Retention [8-23](#)
 - Private Print Box [4-13](#)
 - Proof and Hold Box [4-19](#)
 - Quick Copy Box [4-17](#)
 - Quick Copy Job Retention [8-23](#)
 - Specifying the Job Box from a Computer and Storing the Job [4-12](#)
 - Storage Media [8-23](#)
 - Stored Job Box [4-15](#)
- Job Finish Notice [6-26](#)
- JPEG/TIFF Print [6-38](#)
 - Default [8-16](#)
- K**
- Keyboard Layout [8-19](#)
- Knopflerfish License [1-14](#)
- KPDL [11-29](#)
- L**
- Label [11-18](#)
- LAN Cable [2-12](#)
 - Connecting [2-13](#)
- Language [8-5](#)
- LDAP
 - Protocol Settings [8-34](#)
- Left Cover [2-7, 2-9](#)
- Legal Information [1-11](#)
- Legal Restriction on Copying [1-9](#)
- Legal Restriction on Scanning [1-9](#)
- Limited Use of This Product [1-10](#)
- LINE Connector [2-6, 2-7](#)
- Loading Originals [5-2](#)
 - Loading Originals in the Document Processor [5-3](#)
 - Placing Originals on the Platen [5-2](#)
- Local Authorization [9-18](#)
- Login [2-27](#)
- Logout [2-28](#)
- Long Original [6-36](#)
- Low Power Mode [2-38](#)
- Low Power Timer [8-49](#)
- Low Toner Alert [8-19](#)

LPD

Protocol Settings [8-33](#)

M

Management [9-1](#)

Manual Setting (IPv6) [8-31](#)

Manual Stapler [2-10](#)

Manual stapler [11-4](#), [11-7](#)

Measurement [8-18](#)

Media Type Setting [8-14](#)

Mixed Size Originals [6-10](#), [6-13](#)

Mixed Size Stapling [6-15](#)

Monotype Imaging License Agreement [1-13](#)

Mopria [4-11](#)

Multi Purpose Tray [2-6](#), [2-8](#), [11-29](#)

Paper Size and Media Type [3-16](#), [8-9](#)

Multi Sending [5-28](#)

N

NetBEUI [11-29](#)

Protocol Settings [8-32](#)

Network

Preparation [2-30](#)

Settings [8-28](#)

Network Interface [2-12](#)

Network Interface Connector [2-6](#), [2-7](#)

Network Interface Kit [11-5](#)

Network Setup

Wi-Fi Direct Settings [2-36](#)

Wired Network [2-30](#)

Wireless Network [2-32](#)

New E-mail Address [5-22](#)

New PC Folder [5-23](#)

Notice [1-2](#)

O

OCR Dictionary Installation [8-46](#)

Offset Documents by Job [8-19](#)

Offset One Page Documents [8-19](#)

One Touch Key

Adding [3-39](#)

Editing and Deleting [3-40](#)

OpenSSL License [1-12](#)

Operation Panel [2-2](#), [2-4](#)

Option

Card Authentication Kit [11-4](#)

Caster kit [11-4](#)

Expansion Memory [11-6](#)

Hard Disk [11-7](#)

Manual stapler [11-4](#), [11-7](#)

Network Interface Kit [11-5](#)

Optional Keyboard [11-7](#)

Overview [11-2](#)

Paper Feeder [11-4](#)

Parallel Interface Kit [11-6](#)

Rear Tray [11-6](#)

SD Card [11-4](#)

SSD [11-5](#)

ThinPrint Option [11-7](#)

Trusted Platform Module [11-7](#)

Wireless Network Interface Kit [11-6](#)

Option Interface Slot [2-6](#), [2-7](#)

Optional Applications [11-8](#)

Optional Function [8-47](#)

Optional Keyboard [11-7](#)

Optional Keyboard Type [8-19](#)

Optional Memory [8-44](#)

Optional Network

Basic [8-41](#)

Wireless Network [8-40](#)

Original

Auto Detect Original Size (DP) [8-11](#)

Custom Original Size [8-11](#)

Default Original Size [8-11](#)

Settings [8-11](#)

Original eject table [2-2](#), [2-4](#)

Original Image [6-16](#), [8-15](#)

Default [8-15](#)

Original Orientation [6-12](#)

Original Orientation (Copy)

Default [8-15](#)

Original Orientation (Send/Store)

Default [8-15](#)

Original Settings [8-11](#)

Original Size [6-10](#)

Original Size Indicator Plates [2-2](#), [2-4](#)

Original SSLeay License [1-12](#)

Original Stopper [2-2](#), [2-4](#), [5-5](#)

Original Table [2-2](#), [2-4](#)

Original Width Guides [2-2](#), [2-4](#)

Outline font [11-29](#)

P

Panel Reset Timer [8-49](#)

Paper

- Checking the Remaining Amount of Paper [7-13](#)
- Appropriate Paper [11-14](#)
- Cassette [8-8](#)
- Custom Paper Size [8-12](#)
- Default Paper Source [8-13](#)
- Loading Cardstock [3-14](#)
- Loading Envelopes [3-14](#)
- Loading Paper [3-2](#)
- Loading Paper in the Cassettes [3-4](#)
- Loading Paper in the Multi Purpose Tray [3-11](#)
- Loading Statement in the Cassettes [3-8](#)
- Media for Auto [8-13](#)
- Media Type Setting [8-13](#)
- Multi Purpose Tray [8-9](#)
- Paper Settings [8-12](#)
- Precaution for Loading Paper [3-3](#)
- Size and Media Type [3-15, 8-8, 11-13](#)
- Special Paper [11-17](#)
- Special Paper Action [8-13](#)
- Specifications [11-13](#)
- Weight [8-14](#)

Paper Feed Mode [8-27](#)

Paper Feeder [11-4](#)

Paper Jams [10-31](#)

- Cassettes 1 to 5 [10-33](#)
- Document Processor [10-38](#)
- Duplex Unit [10-34](#)
- Finisher tray [10-37](#)
- Inner Tray [10-36](#)
- Inside Rear Cover [10-36](#)
- Inside the Machine [10-35](#)
- Jam Location Indicators [10-31](#)
- Multi Purpose Tray [10-32](#)
- Paper Jam before Staple [8-18](#)

Paper Length Guide [2-6, 2-8, 3-5, 3-8](#)

Paper Output [6-14, 8-17](#)

Paper Selection [6-11](#)

Paper Settings [8-12](#)

Paper Stopper [2-2, 2-4, 2-10, 2-11, 3-17](#)

Paper Width Guides [2-6, 2-8, 3-5, 3-8](#)

Parallel Interface Kit [11-6](#)

Part Names [2-2](#)

PDF/A [6-31, 11-29](#)

- Default [8-17](#)

PIN Code Authorization [9-31](#)

Ping [8-39](#)

Platen [2-2, 2-4](#)

POP3 [11-29](#)

POP3 (E-mail RX)

- Protocol Settings [8-33](#)

PostScript [11-29](#)

Power Cable

- Connecting [2-14](#)

Power Management [1-17](#)

Power Off [2-15](#)

Power Off Rule [8-51](#)

Power Off Timer [8-51](#)

Power On [2-15](#)

Power Switch [2-2, 2-4](#)

PPM [11-29](#)

- Precaution for Loading Paper [3-3](#)
- Precautions for Use [1-4](#)
- Preset Limit [8-17](#)
- Prevent Bleed-through
 - Default [8-15](#)
- Prevent Bleed-through [6-19](#)
- Primary Network (Client) [8-40, 8-42](#)
- Print Density [8-52](#)
- Print Settings [4-9](#)
- Printer [8-25](#)
 - Auto Cassette Change [8-27](#)
 - Copies [8-26](#)
 - CR Action [8-26](#)
 - Duplex [8-26](#)
 - EcoPrint [8-25](#)
 - Emulation [8-25](#)
 - Form Feed TimeOut [8-26](#)
 - Job Name [8-26](#)
 - KIR [8-27](#)
 - LF Action [8-26](#)
 - MP Tray Priority [8-26](#)
 - Orientation [8-26](#)
 - Override A4/Letter [8-26](#)
 - Paper Feed Mode [8-27](#)
 - Paper Output [8-26](#)
 - Print setting [4-9](#)
 - Printing Job Terminator [8-27](#)
 - Resolution [8-27](#)
 - User Name [8-26](#)
 - Wide A4 [8-26](#)
- Printer Driver [11-30](#)
 - Help [4-10](#)
- Printing Documents Stored in Removable USB Drive [5-50](#)
- Printing from PC [4-2](#)
- Printing Speed [11-24](#)
- Priority Override [6-27](#)
- Product Library [xvii](#)
- Proxy [8-40](#)

Q

- Quick No. Search key [2-25](#)
- Quick Setup Wizard [2-40](#)
- Quiet Mode [6-27](#)
- Quiet Mode Settings [8-52](#)

R

- RA (Stateless) [11-30](#)
 - Settings [8-31](#)
- RAM Disk [11-30](#)
- RAM Disk Setting [8-44](#)
- RAW Port
 - Protocol Settings [8-35](#)
- Rear Cover 1 [2-3, 2-5](#)
- Rear Tray [2-10, 2-11, 11-6](#)
- Recycled Paper [11-20](#)
- Regarding Trade Names [1-11](#)
- Registration Roller [2-7, 2-9](#)

Regular Maintenance [10-2](#)
 Toner Container Replacement [10-6](#)
 Waste Toner Box Replacement [10-10](#)
 Remote Operation
 Settings [8-48](#)
 Remote Printing [8-20](#)
 Report [8-5](#)
 Admin Report Settings [8-6](#)
 Report Print [8-5](#)
 Result Report Settings [8-7](#)
 Sending Log History [8-7](#)
 Report Print
 Accounting Report [8-6](#)
 Font List [8-6](#)
 Network Status [8-6](#)
 Optional Network Status [8-6](#)
 Service Status [8-6](#)
 Status Page [8-5](#)
 Resolution [6-35](#), [8-27](#), [11-23](#), [11-24](#)
 Resource Saving - Paper [1-17](#)
 Responding to Messages [10-19](#)
 REST
 Protocol Settings [8-37](#)
 REST over SSL
 Protocol Settings [8-38](#)
 Restart [8-44](#)
 Restart Network [8-40](#)

S

Safety Conventions in This Guide [1-2](#)
 Saving Documents to USB Drive [5-52](#)
 Scan Resolution [6-35](#)
 Default [8-15](#)
 Scan to Folder Setup Tool for SMB [3-30](#)
 SD Card [11-4](#)
 Security Level [8-43](#)
 Security Precautions when Using Wireless LAN [1-9](#)
 Send and Forward [8-22](#)
 Send as E-mail [5-18](#)
 Send Result Report [8-7](#)
 Send Settings [8-22](#)
 Broadcast [8-22](#)
 Color TIFF Compression [8-22](#)
 Default Screen [8-22](#)
 Dest. Check before Send [8-22](#)
 Entry Check for New Dest. [8-22](#)
 New Destination Entry [8-22](#)
 OCR Text Recognition Action [8-22](#)
 Recall Destination [8-22](#)
 Send and Forward [8-22](#)
 Send to Folder (FTP) [5-18](#)
 Send to Folder (SMB) [5-18](#)
 Sending [5-18](#)
 Preparation for Sending a Document to a PC [3-18](#)
 Sending Size [6-30](#)
 Service Setting [8-53](#)
 Setting Date and Time [2-29](#)
 Sharpness [6-18](#)
 Shortcuts [5-14](#)
 Adding [5-14](#)
 Editing and Deleting Shortcuts [5-15](#)
 Simple Login [2-28](#)
 Simple Login Settings
 Simple Login [9-27](#)
 Simple Login Setup [9-28](#)
 Size Dial [2-6](#), [2-8](#)
 Skip Blank Page [6-28](#)
 Sleep [2-38](#)
 Sleep Level [2-39](#), [8-49](#)
 Sleep Rules [2-39](#), [8-50](#)
 Sleep Timer [8-50](#)
 Slit Glass [2-2](#), [2-4](#)
 SMB Client (Transmission)
 Protocol Settings [8-33](#)
 SMTP [11-30](#)
 SMTP (E-mail TX)
 Protocol Settings [8-33](#)
 SNMPv1/v2c
 Protocol Settings [8-34](#)
 SNMPv3
 Protocol Settings [8-34](#)
 Solving Malfunctions [10-14](#)
 Sound [8-10](#)
 Specifications [11-21](#)
 Copy Functions [11-23](#)
 Document Processor [11-25](#)
 Machine [11-21](#)
 Manual Stapler [11-26](#)
 Paper Feeder (500-sheet) (Option) [11-26](#)
 Scanner Functions [11-25](#)
 Specifying Destination [5-20](#)
 SSD [11-5](#)
 SSD Initialization [8-45](#)
 SSL [8-39](#)
 Staple [6-14](#)
 Status Page [11-30](#)
 Status/Job Cancel [7-1](#)
 Storing Size [6-37](#)
 Subnet Mask [11-30](#)
 Settings [8-30](#)
 Supplies
 Checking the Remaining Amount [7-13](#)
 Symbols [1-2](#)

- System Menu 8-2
 - Address Book/One Touch 8-24
 - Adjustment/Maintenance 8-52
 - Application 8-23
 - Cassette/MP Tray Settings 8-8
 - Common Settings 8-10
 - Copy 8-21
 - Date/Timer/Energy Saver 8-49
 - Document Box 8-23
 - FAX 8-23
 - Home 2-18
 - Internet 8-24
 - Language 8-5
 - Operation Method 8-2
 - Printer 8-25
 - Quick Setup Wizard 2-40
 - Report 8-5
 - Send 8-22
 - System/Network 8-28
 - User Login/Job Accounting 8-25
 - User Property 8-7, 9-11
- System/Network 8-28
 - Bluetooth Settings 8-43
 - Data Security 8-45
 - FAX Server Settings 8-47
 - Interface Block Setting 8-43
 - Network 8-28
 - OCR Dictionary Installation 8-46
 - Optional Function 8-47
 - Optional Memory 8-44
 - Optional Network 8-40
 - Primary Network (Client) 8-40, 8-42
 - RAM Disk Setting 8-44
 - Remote Operation 8-48
 - Restart 8-44
 - Security Level 8-43

T

- TCP/IP 11-30
 - Settings 8-30, 8-31
- TCP/IP (IPv4)
 - Settings 2-30, 8-30
- TCP/IP (IPv6) 11-28
 - Settings 8-31
- TEL Connector 2-6, 2-7
- ThinPrint
 - Protocol Settings 8-36
- ThinPrint Option 11-7
- ThinPrint over SSL
 - Protocol Settings 8-36
- Time Zone 8-49
- Toner Container 2-7, 2-9
- Toner Container Lock Lever 2-7, 2-9
- Toner Container Replacement 10-6
- Toner Save Level (EcoPrint) 8-52
- Touch Panel 2-18
- Tray Extension 2-6, 2-8
- Troubleshooting 10-14
- Trusted Platform Module 11-7

- TWAIN 11-31
 - Scanning using TWAIN 5-32
 - Setting TWAIN Driver 2-52

U

- USB 11-31
- USB Cable
 - Connecting 2-14
- USB Drive
 - Printing 5-50
 - Remove 5-54
 - Save 5-52
- USB Interface 2-12
- USB Interface Connector 2-6, 2-7
- USB Memory Slot 2-2, 2-4
- User Login Administration 9-2
 - Adding a User 9-6
 - Changing User Properties 9-9
 - Enabling User Login Administration 9-3
 - FAX Driver 9-17
 - Group Authorization Settings 9-19
 - Guest Authorization Set. 9-22
 - ID Card Settings 9-30
 - Local Authentication 9-18
 - Login 2-27
 - Logout 2-28
 - Obtain NW User Property 9-25
 - Overview of User Login Administration 9-2
 - Password Policy Settings 9-5
 - PIN Code Authentication 9-31
 - Printing 9-13
 - Simple Login Settings 9-27
 - TWAIN 9-15
 - User Account Lockout Setting 9-4
 - WIA 9-16
- User Login/Job Accounting 8-25
 - Job Accounting 9-33
 - Unknown ID Job 9-48
 - Unknown User Settings 9-48
 - User Login 9-2
- User Property 8-7

V

- VNC (RFB)
 - Protocol Settings 8-38
- VNC (RFB) over SSL
 - Protocol Settings 8-38

W

- Waste Toner Box 2-7, 2-9
- Waste Toner Box Replacement 10-10
- Weekly Timer Settings 8-50
- WIA 11-31
 - Setting WIA Driver 2-54
- Wi-Fi
 - Settings 2-32, 8-28
- Wi-Fi Direct
 - Printing 4-11
 - Settings 2-36, 8-28

Wireless Connection [1-9](#)
Wireless Network
 Settings [2-32](#), [8-40](#)
Wireless Network Interface Kit [11-6](#)
WSD Print
 Protocol Settings [8-33](#)
WSD Scan [5-30](#)
 Protocol Settings [8-33](#)

X

XPS Fit to Page [6-38](#)
 Default [8-16](#)

Z

Zoom [6-20](#)
 Default [8-16](#)

**QUALITY
CERTIFICATE**

This machine has passed
all quality controls and
final inspection

KYOCERA Document Solutions America, Inc.**Headquarters**

225 Sand Road,
Fairfield, New Jersey 07004-0008, USA
Phone: +1-973-808-8444
Fax: +1-973-882-6000

Latin America

8240 NW 52nd Terrace, Suite 301
Miami, Florida 33166, USA
Phone: +1-305-421-6640
Fax: +1-305-421-6666

KYOCERA Document Solutions Canada, Ltd.

6120 Kestrel Rd., Mississauga, ON L5T 1S8,
Canada
Phone: +1-905-670-4425
Fax: +1-905-670-8116

KYOCERA Document Solutions**Mexico, S.A. de C.V.**

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco
Chapultepec, Delegacion Miguel Hidalgo,
Ciudad de Mexico, C.P. 11560
Phone: +52-555-383-2741
Fax: +52-555-383-7804

KYOCERA Document Solutions Brazil, Ltda.

Alameda África, 545, Pólo Empresarial Consbrás,
Tamboré, Santana de Parnaíba, State of São Paulo, CEP
06543-306, Brazil
Phone: +55-11-2424-5353
Fax: +55-11-2424-5304

KYOCERA Document Solutions Chile SpA

Jose Ananias 505, Macul. Santiago, Chile
Phone: +56-2-2670-1900
Fax: +56-2-2350-7150

KYOCERA Document Solutions**Australia Pty. Ltd.**

Level 3, 6-10 Talavera Road North Ryde N.S.W, 2113,
Australia
Phone: +61-2-9888-9999
Fax: +61-2-9888-9588

KYOCERA Document Solutions**New Zealand Ltd.**

Ground Floor, 19 Byron Avenue, Takapuna, Auckland,
New Zealand
Phone: +64-9-415-4517
Fax: +64-9-415-4597

KYOCERA Document Solutions Asia Limited

13/F., Mita Centre, 552-566, Castle Peak Road Tsuen Wan,
New Territories, Hong Kong
Phone: +852-2496-5678
Fax: +852-2610-2063

KYOCERA Document Solutions**(China) Corporation**

8F, No. 288 Nanjing Road West, Huangpu District,
Shanghai, 200003, China
Phone: +86-21-5301-1777
Fax: +86-21-5302-8300

KYOCERA Document Solutions**(Thailand) Corp., Ltd.**

335 Ratchadapisek Road, Wongsawang, Bangsue,
Bangkok 10800,
Thailand
Phone: +66-2-586-0333
Fax: +66-2-586-0278

KYOCERA Document Solutions**Singapore Pte. Ltd.**

12 Tai Seng Street #04-01A,
Luxasia Building, Singapore 534118
Phone: +65-6741-8733
Fax: +65-6748-3788

KYOCERA Document Solutions**Hong Kong Limited**

16/F., Mita Centre, 552-566, Castle Peak Road Tsuen Wan,
New Territories, Hong Kong
Phone: +852-3582-4000
Fax: +852-3185-1399

KYOCERA Document Solutions**Taiwan Corporation**

6F., No.37, Sec. 3, Minquan E. Rd.,
Zhongshan Dist., Taipei 104, Taiwan R.O.C.
Phone: +886-2-2507-6709
Fax: +886-2-2507-8432

KYOCERA Document Solutions Korea Co., Ltd.

#10F Daewoo Foundation Bldg 18, Toegye-ro, Jung-gu,
Seoul, Korea
Phone: +822-6933-4050
Fax: +822-747-0084

KYOCERA Document Solutions**India Private Limited**

Second Floor, Centrum Plaza, Golf Course Road,
Sector-53, Gurgaon, Haryana 122002, India
Phone: +91-0124-4671000
Fax: +91-0124-4671001

KYOCERA Document Solutions Europe B.V.

Bloemlaan 4, 2132 NP Hoofddorp,
The Netherlands
Phone: +31(0)20-654-0000
Fax: +31(0)20-653-1256

KYOCERA Document Solutions Nederland B.V.

Beechavenue 25, 1119 RA Schiphol-Rijk,
The Netherlands
Phone: +31-20-5877200
Fax: +31-20-5877260

KYOCERA Document Solutions (U.K.) Limited

Eldon Court, 75-77 London Road,
Reading, Berkshire RG1 5BS,
United Kingdom
Phone: +44-118-931-1500
Fax: +44-118-931-1108

KYOCERA Document Solutions Italia S.p.A.

Via Monfalcone 15, 20132, Milano, Italy,
Phone: +39-02-921791
Fax: +39-02-92179-600

KYOCERA Document Solutions Belgium N.V.

Sint-Martinusweg 199-201 1930 Zaventem,
Belgium
Phone: +32-2-7209270
Fax: +32-2-7208748

KYOCERA Document Solutions France S.A.S.

Espace Technologique de St Aubin
Route de l'Orme 91195 Gif-sur-Yvette CEDEX,
France
Phone: +33-1-69852600
Fax: +33-1-69853409

KYOCERA Document Solutions Espana, S.A.

Edificio Kyocera, Avda. de Manacor No.2,
28290 Las Matas (Madrid), Spain
Phone: +34-91-6318392
Fax: +34-91-6318219

KYOCERA Document Solutions Finland Oy

Atomitie 5C, 00370 Helsinki,
Finland
Phone: +358-9-47805200
Fax: +358-9-47805212

KYOCERA Document Solutions**Europe B.V., Amsterdam (NL) Zürich Branch**

Hohlstrasse 614, 8048 Zürich,
Switzerland
Phone: +41-44-9084949
Fax: +41-44-9084950

**KYOCERA Bilgitas Document Solutions
Turkey A.S.**

Altunizade Mah. Prof. Fahrettin Kerim Gökay Cad. No:45
34662 ÜSKÜDAR İSTANBUL, TURKEY
Phone: +90-216-339-0020
Fax: +90-216-339-0070

**KYOCERA Document Solutions
Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch,
Germany
Phone: +49-2159-9180
Fax: +49-2159-918100

KYOCERA Document Solutions Austria GmbH

Wienerbergstraße 11, Turm A, 18. OG, 1100 Wien,
Austria
Phone: +43-1-863380
Fax: +43-1-86338-400

KYOCERA Document Solutions Nordic AB

Borgarfjordsgatan 11, 164 40 Kista, Sweden
Phone: +46-8-546-550-00
Fax: +46-8-546-550-10

KYOCERA Document Solutions Norge Nuf

Olaf Helsetsv. 6, 0619 Oslo, Norway
Phone: +47-22-62-73-00
Fax: +47-22-62-72-00

KYOCERA Document Solutions Danmark A/S

Ejby Industrivej 60, DK-2600 Glostrup,
Denmark
Phone: +45-70223880
Fax: +45-45765850

KYOCERA Document Solutions Portugal Lda.

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa,
Portugal
Phone: +351-21-843-6780
Fax: +351-21-849-3312

KYOCERA Document Solutions**South Africa (Pty) Ltd.**

KYOCERA House, Hertford Office Park,
90 Bekker Road (Cnr. Allandale), Midrand, South Africa
Phone: +27-11-540-2600
Fax: +27-11-466-3050

KYOCERA Document Solutions Russia LLC.

Building 2, 51/4, Schepkina St., 129110, Moscow,
Russia
Phone: +7(495)741-0004
Fax: +7(495)741-0018

KYOCERA Document Solutions Middle East

Dubai Internet City, Bldg. 17,
Office 157 P.O. Box 500817, Dubai,
United Arab Emirates
Phone: +971-04-433-0412

KYOCERA Document Solutions Czech, s.r.o.

Harfa Office Park, Českomoravská 2420/15, Praha 9
Phone: +420-222-562-246

KYOCERA Document Solutions Inc.

2-28, 1-chome, Tamatsukuri, Chuo-ku
Osaka 540-8585, Japan
Phone: +81-6-6764-3555

<http://www.kyoceradocumentsolutions.com>

